TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10551 Installation Instructions

Cold Air Intake for Silverado & Sierra 1500 4WD (2014-2018)

Part number: 10551

trailfortress.com/cold-air-intake-silverado-sierra-1500-4wd-rough-country-10551

Scan for fitment, price and install help

921105510

ROUGH COUNTRY SUSPENSION SYSTEMS®

2014-2018 5.3L/6.2L CHEVROLET/GMC COLD AIR INTAKE KIT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.


If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.


⚠ NOTICE **NOT FOR SALE IN CALIFORNIA.**

KIT CONTENTS:	HARDWARE INCLUDED:	TOOLS NEEDED:
Rough Country Performance Filter	4-Meduim Clamps	Flat Head screwdriver
Heat shield	1-Large Clamp	10mm Socket
Shield gasket	2-Button Head Bolts	13mm Socket
Filter coupler	2-Phillips Screws	5/16” Socket
Flex Coupler		1/4” Ratchet
2-Crank Case Hose		1/4” Extension
Throttle Body Adapter 5.3L		
Throttle Body Adapter (Larger ID) 6.2L		
Intake Tube		

INSTALLATION INSTRUCTIONS

1. Remove the PVC valve hoses from the valve covers as shown in **Photo 1 & 2**.

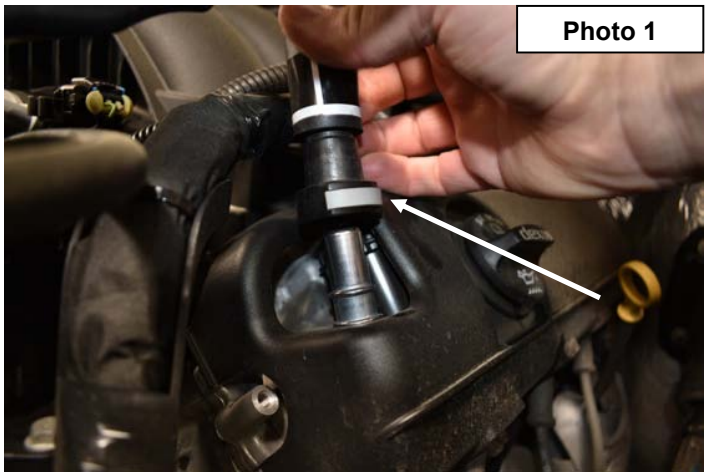

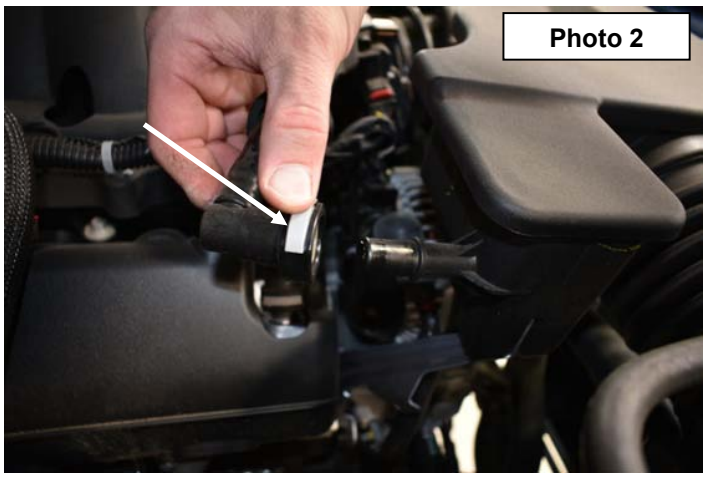

2. Unplug the Air flow sensor as shown in **Photo 3**.
3. Remove from Air flow sensor wiring loom from the housing as shown in **Photo 4.**



