Rough Country 10552 Installation Instructions

Cold Air Intake for Jeep Cherokee XJ (1991-2001)

Part number: 10552

trailfortress.com/cold-air-intake-jeep-cherokee-xj-rough-country-10552

Scan for fitment, price and install help

921105520

ROUGH COUNTRY SUSPENSION SYSTEMS®

91-01 JEEP XJ 4.0L COLD AIR INTAKE KIT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

⚠NOTICE NOT FOR SALE IN CALIFORNIA.

KIT CONTENTS:	HARDWARE INCLUDED:	TOOLS NEEDED:
Rough Country Performance Filter	6” Hose Clamp	Flat Head screwdriver
Heat shield	4-3” Hose Clamps	10mm Socket
Shield gasket	5/8” Hose	13mm Socket
Filter coupler	2-Small Hose Clamps	5/16” Socket
Flex Coupler	1-8mm Bolt	1/4” Ratchet
Crank Case Hose	1-8mm Washer	1/4” Extension
Throttle Body adapter		
Intake Tube		
90 Coupler		

INSTALLATION INSTRUCTIONS

1. Place the vehicle in park.
2. Remove the stock air hose from the intake using a flat head screwdriver. **See Photo 1.**
3. Remove the hose from the valve cover. **See Photo 2.**

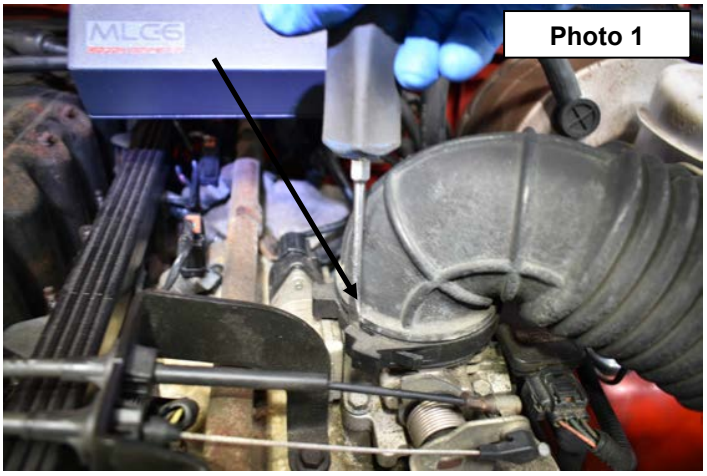

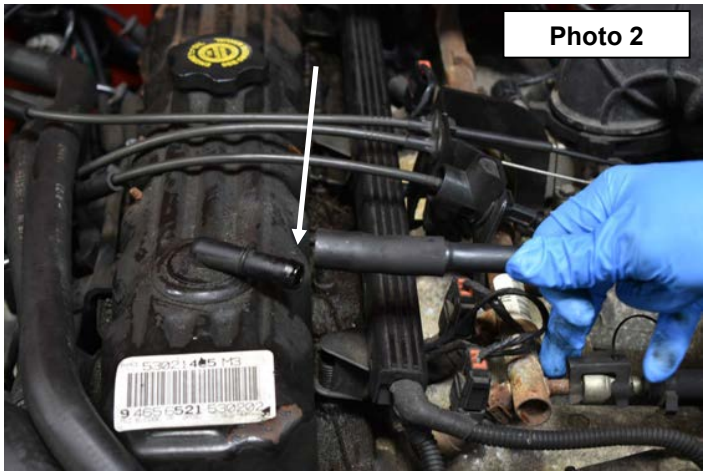

4. Remove the top of the air box by unclipping clips as shown in **Photo 3** and remove the assembly from the vehicle. **See Photo 4.**

