# Rough Country 10552PF Installation Instructions

Cold Air Intake with Pre-Filter for Cherokee XJ (1991-2001)

Part number: 10552PF

trailfortress.com/cold-air-intake-cherokee-xj-rough-country-10552pf

Scan for fitment, price and install help

921105520

# ROUGH COUNTRY SUSPENSION SYSTEMS®

# 91-01 JEEP XJ 4.0L COLD AIR INTAKE KIT

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

**⚠NOTICE NOT FOR SALE IN CALIFORNIA.**

| KIT CONTENTS: | HARDWARE INCLUDED: | TOOLS NEEDED: |
|---|---|---|
| Rough Country Performance Filter | 6” Hose Clamp | Flat Head screwdriver |
| Heat shield | 4-3” Hose Clamps | 10mm Socket |
| Shield gasket | 5/8” Hose | 13mm Socket |
| Filter coupler | 2-Small Hose Clamps | 5/16” Socket |
| Flex Coupler | 1-8mm Bolt | 1/4” Ratchet |
| Crank Case Hose | 1-8mm Washer | 1/4” Extension |
| Throttle Body adapter | | |
| Intake Tube | | |
| 90 Coupler | | |

## INSTALLATION INSTRUCTIONS

1. Place the vehicle in park.
2. Remove the stock air hose from the intake using a flat head screwdriver. **See Photo 1.**
3. Remove the hose from the valve cover. **See Photo 2.**

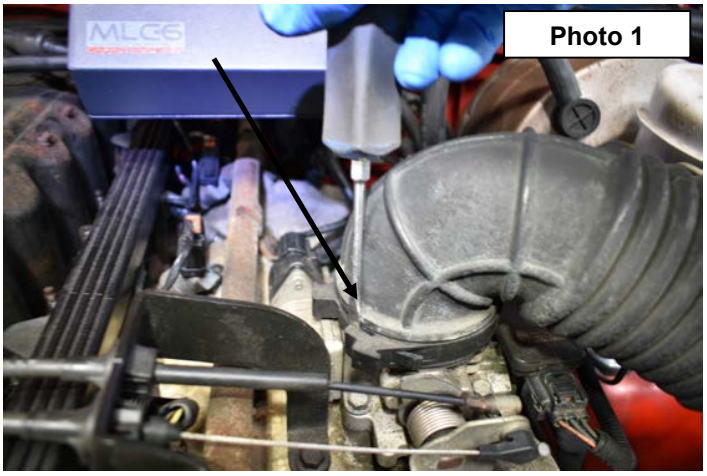


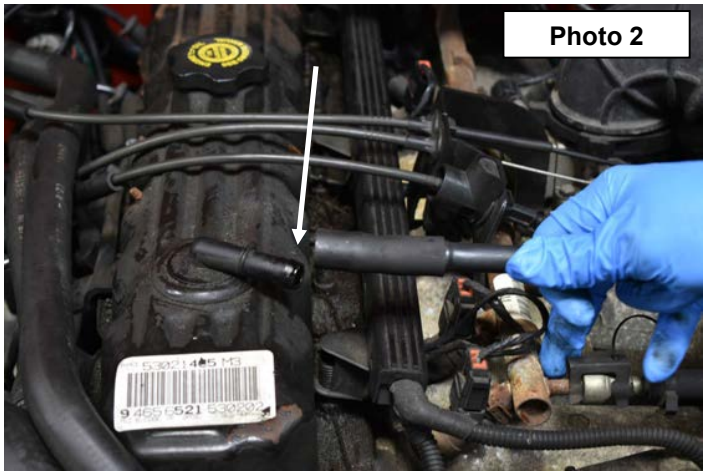


4. Remove the top of the air box by unclipping clips as shown in **Photo 3** and remove the assembly from the vehicle. **See Photo 4.**

