Rough Country 10553 Installation Instructions

Cold Air Intake for Jeep Wrangler TJ 4.0L (1997-2006)

Part number: 10553

trailfortress.com/cold-air-intake-jeep-wrangler-tj-4-0l-rough-country-10553

Scan for fitment, price and install help

921105530

ROUGH COUNTRY SUSPENSION SYSTEMS®

97-06 JEEP TJ 4.0L COLD AIR INTAKE KIT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

⚠ NOTICE NOT FOR SALE IN CALIFORNIA.





TOOLS NEEDED:

Flat Head screwdriver	1/4" Extension
10mm Socket	3/4" Drill Bit
7/16" Socket	Drill Motor
1/4" Ratchet	4mm Allen Wrench
	5mm Allen Wrench

INSTALLATION INSTRUCTIONS

1. Place the vehicle in park.
2. Disconnect the positive wire from the battery**.**
3. Disconnect the breather tube from the throttle body using a flat head screwdriver. **See Photo 1.**
4. Remove the crank case breather hose from the breather tube. **See Photo 2.**

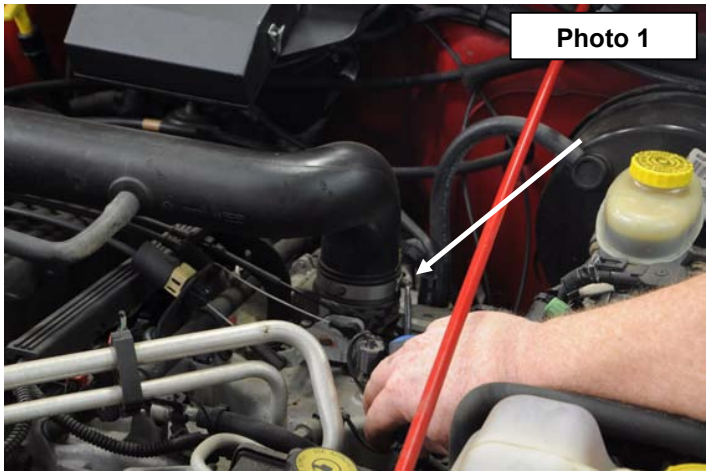

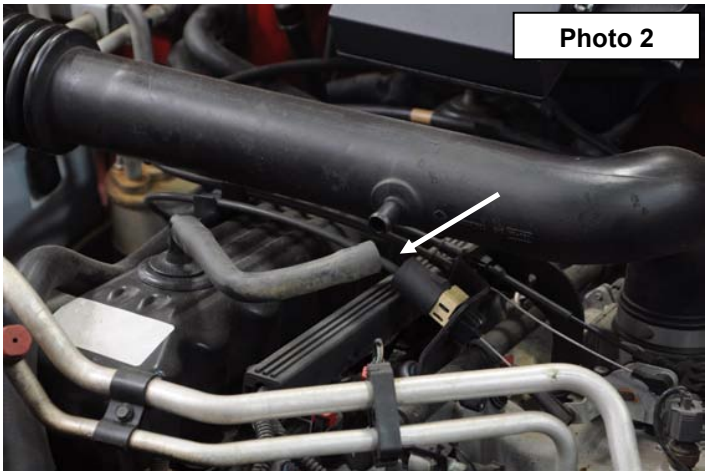

5. Remove the breather tube from the air box using flat head screwdriver. **See Photo 3.** If equipped, remove the Temp sensor from the stock tube by turning it counter clock wise.
6. Unclip the top of the filter box and remove the top of the air box. **See Photo 4.**

