TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10553PF Installation Instructions

Cold Air Intake with Pre-Filter for Wrangler TJ 4.0L (1997-2006)

Part number: 10553PF

trailfortress.com/cold-air-intake-wrangler-tj-4-0l-rough-country-10553pf

Scan for fitment, price and install help

921105530

ROUGH COUNTRY SUSPENSION SYSTEMS®

97-06 JEEP TJ 4.0L COLD AIR INTAKE KIT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.



⚠ NOTICE **NOT FOR SALE IN CALIFORNIA.**

TOOLS NEEDED:

Flat Head screwdriver	**1/4" Extension**
10mm Socket	**3/4" Drill Bit**
7/16" Socket	**Drill Motor**
1/4" Ratchet	**4mm Allen Wrench**
	5mm Allen Wrench

INSTALLATION INSTRUCTIONS

1. Place the vehicle in park.
2. Disconnect the positive wire from the battery**.**
3. Disconnect the breather tube from the throttle body using a flat head screwdriver. **See Photo 1.**
4. Remove the crank case breather hose from the breather tube. **See Photo 2.**

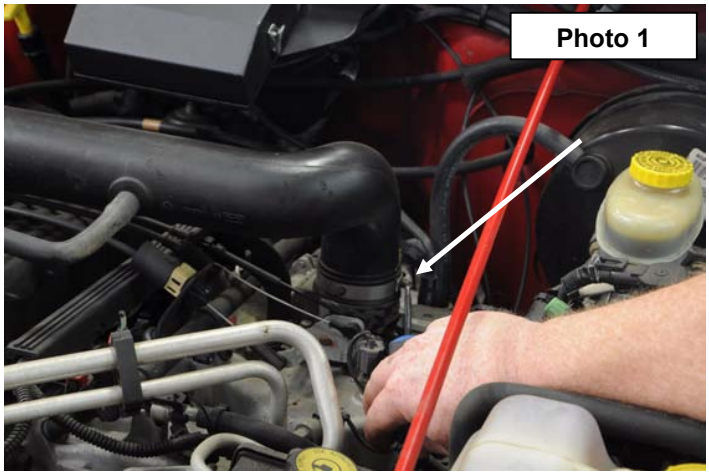

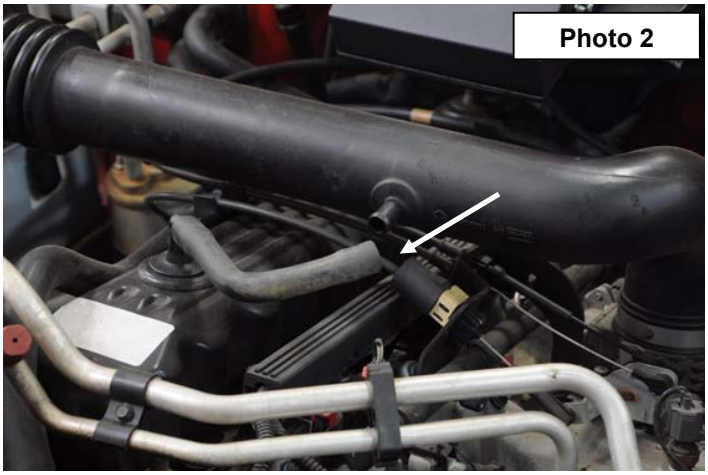

5. Remove the breather tube from the air box using flat head screwdriver. **See Photo 3.** If equipped, remove the Temp sensor from the stock tube by turning it counter clock wise.
6. Unclip the top of the filter box and remove the top of the air box. **See Photo 4.**

