TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10555 Installation Instructions

5.0L Cold Air Intake for 2015–2020 Ford F-150

Part number: 10555

trailfortress.com/5-0l-cold-air-intake-ford-f150-rough-country-10555

Scan for fitment, price and install help

921105550

ROUGH COUNTRY
SUSPENSION SYSTEMS®

2015-2019 FORD 150 5.0L COLD AIR INTAKE KIT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. .

⚠NOTICE **NOT FOR SALE IN CALIFORNIA.**

KIT CONTENTS:

Performance Filter
Heat shield
Shield gasket
Throttle Body coupler
Intake Tube

TOOLS NEEDED:

Utility Knife
Flat Head Screwdriver
4mm Allen Wrench



HARDWARE INCLUDED:

1-Large Clamp
4-Small Clamps
1-Filter Adapter
1-Flexible filter boot
4-6mm x 11mm Button Head Bolts
6-6mm Flat Washers
4-6mm Lock Nuts
2-6mm x 15mm Button Head Bolts
2-6mm Lock Washers

INSTALLATION INSTRUCTIONS

1. Remove the wire loom from the intake tube body as show in **Photo 1**.
2. Remove the PCV hose from the intake tube. **See Photo 2**.

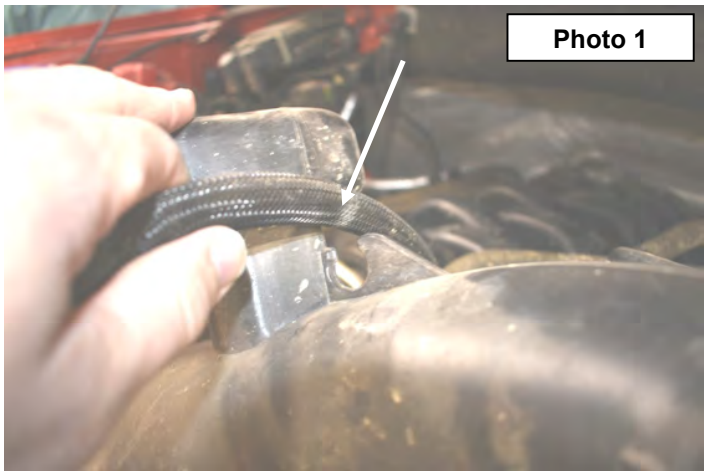



3. Remove the rubber vent hose from the throttle body tube. **See Photo 3.**
4. Loosen the intake pipe clamp using a flat head screwdriver. Remove tube from the filter housing top. **See Photo 4**.

