Rough Country 10582 Installation Instructions

10582

Part number: 10582

trailfortress.com/rough-country-lower-door-armor-10582

Scan for fitment, price and install help

921105820

ROUGH COUNTRY SUSPENSION SYSTEMS®

10582BAG1

JEEP 1984-01 CHEROKEE XJ Lower Door Body Armor

Thank you for choosing Rough Country for all your vehicle needs.
Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Check and retighten wheels at 50 miles and again at 500 miles. Periodically check all hardware for tightness.

⚠NOTICE **Only** fits 4-door models.

KIT CONTENTS:
1-Front Drivers Side Door Armor
1-Front Passengers Side Door Armor
1-Rear Drivers Side Door Armor
1-Rear Derivers Side Door Armor

TOOLS NEEDED:
4MM Allen Wrench
Drill Motor
1/4" Drill
25/64" or W size Drill

HARDWARE INCLUDED:
28-1/4-20 x 3/4 BHCS
14-1/4-20 Nuts
14-1/4-20 Blind Nutsert
1-1/4X1" BOLT
1-1/4" WASHER
1-5/16 NUT

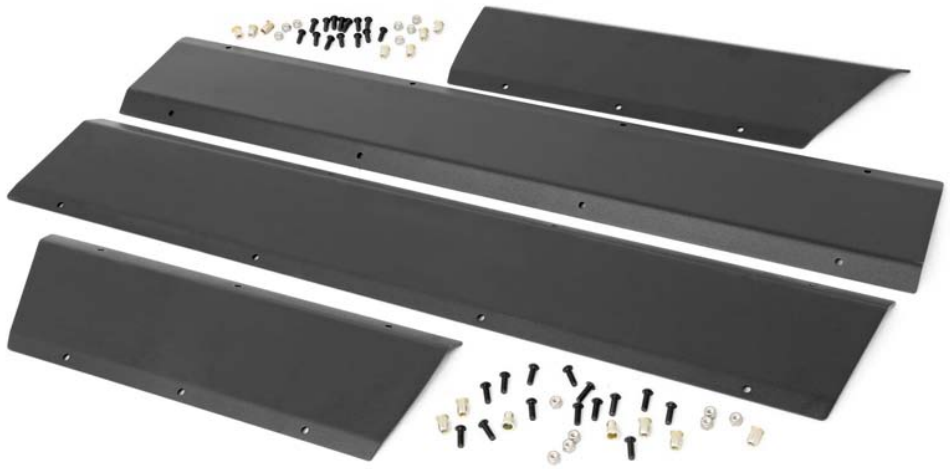

Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs