TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10621 Installation Instructions

Forged Front Track Bar for Jeep Grand Cherokee 4WD (1999-2004)

Part number: 10621

trailfortress.com/forged-front-track-bar-jeep-grand-cherokee-4wd-rough-country-10621

Scan for fitment, price and install help

921106210

ROUGH COUNTRY
SUSPENSION SYSTEMS®

JEEP 1999-04 WJ Forged Adjustable Track Bar

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Track Bar Assembled x1

TOOLS NEEDED:
15mm Socket
16mm Wrench
17mm Socket
18mm Socket



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS

1. Place the vehicle in park on a clean level surface, scotch the rear wheels and tires.
2. Remove the track bar bolt in the axle mount using a 15mm socket. Retain hardware for reuse. **See Photo 1.**
3. Remove the nut from the track bar frame mount using an 18mm socket. Retain hardware for reuse. **See Photo 2.**



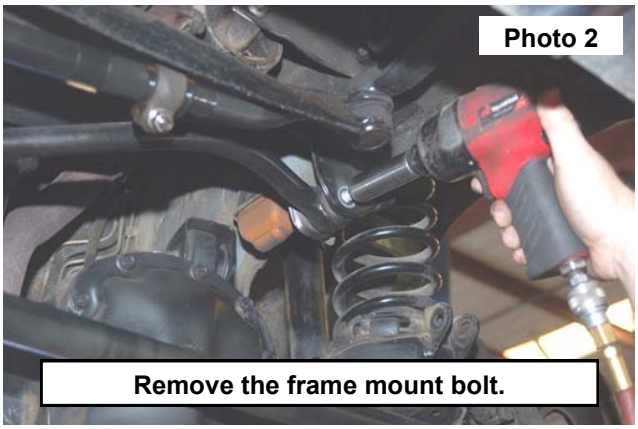

4. Lower the track bar down from the axle mount and remove the flag bolt from the frame mount. Then remove the track bar. Retain hardware for reuse.
5. Measure the length eye to eye of the OE track bar. Use the adjustment collar to set the new adjustable track bar to a starting length as the OE track bar. **See Photo 3.**
6. Install the new adjustable track bar into the frame mount using the retained hardware. Do not tighten at this time. **See Photo 4.**

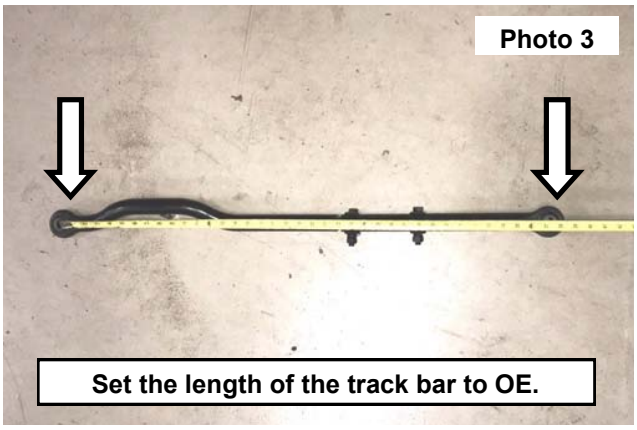

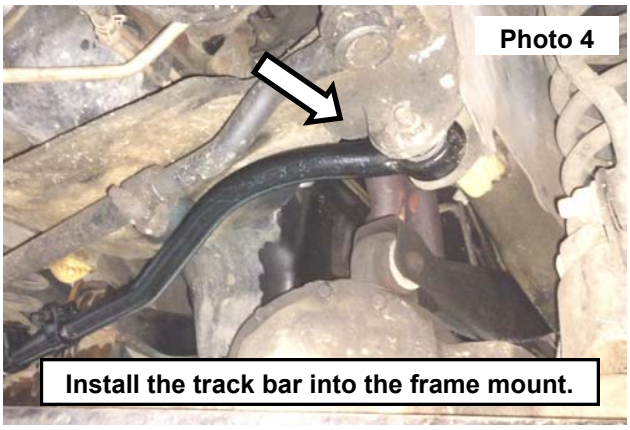

7. Install the track bar into the axle mount using the OE hardware. Tighten using 15mm socket. **See Photo 5.**
8. Tighten the upper frame mount using a 18mm socket.
9. Check to make sure the body is centered over the axle using the adjustment collar on the track bar.
10. Tighten the 2 bolts in the clamps on the adjustable collar using a 16mm wrench on the bolt and a 17mm socket on the nut. **See Photo 6.**



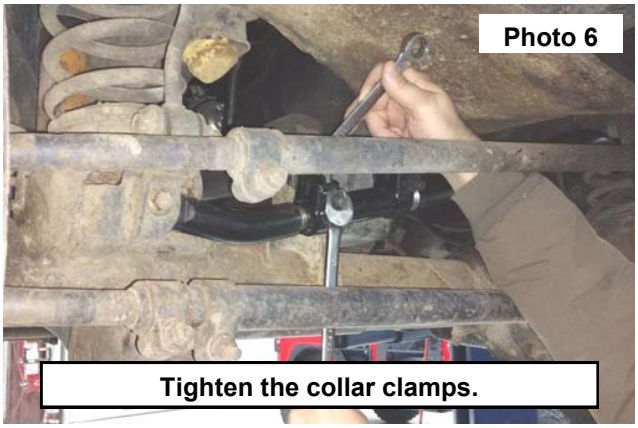

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.