TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 1063 Installation Instructions

Track Bar Bracket & Drop Pitman Arm for Jeep TJ (1997-2006)

Part number: 1063

trailfortress.com/track-bar-bracket-drop-pitman-arm-jeep-tj-rough-country-1063

Scan for fitment, price and install help



97– 06 TJ FRONT TRACK BAR BRACKET

Thank you for choosing Rough Country for your Jeep off road needs.

Please read all the instructions before beginning the installation.

PRODUCT USE INFORMATION

We will be happy to answer any questions regarding our products by calling us @ 800-222-7023. Rough Country will not be responsible for any product that is altered. **This kit designed for use with a 4" kit. Use with any other kit WILL require an adjustable track rod. This kit will not work on a non lifted vehicle.**

KIT CONTENTS

1-TRACK ROD BRACKET
1-POLY BAG CONTAINING
- **2-1/2" X 3 3/4" BOLT**
- **3-1/2" NUT**
- **5-1/2 WASHER**
- **2-SLEEVES**
- **1-Pitman Arm**



TOOLS NEEDED

17/32 DRILL BIT
29/32" DRILL BIT
DRILL MOTOR
18MM SOCKET
19MM SOCKET

INSTALLATION INSTRUCTIONS

1. Remove the track rod from the frame using a 18mm wrench.
2. Install the track rod bracket as shown in the stock track rod mount and secure in the mount using the supplied 1/2ò lock nut. Make sure the bracket is flat against the frame. Snug but do not fully tighten at this time. **Photo 1.**
3. Using the bracket as a guide, mark and drill the two side holes through the inner and outer frame as shown in **Photo 2** using a 17/32ò drill bit. **Make sure to keep the drill level when drilling.**

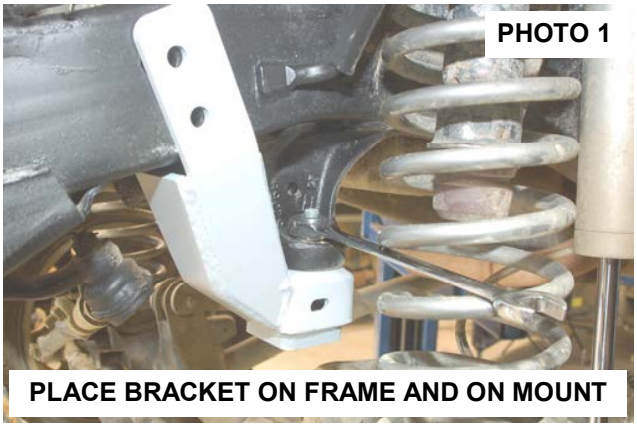

PLACE BRACKET ON FRAME AND ON MOUNT

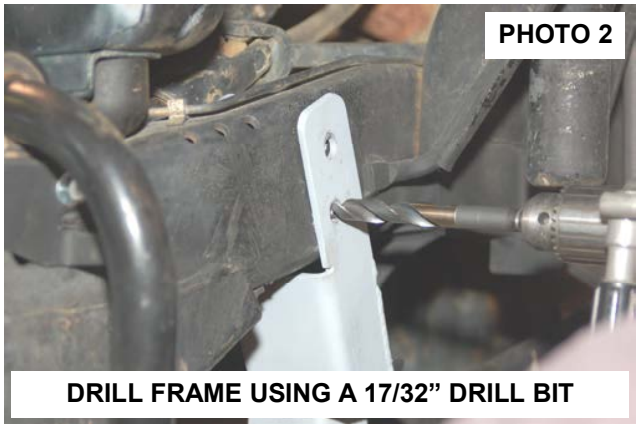

DRILL FRAME USING A 17/32" DRILL BIT

ROUGH COUNTRY
SUSPENSION SYSTEMS