TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 1070A Installation Instructions

Traction Bar Kit for Ford F-150 4WD (2015-2020)

Part number: 1070A

trailfortress.com/traction-bar-kit-ford-f150-4wd-rough-country-1070a

Scan for fitment, price and install help

92107000A

ROUGH COUNTRY SUSPENSION SYSTEMS®

Ford 15-16 F150 Traction Bar Kit

Thank you for choosing Rough Country for all your suspension needs.

⚠WARNING Rough Country recommends a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle. Please read instructions before beginning installation. Check the kit hardware against the kit contents. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

PRODUCT USE INFORMATION

⚠WARNING Do not add, alter, or fabricate any factory or after-market parts to increase vehicle height over the intended height of the Rough Country product purchased. Mixing component brands is not recommended. Rough Country makes no claims regarding lifting devices and excludes any and all implied claims. We will not be responsible for any product that is altered. We will be happy to answer any questions concerning the design, function, and correct use of our products by calling our toll free number @ 800-222-7023.

⚠WARNING DEALER AND VEHICLE OWNER

Install the supplied "Warning to Driver" decal installed on the inside of the windshield or on the vehicle's dash. The decal should act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics.

Tools Needed:
Wheel Chocks
Ratchet
Various Sockets
Drill
9/16" Bit
19mm Socket
22mm Socket

Torque Specs:

Size	Grade 8
1/2"	90 ft/lbs
9/16"	130 ft/lbs
5/8"	175 ft/lb

Kit Contents:
2-Axle Brackets
2-Frame Brackets
2-Flag Nuts
2-Traction Bars
1-1070Bag2

1070Bag2:

4-14MM X 100MM Bolts
4-14mm Lock Nuts
4- 1/2"-13 x 1.75" Bolts
2- 1" Jam Nuts

INSTALLATION INSTRUCTIONS

1. Chock the front wheels and jack up the rear of the truck.
2. Using a 22mm socket, remove the factory ubolt nuts and install the axle bracket. Torque to factory specs. **See Photo 1.**
3. Install the traction bar using the supplied 14mm x 100mm bolt, tighten using 22mm wrenches. **See Photo 2**.

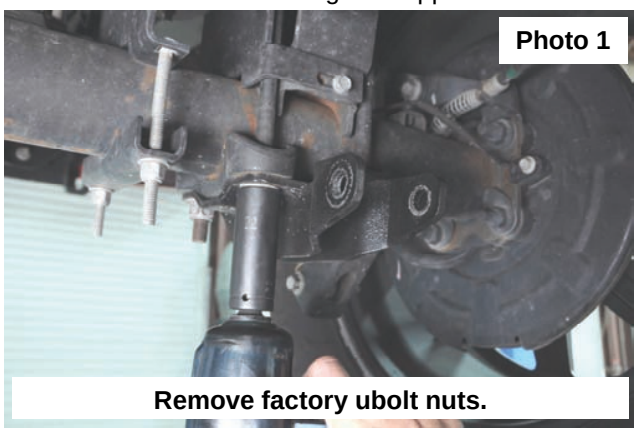

Photo 1

Remove factory ubolt nuts.

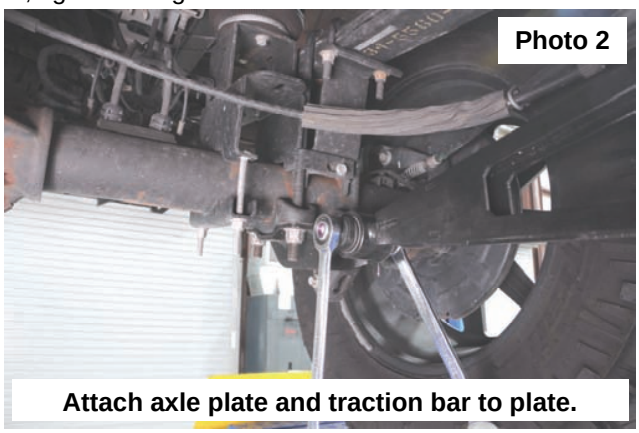

Photo 2

Attach axle plate and traction bar to plate.