TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10761 Installation Instructions

EXO Winch Mount Kit for Chevy Silverado 1500 (2007-2018)

Part number: 10761

trailfortress.com/exo-winch-mount-kit-chevy-silverado-1500-rough-country-10761

Scan for fitment, price and install help

921107610A

ROUGH COUNTRY SUSPENSION SYSTEMS®

10761BAG5

Chevrolet Silverado 1500 2007-18 EXO Bumper

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go. If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

⚠NOTICE **Rough Country LED lights are for off-road use only.**

If factory equipped, winch bumper may interfere with parking, proximity and external cruise control sensors.

KIT CONTENTS:

- 1-EXO Front Bumper W / Light mount
- 2– 2” Flush Mount LED Cubes
- 1– Dual Row 20” LED
- 2- Frame Brackets
- 2-D-rings
- 2-Large Frame Washers

HARDWARE INCLUDED:

- 2-12mm x 120mm Bolts
- 10-1/2” Flat Washers
- 4-1/2” Lock Washers
- 4-1/2” x 3 1/2” Bolts
- 4-1/2” Nylock Nuts
- 4-12mm x 35mm Bolts
- 4-12mm Flat Washers
- 4-12mm Flange Lock Nuts
- 2-Sleeves

TOOLS NEEDED:

- Pry Tool/Flat Head Screwdriver
- 15mm Socket/Wrench
- 16mm Socket/Wench
- 18mm Socket/Wrench
- 19mm Socket/Wrench

INSTALLATION INSTRUCTIONS

1. Place the vehicle in park and remove the factory tow hooks from the frame using a 18mm socket.
2. Locate the supplied frame bracket and install in the bumper with the supplied 12mm x 120mm bolt, 1/2” flat washers and 1/2” lock washer. Do not fully tighten at this time. **See Photo 1 & 2.**



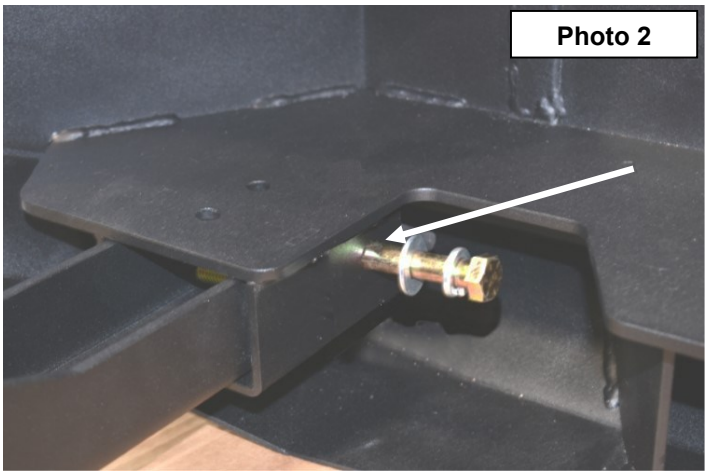

3. Install the supplied 1/2” x 3 1/2” bolts in the frame bracket as shown with the flat washers and lock nuts. **See Photo 3.**

