TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10774 Installation Instructions

Front Bumper with 20-Inch LED Bar for Ram 1500 (2013-2018)

Part number: 10774

trailfortress.com/front-bumper-ram-1500-rough-country-10774

Scan for fitment, price and install help

921077400

ROUGH COUNTRY
SUSPENSION SYSTEMS®

Ram 13-18 1500 Front Bumper

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

⚠NOTICE Rough Country LED lights are for off-road use only.

HARDWARE INCLUDED:
- 8-12mm Lock Washer
- 8-12mm x 35mm Bolts
- 8-12mm x 35mm Nuts
- 16-12mm Flat Washers
- 12-10mm Flat Washers
- 6-10mm x 35mm Bolts
- 6-10mm Nuts
- 6-10mm Lock Washers
- 2-8mm x 25mm Bolts
- 2-8mm x 16mm Bolts
- 2-8mm Nuts
- 4-8mm Lock Washers
- 6-8mm Flat Washers
- 2-6mm Lock Nuts
- 6-6mm Button Head Screws
- 4-6mm x 12mm OD Flat Washers
- 4-6mm x 18mm Flat Washers
- 4-6mm Lock Washers
- 12-4mm Button Head Screws

TOOLS NEEDED:
- 8mm Socket / Wrench
- 10mm Socket / Wrench
- 16mm Socket / Wrench
- 17mm Socket / Wrench
- 18mm Socket / Wrench

KIT CONTENTS:
- 1-Front Bumper
- 4– 2” LED Cubes
- 1– Dual Row 20” LED
- 2– 2 Into 1 Wiring Harnesses



INSTALLATION INSTRUCTIONS

1. Place the vehicle in park.
2. Remove the push pins from the radiator cover and remove cover. **See Photo 1.**
3. Remove the four bolts holding grill in using a 10mm socket. **See Photo 2.** Then unclip from the lower mounting points.


Photo 1

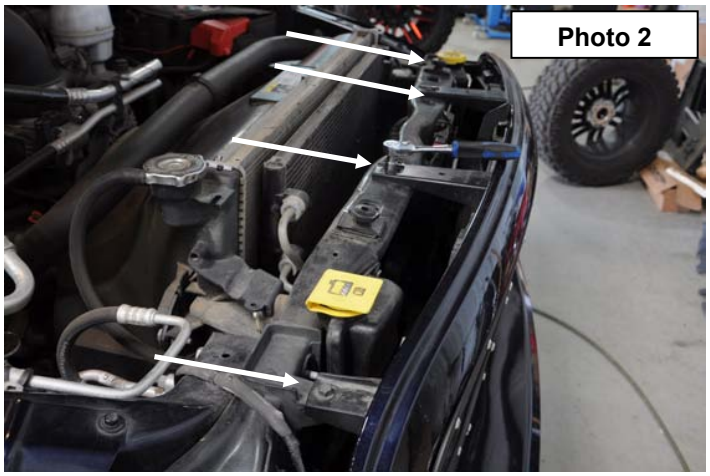
Photo 2