TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10775 Installation Instructions

Rear Bumper with LED Lights for Ram 1500 & 1500 Classic

Part number: 10775

trailfortress.com/rear-bumper-ram-1500-1500-classic-rough-country-10775

Scan for fitment, price and install help

921077500

ROUGH COUNTRY
SUSPENSION SYSTEMS®

13-18 RAM 1500 Rear Bumper

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

⚠ NOTICE **Rough Country LED lights are for off-road use only.**

HARDWARE INCLUDED:
- 8- 4mm Allen head Bolts
- 4- 12mm x 45mm Bolts
- 4- 12mm Lock Washers
- 4- Flat Washers
- 2- Flag Nuts
- 4- Prox Sensor Rubber Plugs
- 4- Prox Sensor Plastic Caps


KIT CONTENTS:
- 1- Rear Bumper
- 4- 2” Flush Mount LED


TOOLS NEEDED:
- Pry Tool/Flat Head Screwdriver
- 15mm Wrench
- 18mm Socket




INSTALLATION INSTRUCTIONS


1. Place the vehicle in park.
2. Unplug the trailing wiring harness from bumper. **See Photo 1.**
3. Unplug the license plate lights at connector and any other wiring leading to rear bumper. **See Photo 2.**

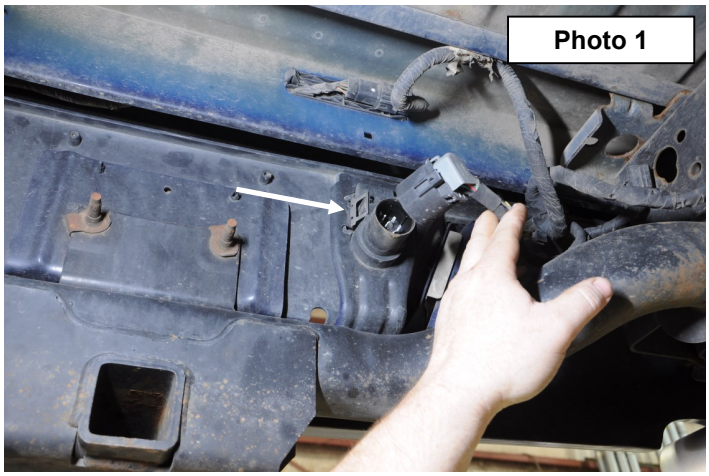

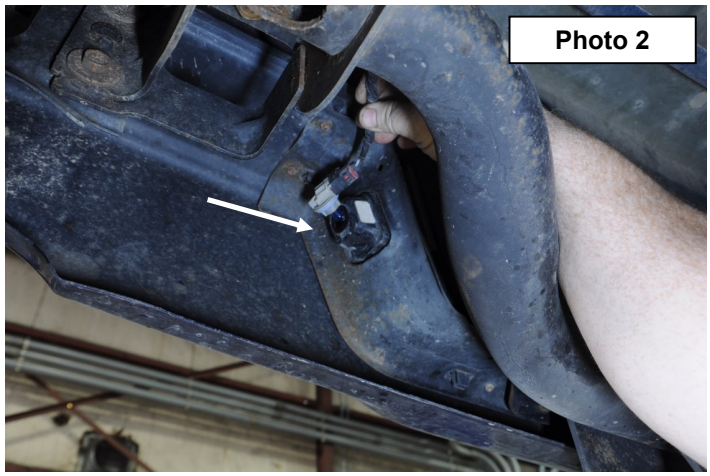



4. Using a 15 mm socket remove the two bolts on each side that secure the bumper to the frame. **See Photo 3.**
5. Remove the license plate and remove the two bolts using a 15mm socket. **See Photo 4.**

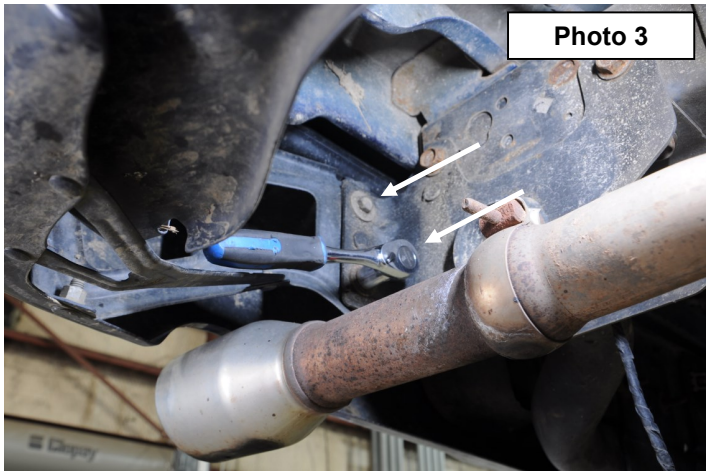

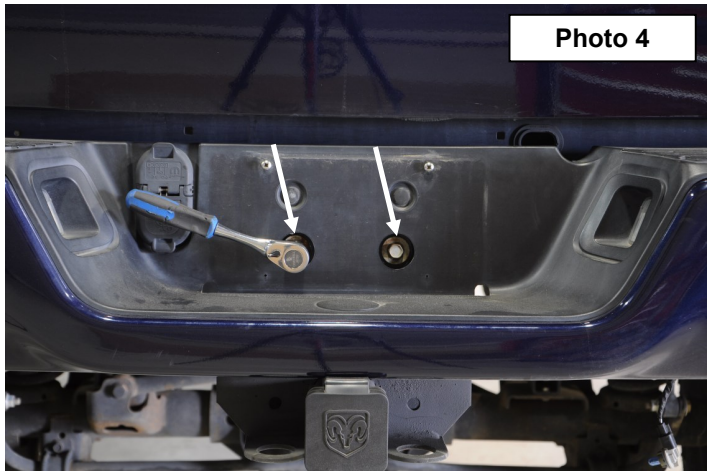



6. Remove the factory proximity sensors, if factory equipped.
7. Remove the bumper from the vehicle.
8. Remove the trailer plug from the factory bumper. **See Photo 5.**
9. Install the trailer plug in the new bumper. **See Photo 6.**

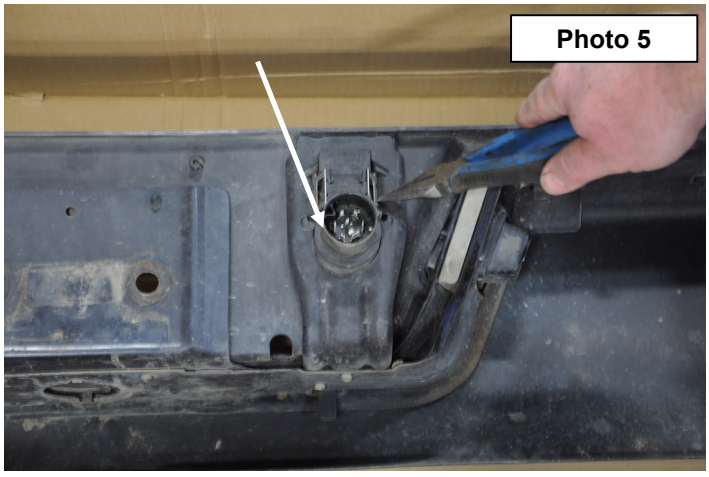

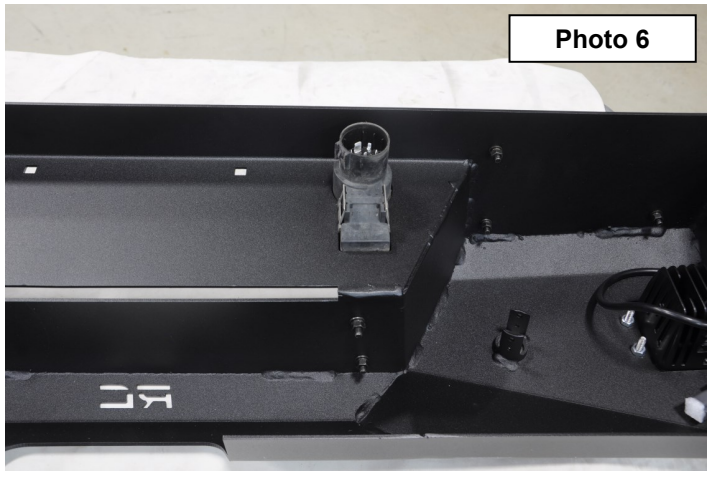



10. If the vehicle is not equipped with factory proximity sensors, install the supplied rubber plugs and plastic caps in the holes in the bumper. **See Photo 7 & 8.**

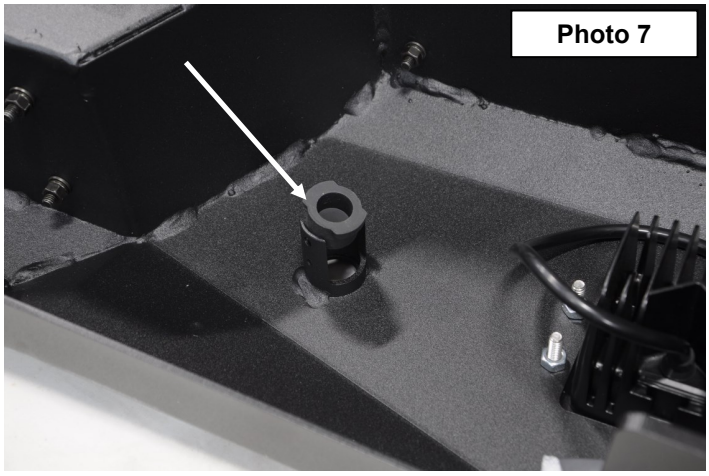

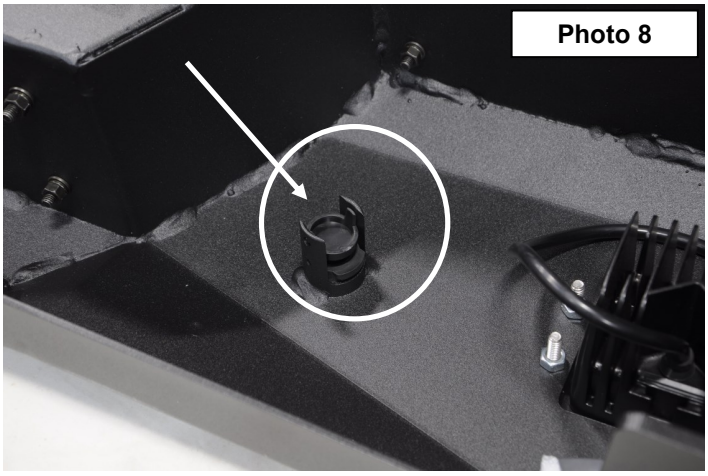



11. Install the factory proximity sensors (if equipped) into the new bumper, Secure with the supplied 4mm allen head bolts.
12. Install flush mount lights using a 4mm allen wrench and a 10mm socket. **See Photo 9.**
13. Install the bumper on the vehicle with the supplied 12mm x 45m bolts and flag nuts. **See Photo 10.**

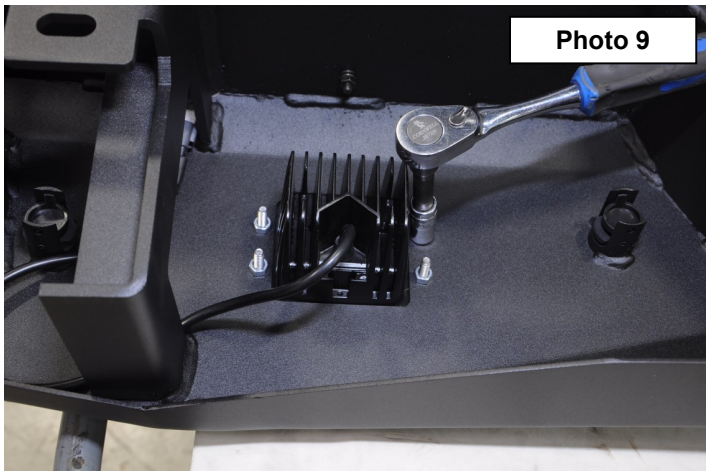

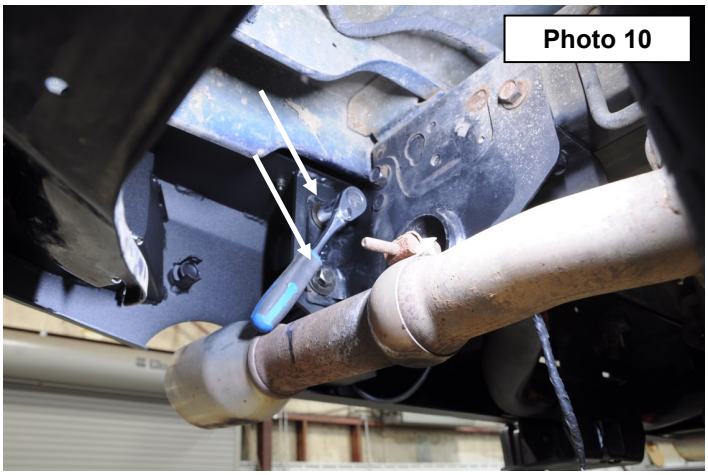

14. Install the trailer wiring harness to the plug. **See Photo 11.**
15. Install supplied LED license plate marker lights and license plate. **See Photo 12.** These lights will need to be spliced into the existing license plate wiring in the harness

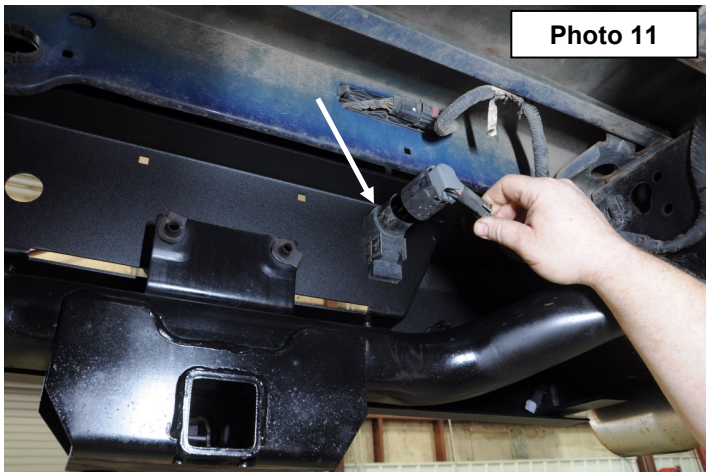

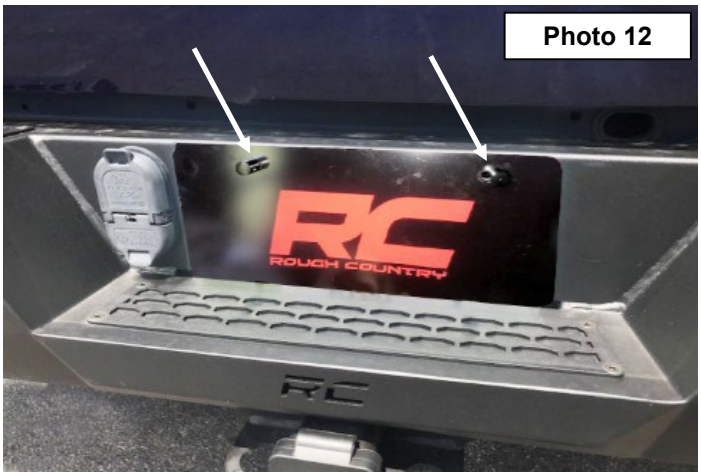



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.