TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 10794 Installation Instructions

Skid Plate for Chevy Silverado 1500 / GMC Sierra 1500 (2007-2013)

Part number: 10794

trailfortress.com/rough-country-skid-plate-10794

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

10794BAG

# PreRunner Skid Plate

**Thank you for choosing Rough Country for all of your suspension needs.**

Rough Country recommends that a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle. Please read all the instructions before beginning the installation. Check the kit hardware against the ''Kit Contents'' list below. If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Check and retighten wheels at 50 miles and again at 500 miles. Periodically check all hardware for tightness. Be sure you have all the needed parts and understand where they go. Also, please review the "Tools Needed" list to be certain you have the necessary tools to complete the installation.

## PRODUCT USE INFORMATION

**⚠WARNING** As a general rule, the taller a vehicle is the easier it will roll. We strongly recommend that seat belts and shoulder harnesses be worn at all times. Braking performance and capabilities are decreased when significantly larger/heavier tires and wheels are used. Do not add, alter, or fabricate any factory or after-market parts which increase vehicle height over the intended height of the Rough Country product purchased. Rough Country makes no claims regarding lifting devices and excludes any and all implied claims. We will not be responsible for any product that is altered.

## NOTICE TO DEALER AND VEHICLE OWNER


**⚠NOTICE** Any vehicle equipped with any Rough country product must have the "Warning to Driver" decal installed on the sun visor or dash. The decal is to act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics. INSTALLING DEALER—It is your responsibility to install the warning decal and to forward these installation instructions on too the vehicle owner for review and to be kept in the vehicle for its service life.

**TOOLS NEEDED:**

**Metric Wrench/Socket**
**15mm**
**SAE Wrench/Socket**
**5/32" Allen Wrench**

**KIT CONTENTS:**
**Front Skid Plate**

**HARDWARE INCLUDED:**
**1/4" Bolt (7)**
**1/4" Washer (7)**
**10mm Bolt (2)**
**10mm Washer (2)**

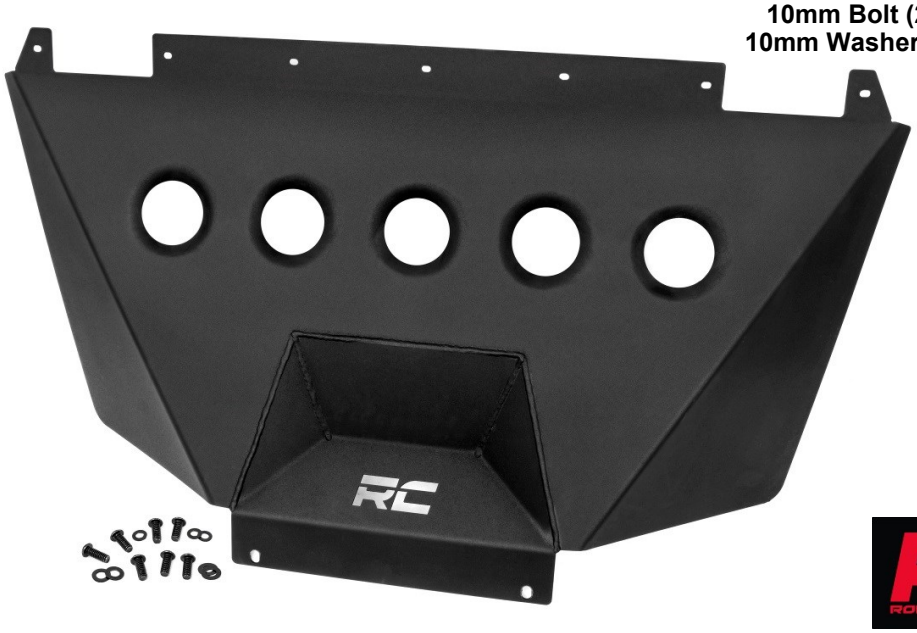




trailfortress.com/rough-country-skid-plate-10794

**PreRunner Skid Plate**

1. Park your vehicle on a clean flat surface, engage the parking brake and block the rear tires.
2. Remove the factory plastic gravel guard if installed using a 15mm socket.
3. Install the PreRunner skid plate loosely using the provided 1/4” Allen Bolts, washers to the PreRunner Bumper, 10mm Allen Bolt, and washers to the factory cross member. Once all are started, torque all hardware to 7 ft-lbs. Be careful to not strip out the factory frame hole locations as these are formed threads.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



trailfortress.com/rough-country-skid-plate-10794