TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 1088 Installation Instructions

Bar Pin Eliminator Kit for Jeep Cherokee and Wrangler 4WD

Part number: 1088

trailfortress.com/rough-country-bar-pin-eliminator-kit-1088

Scan for fitment, price and install help



92108800

97– 06 TJ FRONT BAR PIN ELIMINATOR KIT

Thank you for choosing Rough Country for your Jeep off road needs.

Please read all the instructions before beginning the installation.

PRODUCT USE INFORMATION

We will be happy to answer any questions regarding our products by calling us @ 800-222-7023. Rough Country will not be responsible for any product that is altered.

KIT CONTENTS

2-FRONT LOWER SHOCK BRACKETS
1-POLY BAG CONTAINING:
- **2-SHOCK SLEEVES**
- **2-1/2" X 2 1/2" Bolts**
- **2-1/2" Lock nuts**





TOOLS NEEDED

13mm wrench
3/4" Socket / Wrench

INSTALLATION INSTRUCTIONS

1. After the shock absorber has been removed from the lower shock mount. Install the bar pin bracket as shown in **Photo1** with stock hardware. Tighten using a 13mm wrench.
2. Install the supplied sleeve in the shock absorber and install the shock absorber in the bar pin bracket as shown in **Photo 2** using the supplied 1/2" x 2 1/2" bolt & lock nut. Tighten using a 3/4" wrench & socket.

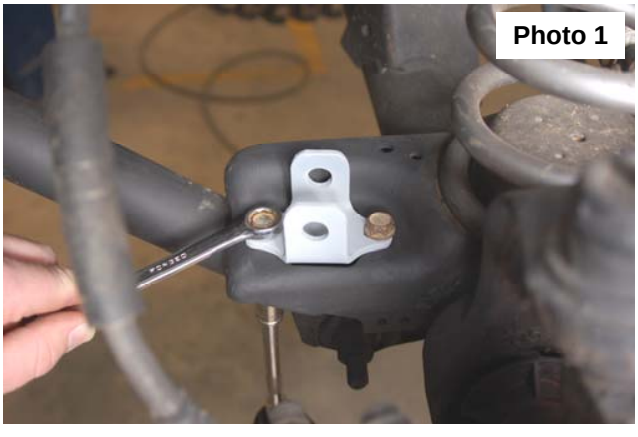

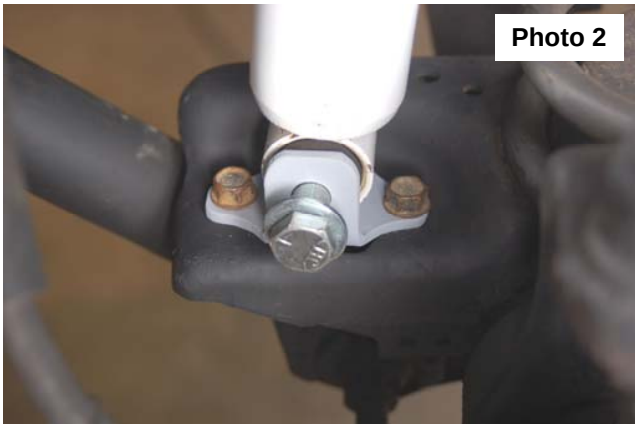

POST INSTALLATION

1. Check all fasteners for proper torque. Check to ensure there is adequate clearance between all rotating, mobile, fixed and heated members. Check steering for interference and proper working order.
2. Re torque all fasteners after 500 miles. Visually inspect components and re torque fasteners during routine vehicle service.

trailfortress.com/rough-country-bar-pin-eliminator-kit-1088