TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 1092 Installation Instructions

1.5-Inch Wheel Adapters, 5x4.5 to 5x5 Bolt Pattern

Part number: 1092

trailfortress.com/rough-country-1-5-inch-wheel-adapters-1092

Scan for fitment, price and install help



JEEP TJ 5-4.5” PATTERN TO 5-5”PATTERN 1-1/2”WHEEL SPACERS

Thank you for choosing Rough Country for all your suspension needs.

This wheel spacer / adapter kit allows the TJ owner to install 5-5” wheels from a JK. Proper wheel back-spacing must be used when installing. Normally 3-3/4” backspace is sufficient but trial fitting the wheels is recommended.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

Kit Contents:

2-1 1/2òWheel Spacers


Tools Needed:

19mm Socket
Torque Wrench
Floor Jack
Jack Stands
Flat Head Screwdriver



Installation Instructions

1. Chock the tires and jack up the vehicle.
2. Remove the lug nuts and remove the tire and wheel.
3. Install the wheel spacers as shown with the supplied lug nuts. **See Photo 1.** Tighten to manufacturer specifications using a 19mm wrench.
4. Reinstall the tires/wheels. **See Photo 2**. Tighten the lug nuts holding the wheels and tires to factory specifications.

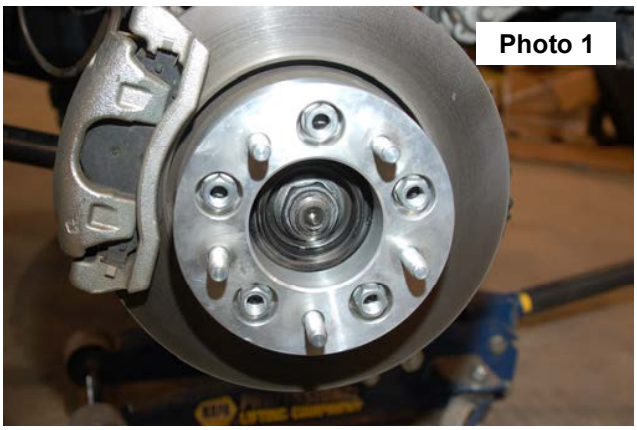



Post Installation

1. Re torque all fasteners after 500 miles. Visually inspect components and re torque fasteners during routine vehicle service.