TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 11001 Installation Instructions

Traction Bar Kit for Silverado and Sierra 2500 HD / 3500 HD

Part number: 11001

trailfortress.com/traction-bar-kit-silverado-and-sierra-2500-hd-3500-hd-rough-country-11001

Scan for fitment, price and install help

921110010

ROUGH COUNTRY SUSPENSION SYSTEMS®

11001BAG1

GM2011-17 2500 Traction Bar Kit

Thank you for choosing Rough Country for all your suspension needs.

⚠WARNING Rough Country recommends a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle. Please read instructions before beginning installation. Check the kit hardware against the kit contents. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

PRODUCT USE INFORMATION

⚠WARNING Do not add, alter, or fabricate any factory or after-market parts to increase vehicle height over the intended height of the Rough Country product purchased. Mixing component brands is not recommended. Rough Country makes no claims regarding lifting devices and excludes any and all implied claims. We will not be responsible for any product that is altered. We will be happy to answer any questions concerning the design, function, and correct use of our products by calling our toll free number @ 800-222-7023.

⚠WARNING DEALER AND VEHICLE OWNER

Install the supplied "Warning to Driver" decal installed on the inside of the windshield or on the vehicle's dash. The decal should act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics.

Tools Needed:

Wheel Chocks	Drill Motor
Ratchet	9/16" Drill
1 1/8" wrench	Die Grinder
22mm Socket	
22mm Wrench	

Torque Specs:

Size	Grade 5	Grade 8
5/16"	15 ft/lbs	20 ft/lbs
3/8"	30 ft/lbs	35 ft/lbs
7/16"	45 ft/lbs	60 ft/lbs
1/2"	65 ft/lbs	90 ft/lbs

	Class 8.8	Class 10.9
6MM	5 ft/lbs	9 ft/lbs
8MM	18ft/lbs	23 ft/lbs
10MM	32ft/lbs	45ft/lbs
12MM	55ft/lbs	75ft/lbs
14MM	85ft/lbs	120ft/lbs

INSTALLATION INSTRUCTIONS

1. Locate where the 2 frame sections meet. **See Photo 1**.
2. Measure 8 7/8", to the rear of truck, and mark in the center of the bottom of the frame. **See Photo 2**.

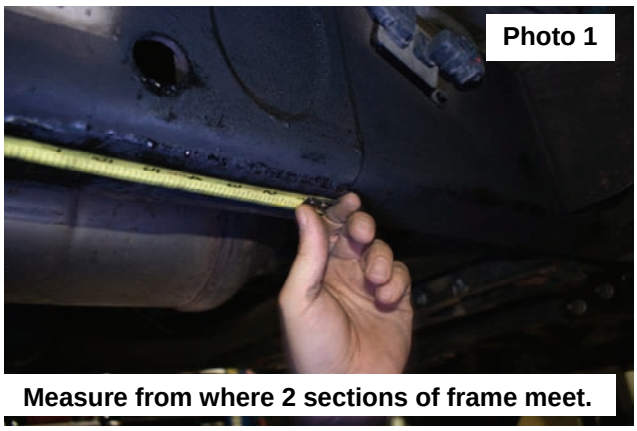


Photo 1

Measure from where 2 sections of frame meet.

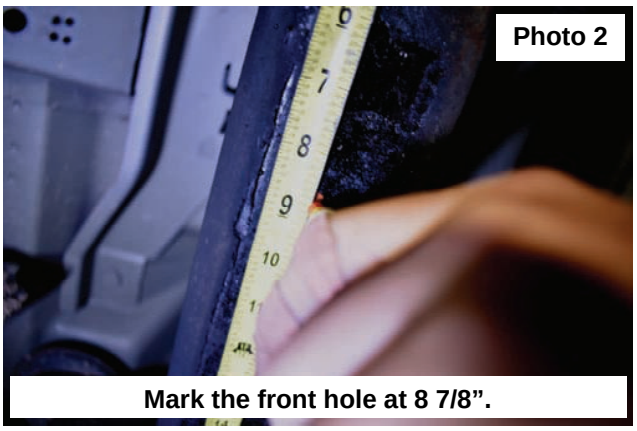


Photo 2

Mark the front hole at 8 7/8".