TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 11062 Installation Instructions

Forged Rear Track Bar for Jeep Wrangler 4WD (2018-2025)

Part number: 11062

trailfortress.com/forged-rear-track-bar-jeep-wrangler-4wd-rough-country-11062

Scan for fitment, price and install help

921110620

ROUGH COUNTRY
SUSPENSION SYSTEMS®

JEEP 2018-19 JL 0-6” Rear Forged Track Bar

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Track Bar Assembled x1

TOOLS NEEDED:
21mm Wrench and Socket





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTONS


1. Place the vehicle in park on a clean flat surface, chock the front wheels of the vehicle.
2. Remove the bolt and flag nut from the track bar axle mount using a 21mm socket. Retain hardware for reuse. **See Photo 1.**
3. Remove the bolt and nut from the track bar frame mount using a 21mm wrench and socket. **See Photo 2.**
4. Remove the track bar from the vehicle.

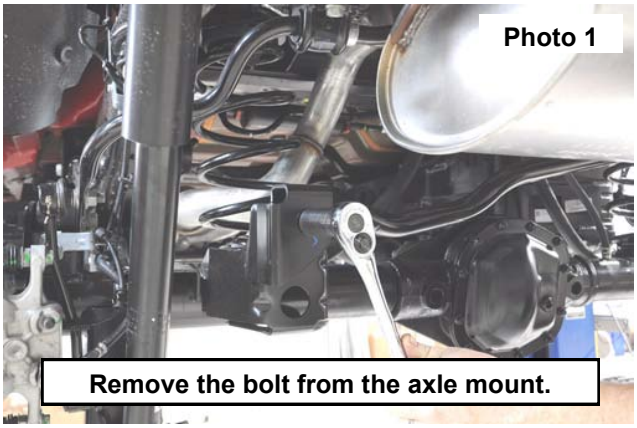

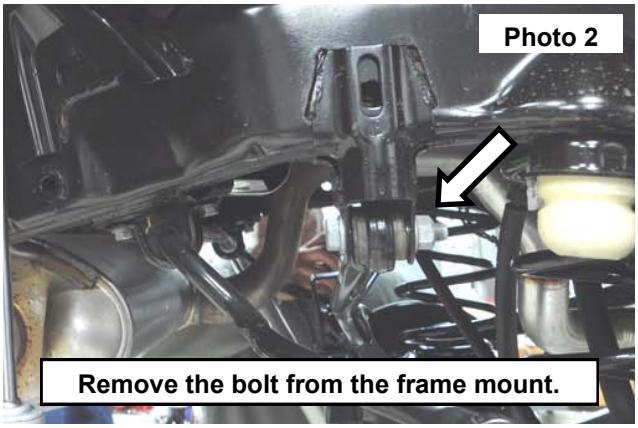



5. Measure the length eye to eye of the OE track bar. Use the adjustment collar to set the new adjustable track bar to a starting length as the OE track bar. **See Photo 3.**
6. Install the track bar into the axle mount using the retained hardware. **See Photo 4.**

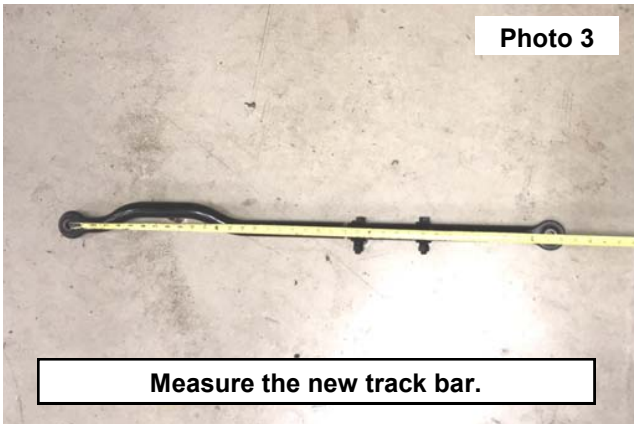

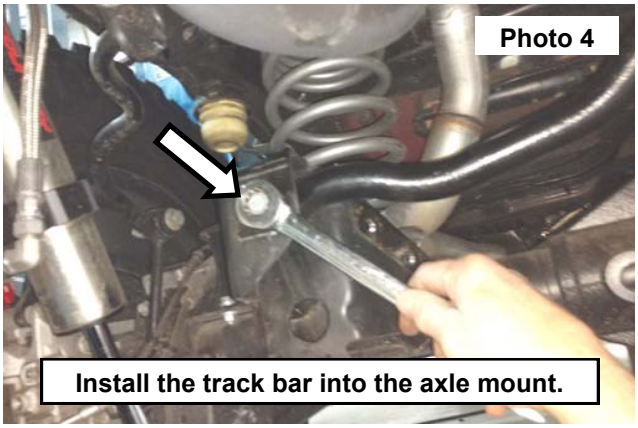

7. Install the track bar into the frame mount using the retained hardware. **See Photo 5.**
8. Tighten the track bar bolts using a 21mm wrench and socket.
9. Measure the rear tracking of the vehicle. Using the adjustment collar adjust the axle center to the vehicle. Then tighten the 2 bolts in the clamps on the adjustable collar using a 16mm wrench on the bolt and a 17mm socket on the nut. **See Photo 6.**

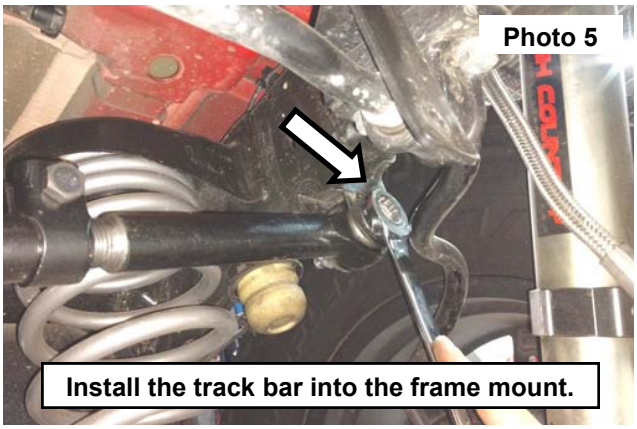

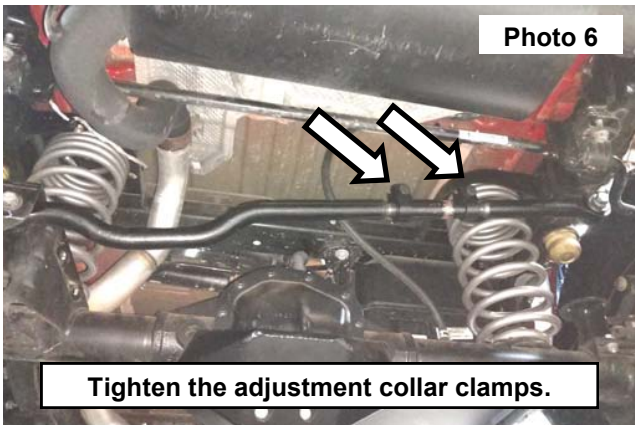

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.