Rough Country 1127 Installation Instructions

Sway Bar Clamp Kit for 1997-2006 Jeep Wrangler 4WD

Part number: 1127

trailfortress.com/rough-country-sway-bar-clamp-kit-1127

Scan for fitment, price and install help



92112700

JEEP TJ FRONT SWAY BAR CLAMPS

Thank you for choosing Rough Country for your suspension needs.

Please read all the instructions before beginning the installation. Check the kit hardware against the kit contents. Be sure you have all the needed parts and understand where they go. Also please review the tools needed list and make sure you have needed tools. If you have any questions please call us at 800-222-7023.

KIT CONTENTS:
2-Clamps

TOOLS NEEDED:
3/16" Allen Wrench



INSTALLATION INSTRUCTIONS

1. Make sure the sway bar is centered from side to side on the frame mounts.
2. Install the Clamps as shown in **Photo 1** and tighten using a 3/16" allen wrench. Driver side shown.
3. Clamps shown installed in **Photo 2** and sway bar centered.

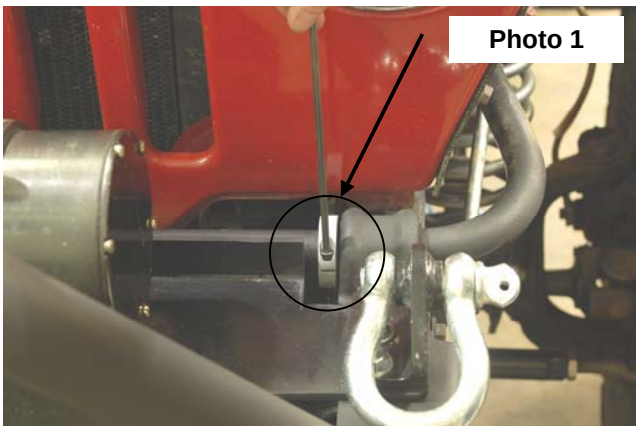

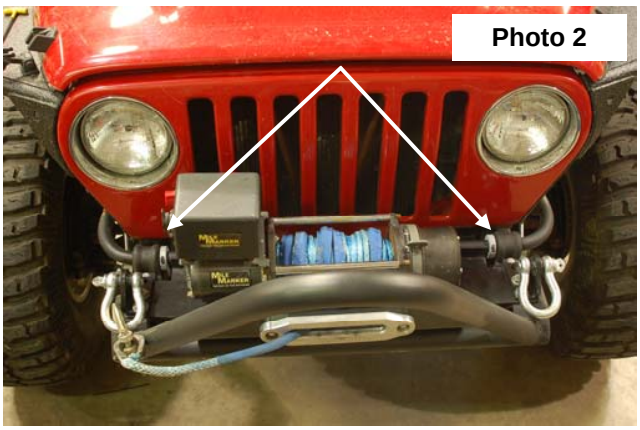

POST INSTALLATION

- All components must be retightened after 500 miles, and every three thousand miles after installation.

Thank You for using Rough Country for your off road vehicle needs