TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 1159 Installation Instructions

Rear Upper Control Arm Cam Bolts for Jeep Wrangler TJ

Part number: 1159

trailfortress.com/rear-upper-control-arm-cam-bolts-jeep-wrangler-tj-rough-country-1159

Scan for fitment, price and install help



92115900

97-06 JEEP TJ UPPER CONTROL ARM CAM BOLTS

Thank you for choosing Rough Country for all your suspension needs.

Rough Country recommends a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

INSTALLATION INSTRUCTIONS

1. Chock the front wheels and place jack stands on the frame just forward of the rear lower control arms. Using a 15mm wrench, loosen the stop upper control arm bolt on the axle. **See Figure 1**.
2. Using a floor jack under the axle , jack up the axle to relieve the pressure on the bolt to allow it to be removed. Pull the upper control arm up to allow the tabs to be knocked out as shown in **Figure 2.**

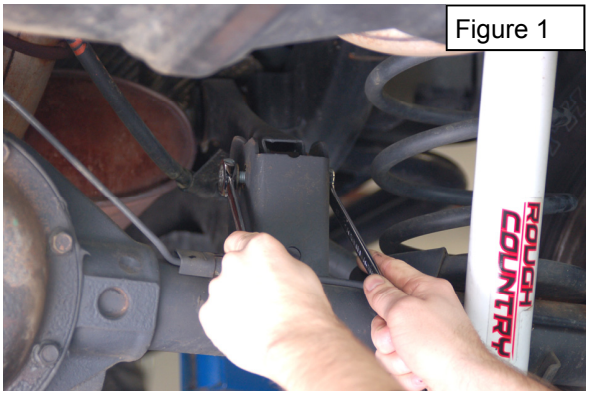

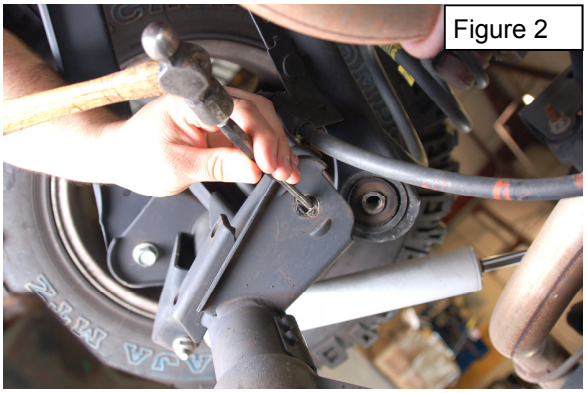

3. Install new cam bolt using a 15mm & 17mm wrench. Position the cam bolt as shown in **Figure 3**. Note: An alignment must be performed to check the for proper caster and pinion angle.

