TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 1167 Installation Instructions

Rear Track Bar Bracket for Jeep Wrangler JK (2007-2017)

Part number: 1167

trailfortress.com/rear-track-bar-bracket-jeep-wrangler-jk-rough-country-1167

Scan for fitment, price and install help

92116700

ROUGH COUNTRY SUSPENSION SYSTEMS®

JEEP JK REAR TRACK ROD BRACKET
(FOR USE WITH 2 1/2” - 6” KITS)

Thank you for choosing Rough Country for your suspension needs.

Rough Country recommends a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read instructions before beginning installation. Be sure you have all needed parts and know where they go. Please review tools needed list and make sure you have needed tools.

PRODUCT USE INFORMATION

If question exist we will be happy to answer any questions concerning the design, function, and correct use of our products by calling 1-800-222-7023.

⚠NOTICE This bracket is to allow the rear axle to be centered after installing the 2 1/2” kit from Rough Country. Normally when the 2 1/2” kit is installed the rear axle pulls slightly to the passenger side (approx. 1/4”). Installing this optional bracket will return the axle to center under the rear of the Jeep.

TOOLS NEEDED:

The following tools will be needed to complete this installation:

21MM Socket/Wrench
22MM Socket/Wrench
3/4òSocket/Wrench

INSTALLATION INSTRUCTIONS

1. Park the vehicle on a level surface and chock the front wheels.
2. Jack up the rear of the vehicle and place jack stands under the frame rails just forward of the rear lower control arms. Lower the rear of the vehicle onto the jack stands.
3. Support the rear axle using a floor jack.
4. Remove the track rod from the frame mount using a 21mm wrenchð driver side of vehicle. It may be necessary to raise or lower to take the pressure off of the track rod bolt.
5. Place the bracket on the factory mount and install the supplied 3/8òx 1òBolts , washers and Flange lock nuts as shown in the factory holes. Do not tighten at this time. **See Photo 1.**
6. Using the track bar bracket as a template mark and drill a 13/32òhole in the top of the original track bar mount from the top.
7. Install using the .375-16 x 1òbolt, washer through the drilled hole from the top and secure with flange nut using a 9/16òwrench and socket. **See PHOTO 2.**

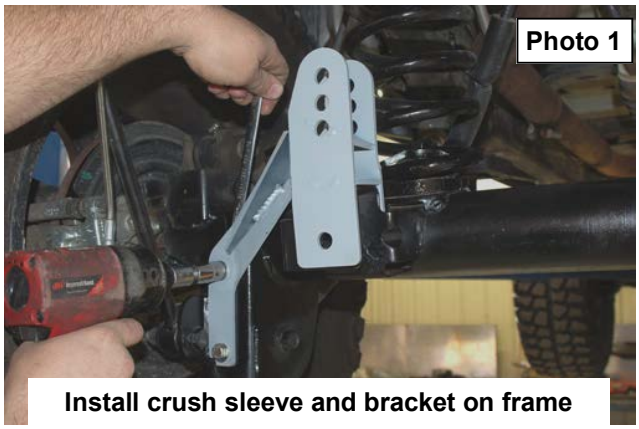

Photo 1

Install crush sleeve and bracket on frame

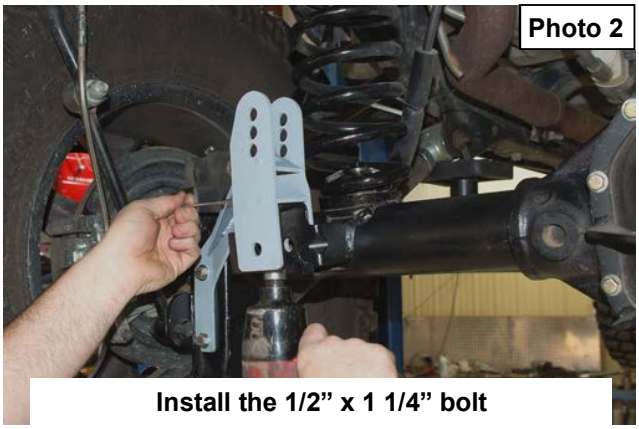

Photo 2

Install the 1/2” x 1 1/4” bolt