TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 1197 Installation Instructions

Carrier Bearing Drop Kit (Rough Country 1197)

Part number: 1197

trailfortress.com/carrier-bearing-drop-kit-rough-country-1197

Scan for fitment, price and install help



92119700

FORD F250 CARRIER BEARING DROP BRACKET KIT

Thank you for choosing Rough Country for your suspension needs.

Please read instructions before beginning installation. Check the kit hardware against the parts list on this page and the product layout on the last page. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

If questions exist we will be happy to answer any questions concerning the design, function, and correct use of our products.

Kit Contents

1-Carrier Bearing Drop Bracket
1-Poly bag Containing
2-7/16" x 3 1/4 Bolts
2-7/16" washers



Tools Needed:
5/8" wrench


Torque Specs

Size	Grade 5	Grade 8
7/16"	45 ft/lbs	60 ft/lbs

INSTALLATION

1. For vehicles with 2 piece drive shafts, support the driveshaft, using a 15mm socket remove the bolts from the carrier bearing bracket.
2. Insert the carrier bearing spacer between the bearing bracket and body mount.
3. Reattach the carrier bearing using the supplied 7/16"x 3 1/4" bolts and washers. Torque to 60 ft/lbs. **See Photo 15. Install bracket with flat part on the stock mount and the taper towards the front.**

Photo 1

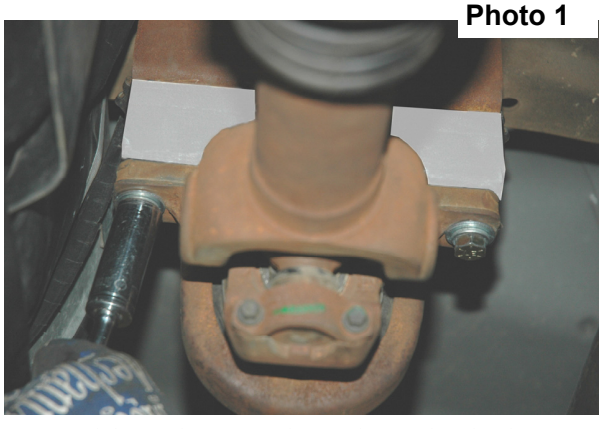

POST INSTALLTION INSTRUCTIONS

1. Check to ensure for adequate clearance between all rotating, mobile, fixed, and heated members.
2. All components must be retightened after 500 miles, and every three thousand miles after installation