Rough Country 1328BOX4 Installation Instructions

Kicker Bar Kit for Ram 1500 and 1500 Classic 4WD

Part number: 1328BOX4

trailfortress.com/kicker-bar-kit-ram-1500-and-1500-classic-4wd-rough-country-1328box4

Scan for fitment, price and install help

921328BOX4

ROUGH COUNTRY SUSPENSION SYSTEMS®

1328BAG6

06-17 DODGE KICKER BAR KIT

Thank you for choosing Rough Country for all your suspension needs.

In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have the tools needed to install the kit.

⚠NOTICE **NOTICE TO DEALER AND VEHICLE OWNER**

Any vehicle equipped with any Rough Country product should have a "Warning to Driver" decal installed on the inside of the windshield or on the vehicle's dash. The decal should act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics. By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

Tools Needed:

19mm Socket/ Wrench
1/2" Drill Bit
Drill Motor



Torque Specs:

Size	Grade 5	Grade 8
1/2"	65 ft/lbs	90 ft/lbs

INSTALLATION INSTRUCTIONS

1. Install the supplied kicker bar brackets using the supplied 1/2" x 1 1/2" bolts, washers and nuts to the rear cross-member on the driver and passenger side. **Note: Make sure the brackets are straight as shown.** Tighten using a 19mm socket / wrench. **See Photo 1.**
2. Install supplied bushings and sleeves in kicker arms and install in the brackets on the driver and passenger side with the supplied 1/2" x 3 1/2" bolts, washers and nuts. Do not tighten at this time. **See Photo 2.**

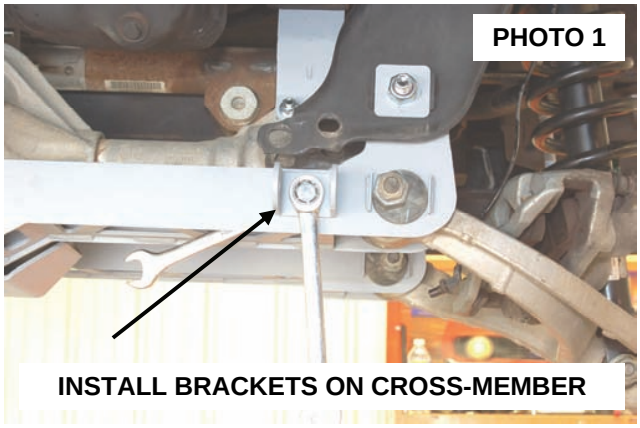

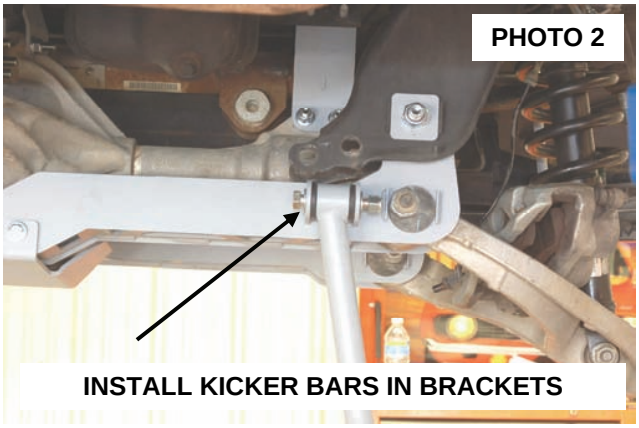

3. Swing the bar up to the transmission cross-member and mark the holes to be drilled. The edge of the kicker bar must be flush or close to flush with the edge of the cross-member. **See Photo 3.**



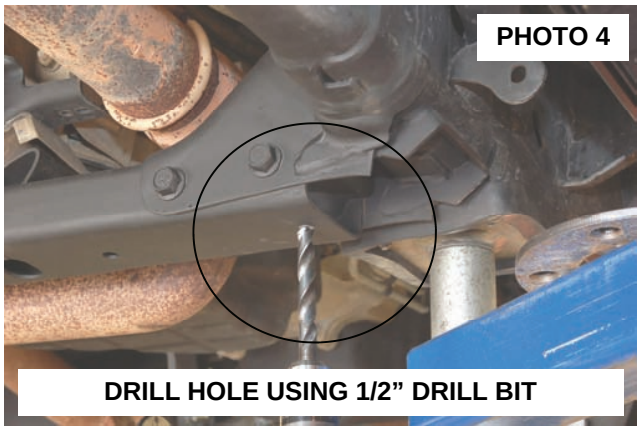

4. Drill holes using a 1/2” drill bit. **See Photo 4.**
5. Install the kicker to the transmission cross-member using the supplied 1/2” x 1” bolt , washer and flag nuts. **See Photo 5.** ***2012 Model Shown for reference and installs the same as 2006-2011***
6. Tighten using a 19mm socket and wrench to tighten the kicker to the cross-member and the transmission cross-member. **See Photo 6.**

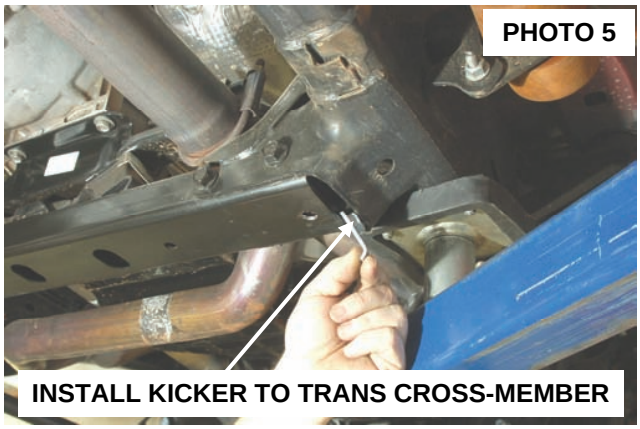

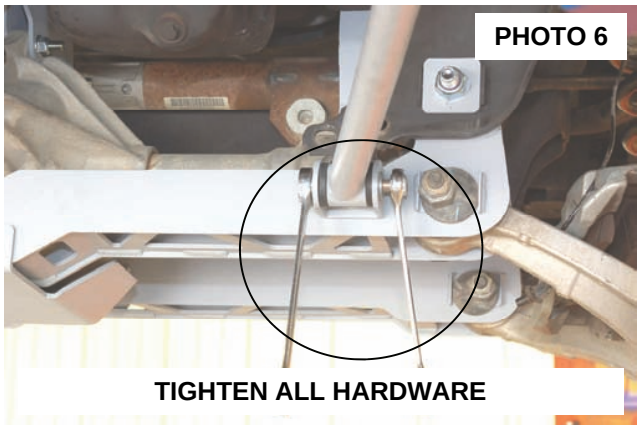

7. Repeat for opposite side.

POST INSTALLATION

All components must be retightened after 500 miles, and every three thousand miles after installation.

Thank you for using Rough Country Suspension for your off road needs!!

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.