TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 14005 Installation Instructions

OV2 Running Boards for Toyota Tundra Crew Cab (2007-2021)

Part number: 14005

trailfortress.com/rough-country-ov2-running-boards-14005

Scan for fitment, price and install help

ROUGH COUNTRY
SUSPENSION SYSTEMS®

921400500

07-21 Toyota Tundra Crew Cab Overland Steps

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Driver Side Step x1
Pass Side Step x1
Driver Fr Brackets x1
Driver Center Bracket x1
Driver Rr Bracket x1
Pass Fr Bracket x1
Pass Center Bracket x1
Pass Rr Bracket x1

TOOLS NEEDED:
13mm Wrench / Socket

HARDWARE INCLUDED:
8mm x 25mm Bolt x12
8mm x 30mm Bolt x6
8mm Flat Washer x24
8mm Lock Washer x18
8mm Lock Nut x6
8mm T-Bolt x6




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

RC ROUGH COUNTRY

Bracket Placement Diagram (Pass Side Shown)

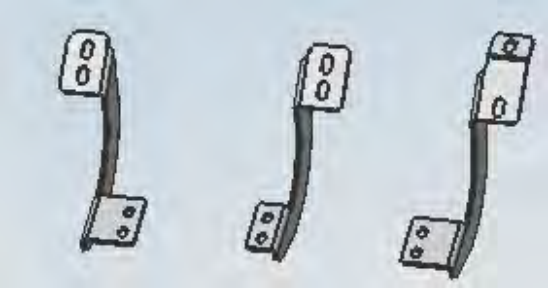

Passenger Front ⇨

INSTALLATION INSTRUCTIONS


1. Remove stock steps if installed. Stock hardware will not be reused.
2. Refer to the illustration above and install the front bracket in the factory mounting holes on the **passenger** side using the supplied 8mm bolts, lock washers, and flat washers. **See Photo 1.** Tighten using a 13mm wrench / socket.
3. Place the center and rear bracket in position on the factory mounts an secure using the supplied 8mm bolts, lock washers and flat washers. Tighten using a 16mm wrench / socket. **See Photo 2 & 3**





4. Place the steps on the step brackets and line up the mounting plates on the steps and brackets. Place the nut plate in the mounting plates on the steps and secure using the supplied 8mm bolts, lock washers, lock nuts and (4) flat washers for each bolt plate. Tighten with a 13mm wrench. **See Photo 4**.



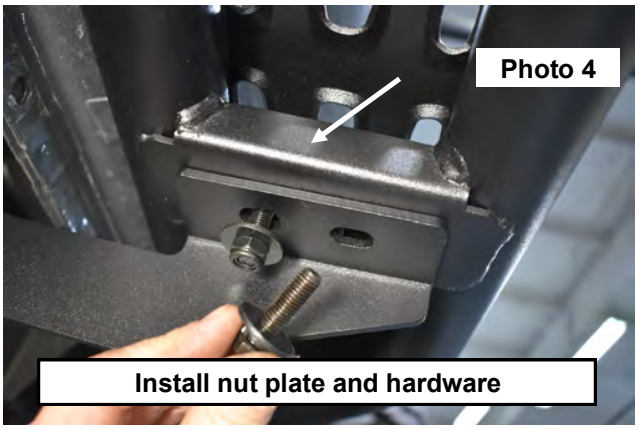

5. Repeat for Driver side of the vehicle.
6. Periodically check and tighten hardware.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.