TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 21009 Installation Instructions

Oval Nerf Step Side Steps for Toyota Tundra (2007–2021)

Part number: 21009

trailfortress.com/rough-country-oval-nerf-step-21009


Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS

21009

PARTS LIST:

1	Driver Sidebar	1	Driver/Left Rear Mounting Bracket
1	Passenger Sidebar	1	Passenger/Right Rear Mounting Bracket
1	Driver/Left Front Mounting Bracket	24	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Front Mounting Bracket	24	8mm Lock Washers
1	Driver/Left Middle Mounting Bracket	24	8mm ID x 24mm OD x 2mm Flat Washers
1	Passenger/Right Middle Mounting Bracket		

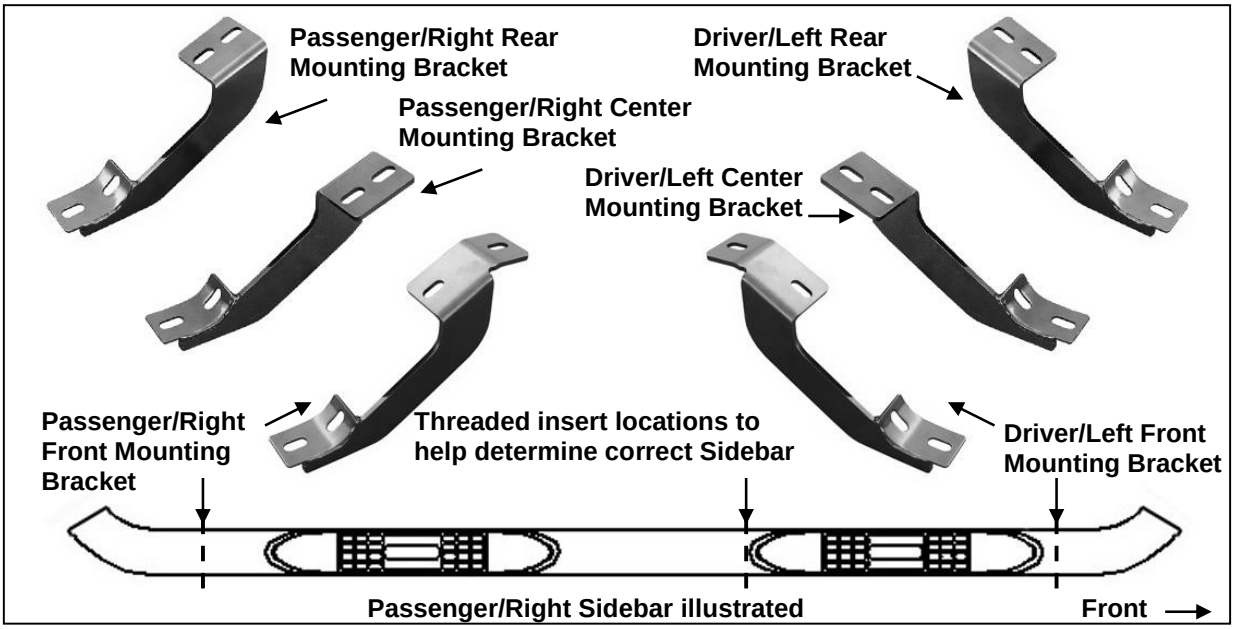

PROCEDURE:

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
2. Starting on the driver side front of the vehicle, remove the existing (2) factory bolts, (or plastic plugs), on the side panel located by the front tire opening, (**Figure 1**). Bolt the front Mounting Bracket to the vehicle using the included (2) 8mm x 30mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, **(Figure 2)**. Do not tighten hardware at this time.
3. Repeat **Step 2** to install the Center Bracket, (**Figures 3 & 4**), and Rear Bracket, (**Figure 5**). **NOTE**: The Center Bracket bolts to the mounting location closest to the front Bracket. The Rear Bracket bolts to the very last mounting location along the side panel toward the back of the cab. Do not tighten hardware at this time.
4. Carefully place the Driver/Left Sidebar onto the (3) Brackets. Align the threaded holes in the bottom of the Sidebar with the holes on the Mounting Brackets. Attach the Sidebar to the Mounting Brackets with the included (6) 8mm x 30mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Flat Washers, **(Figures 2, 4 & 5)**. Do not tighten hardware at this time.
5. Level and adjust the Sidebar properly and tighten all hardware.
6. Repeat **Steps 2 – 5** for passenger Sidebar installation.


trailfortress.com/rough-country-oval-nerf-step-21009

7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.
For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.
For gloss black finishes: Mild soap may be used to clean the Sidebar.

trailfortress.com/rough-country-oval-nerf-step-21009

Driver Side Installation Pictured

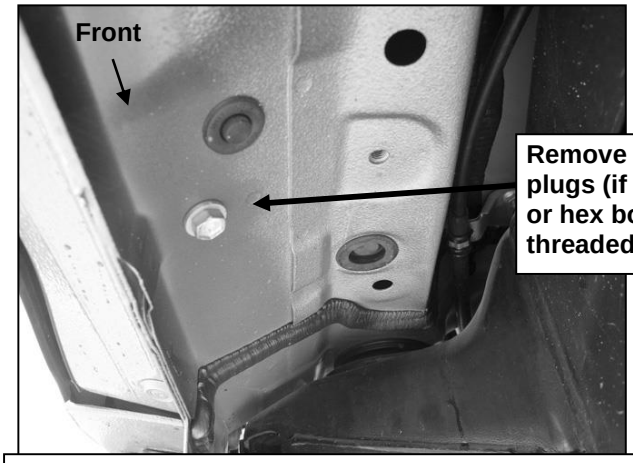


(Fig 1) Driver/Left Front Mounting Location Pictured

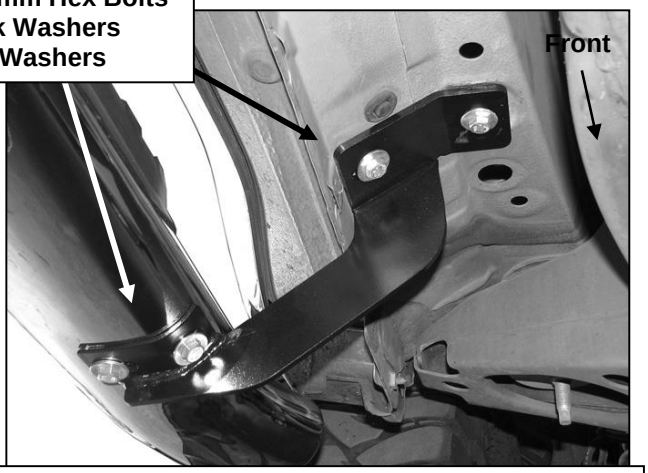


(Fig 2) Driver/Left Front Mounting Location Pictured


There are four sets of threaded holes in the side panel. Starting from the front of the vehicle, use the first, second, and fourth set of holes.

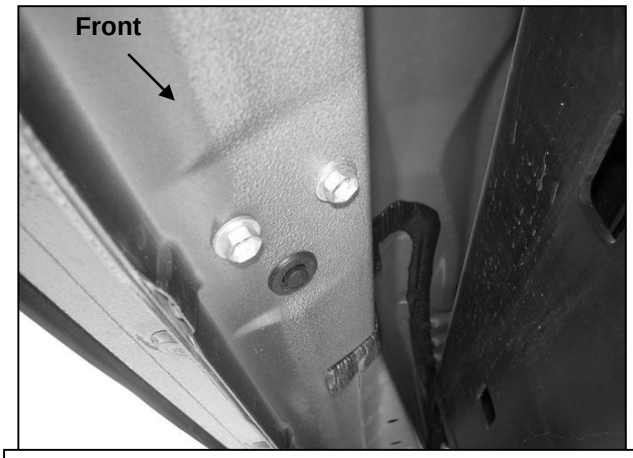

(Fig 3) Driver/Left Center Mounting Location Pictured

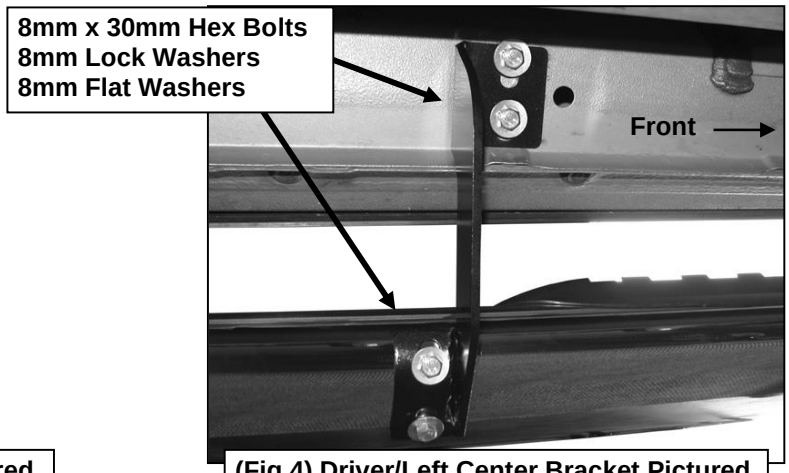

(Fig 4) Driver/Left Center Bracket Pictured

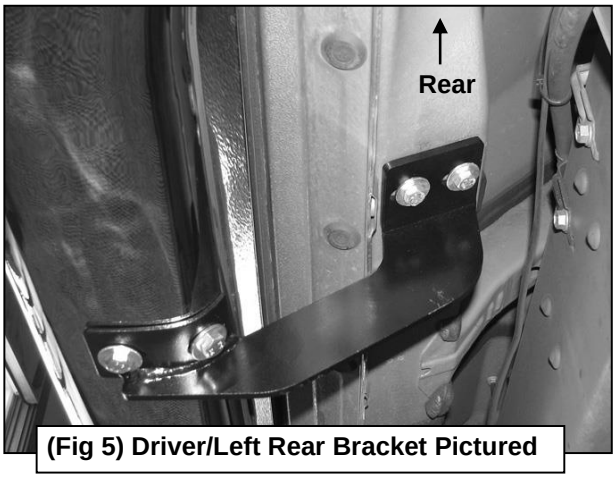

(Fig 5) Driver/Left Rear Bracket Pictured



Complete Installation

trailfortress.com/rough-country-oval-nerf-step-21009