TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 30230 Installation Instructions

2.5-Inch Lift Kit for 2014–2025 Ram 2500 4WD, Part 30230

Part number: 30230

trailfortress.com/rough-country-2-5-inch-lift-kit-30230

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

30200BAG8

# 2014 - Up Ram 2500 2.5” Lift Kit

**⚠NOTICE** Rough Country recommends this system be installed by a certified technician. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read instructions before beginning installation. Check the kit hardware against the Kit Contents List on the last page. Be sure you have all needed parts and know where they go.

## PRODUCT USE INFORMATION

**⚠NOTICE** Do not add, alter, or fabricate any factory or after-market parts to increase vehicle height over the intended height of the Rough Country product purchased. Mixing component brands is not recommended. Rough Country will not be responsible for any product that is altered.

If question exist, please call us @1-800-222-7023 or use our online chat. We will be happy to answer any questions concerning the design, function, and correct use of our products.

**Tools Needed:**

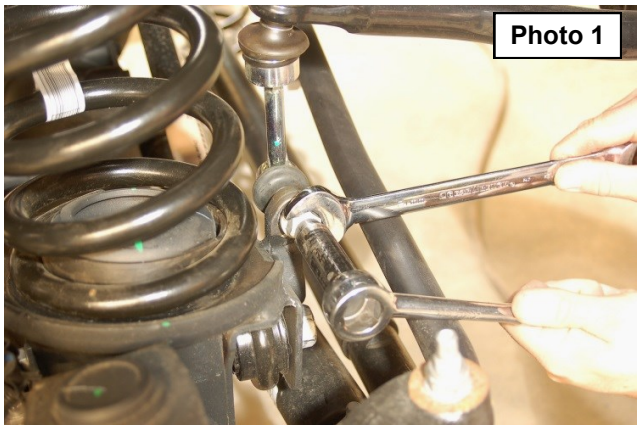
10mm Socket
13mm Socket
21mm Wrench / Socket
9/16” Wrench
7/8” Socket
22mm Wrenches
13/32” Drill
18mm Wrench/Socket

**Torque Specs:**

| Size | Grade 5 | Grade 8 | Class 8.8 | | Class 10.9 | |
|---|---|---|---|---|---|---|
| 5/16” | 15 ft/lbs | 20 ft/lbs | 6MM | 5 ft/lbs | | 9 ft/lbs |
| 3/8” | 30 ft/lbs | 35 ft/lbs | 8MM | 18ft/lbs | | 23 ft/lbs |
| 7/16” | 45 ft/lbs | 60 ft/lbs | 10MM | 32ft/lbs | | 45ft/lbs |
| 1/2” | 65 ft/lbs | 90 ft/lbs | 12MM | 55ft/lbs | | 75ft/lbs |
| 9/16” | 95 ft/lbs | 130 ft/lbs | 14MM | 85ft/lbs | | 120ft/lbs |
| 5/8” | 135 ft/lbs | 175 ft/lbs | 16MM | 130ft/lbs | | 165ft/lbs |
| 3/4” | 185 ft/lbs | 280 ft/lbs | 18MM | 170ft/lbs | | 240ft/lbs |

## INSTALLATION INSTRUCTIONS

1. Chock the rear wheels. Jack up the front of the vehicle and place jack stands directly behind the lower control arm mounts on the frame rails. After the vehicle is on jack stands, position a floor jack underneath the front differential. This is to support the axle and to allow the front axle to droop to remove the stock coil springs. Remove the tires and wheels with a 7/8” socket.
2. Remove the sway bar link with a 10mm socket and a 21mm wrench. **See Photo 1**.
3. Remove the lower shock bolt using a 21mm socket. Note this bolt has a flag nut. Retain hardware for reuse.
4. Remove the push pin wire tie from the box on the axle for movement to remove the coil.
5. Remove the brake line from the mount on top of the radius arm using a 13mm socket.


Photo 1