TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 4208 Installation Instructions

Rear Wheel Well Liners for GMC Sierra (2007-2013)

Part number: 4208

trailfortress.com/rear-wheel-well-liners-gmc-sierra-rough-country-4208

Scan for fitment, price and install help

CHEVY / GMC 1500 (07-13) and HD MODELS (11-14)
INSTALLATION INSTRUCTIONS
Rear Wheel Well Inner Liner
92420700 - 92420800

List of Contents:

Qty.

1 Pc. Right Hand Inner Wheel Well Liner

1 Pc. Left Hand Inner Wheel Well Liner



1 Pc. Installation Kit
- 8 pc. Black Self-taping Screws
- 6 pc. Plastic Push Pin
- 1 pc. Installation Instructions.



Tools Required	**Preparations:**	**Technical Support phone line:**
1 Drill with Socket/Driver of 5/16" (8mm)	Clean the interior panels of the rear Wheel house. Note: Tire removal is optional for installation	

Instructions:


Installation time estimated: 15 min.

1. PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.


NOTE: One person can do the installation.

WHEEL WELL LINER

2. Starting on the right side, mount the wheel well liner marked as (RH) on the inner panel of the wheel house. (See Fig. 1)

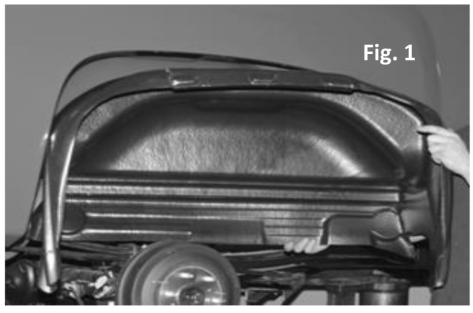


3. Be sure that the upper section of the plastic liner is mounted behind the flange and around the wheel well house edge. (See fig. 2)

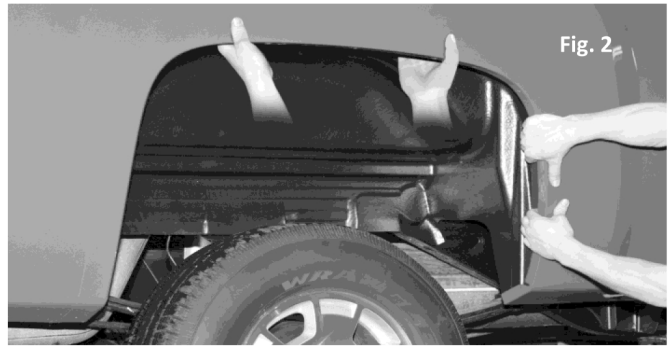


4. Be sure that the 3 holes drilled on the plastic liner are aligned with the 3 pre-drilled holes on the top edge of the wheel house, and install one plastic push pin in each hole. (See Fig. 3)



5. Using a drill with socket/driver 5/16" (7mm) , Install one self-taping screw in each pre-drilled hole of the plastic liner and into the wheel house sheet metal . (See fig. 4 and 5)

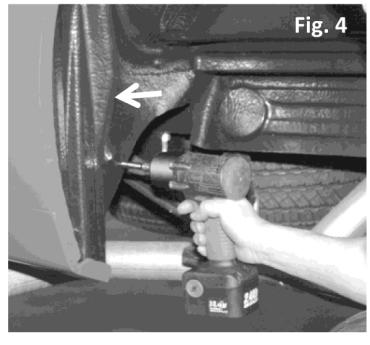

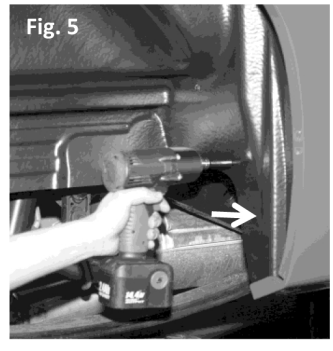

6. Repet the procedure of the steps 2, 3, 4, and 5 for the left side.

Care and Maintenance Recommendations

To protect the appearance of this product, wash with soap and water

trailfortress.com/rear-wheel-well-liners-gmc-sierra-rough-country-4208