TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 4301 Installation Instructions

Rear Fender Liners for Nissan Frontier Crew Cab (2022-2025)

Part number: 4301

trailfortress.com/rear-fender-liners-nissan-frontier-crew-cab-rough-country-4301

Scan for fitment, price and install help

921430100

ROUGH COUNTRY
SUSPENSION SYSTEMS®

NISSAN 2022 Frontier Rear Fender Panel Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

Kit Contents:
Dr Side Rear Panel x1
Pass Side Rear Panel x1

Tools Needed:
Drill
17/32" Drill Bit
1/2" Socket/Wrench
Nutsert Tool (Recommended)

Hardware Included:
5/16" Button Head Bolts x4
5/16" Nut Insert x4
Spacer Sleeves x4

For Nutsert Installation
5/16" x 1.25" Bolt x1
3/8" Nut x1
5/16" Flat Washer x1





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs


INSTALLATION INSTRUCTIONS


1. Place the panel on the rear bump stop for alignment and mark through the hole with a paint pen. **See Photo 1**.
2. Drill the marked holes using a 17/32” drill bit. **See Photo 2**.

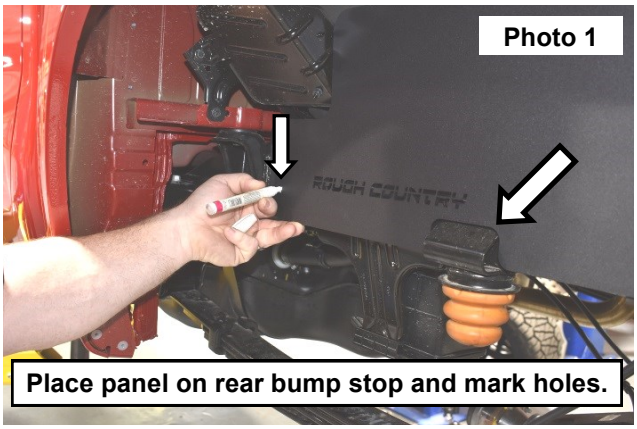

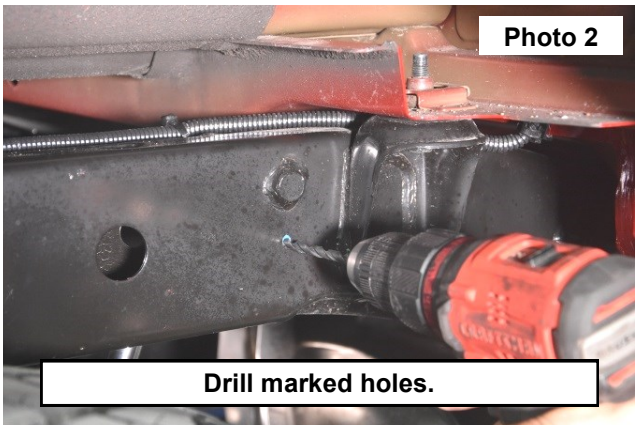



3. Install supplied nut inserts using a nutsert tool or supplied nutsert installation hardware. **See Photo 3** and **Photo 4**.

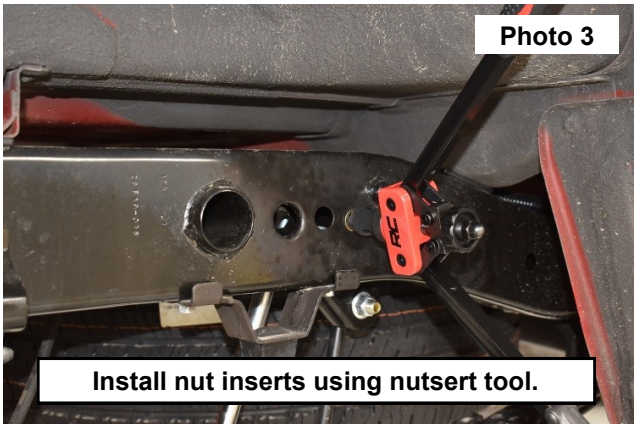

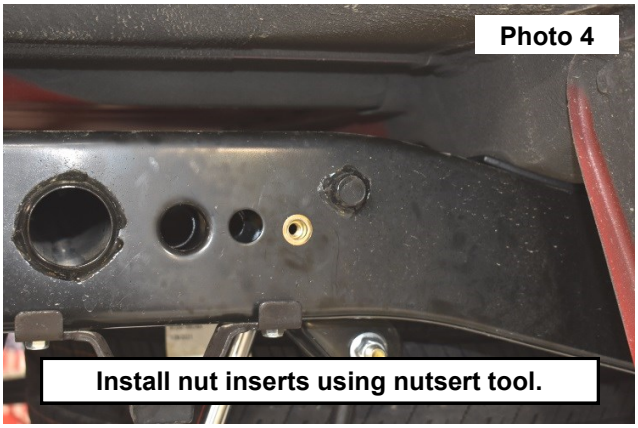

4. Place the supplied bolts and spacer on the back side of the panel. **See Photo 5**.
5. Place the panel against the frame and secure using a 3/16” Allen wrench. **See Photo 6**.

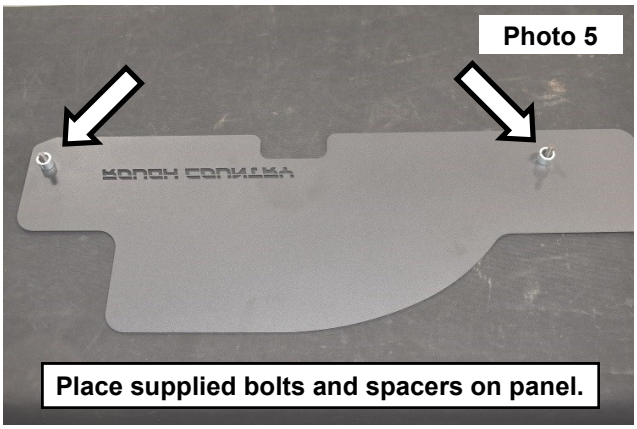

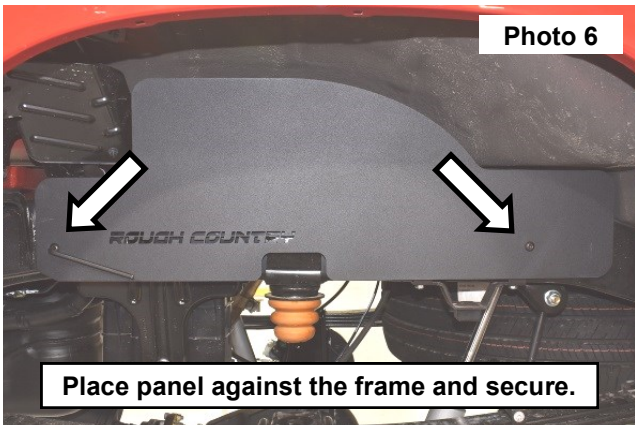

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.