Rough Country 44001 Installation Instructions

RPT2 Running Boards with 6.75-Inch Step for GM 1500 Crew Cab

Part number: 44001

trailfortress.com/rough-country-rpt2-running-boards-44001

Scan for fitment, price and install help

924400100

GM 2014-18 1500 Crew Cab Raptor Style Step Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Driver Side Step Rail x1
Pass Side Step Rail x1
Mounting Brackets x7
Pass Support bracket x2

TOOLS NEEDED:
10mm Wrench or Socket
13mm Wrench or Socket

HARDWARE INCLUDED:
Double Bolt Plate x8
6mm Flat Washers x16
6mm Lock washers x16
6mm Hex Nuts x16
8mm x 25mm Hex Bolts x17
8mm Lock Washers x 17
8mm Flat Washers x17
8mm Body Clips x15
8mm Lock Nut x1

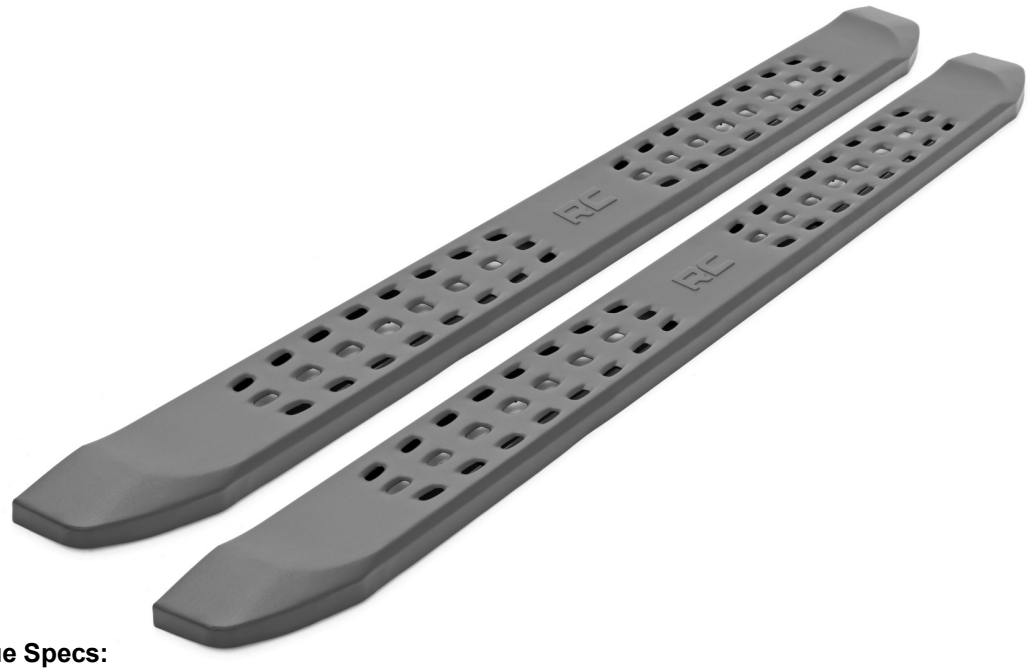

Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

trailfortress.com/rough-country-rpt2-running-boards-44001

INSTALLATION INSTRUCTONS

1. Locate the (3) step brackets for the drivers side of the vehicle. **See Photo 1.**
2. Locate the 8mm clip and install onto the lower pinch weld of the rocker. Then place the front bracket onto the rocker and secure using (2) of the supplied 8mm bolts. **See Photo 2.**

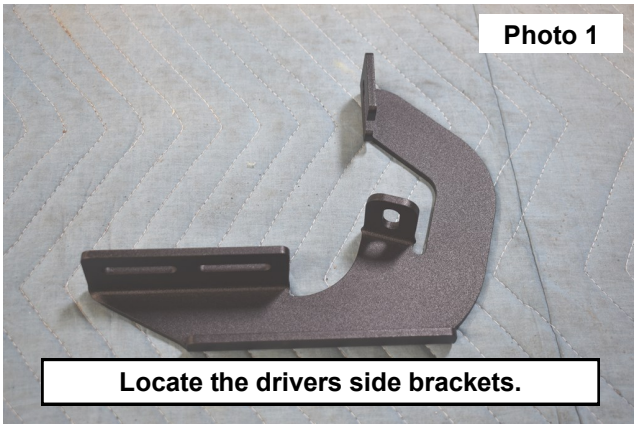

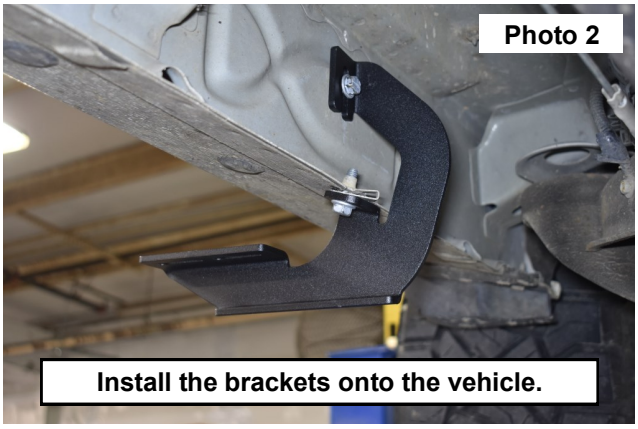

3. Place (2) 8mm clips onto the center and rear mounting locations on the lower pinch weld of the rocker. Then secure the center and rear brackets to the vehicle using (2) of the supplied 8mm bolts. **See Photo 3.**
4. Tighten the (2) bolts using a 13mm wrench or socket. **See Photo 4.**

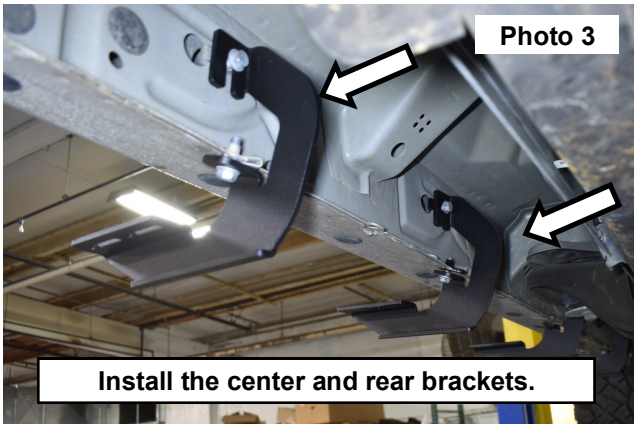

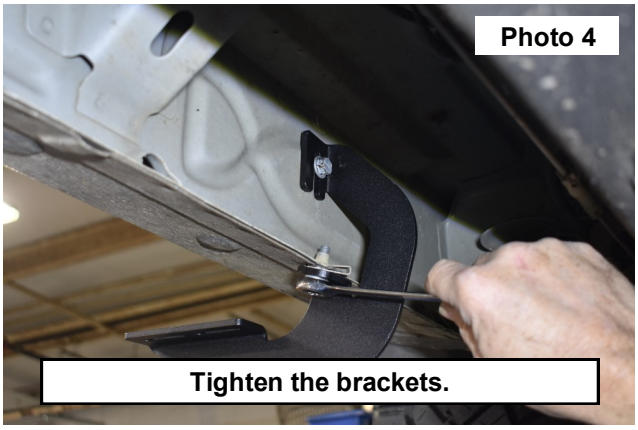

5. Locate (3) bolt plates. **See Photo 5.**
6. Install the (3) bolt plates into the channel of the step. **See Photo 6.**

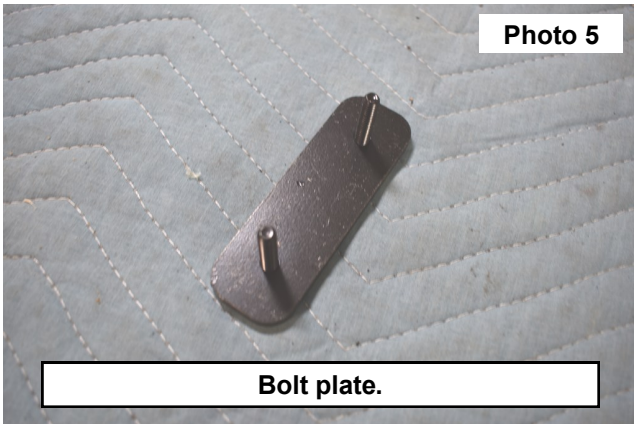

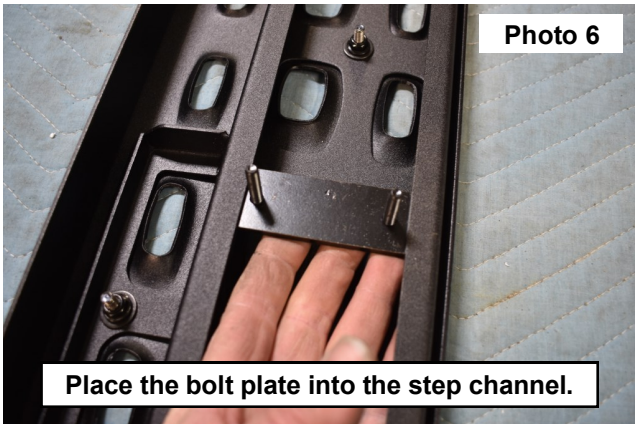

7. Place the step onto the mounts. Slide the bolt plates over the mount and place the bolt plate into the slotted holes. **See Photos 7 and 8.**

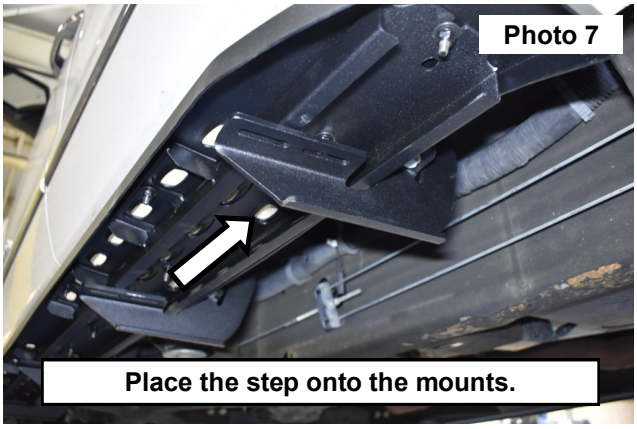

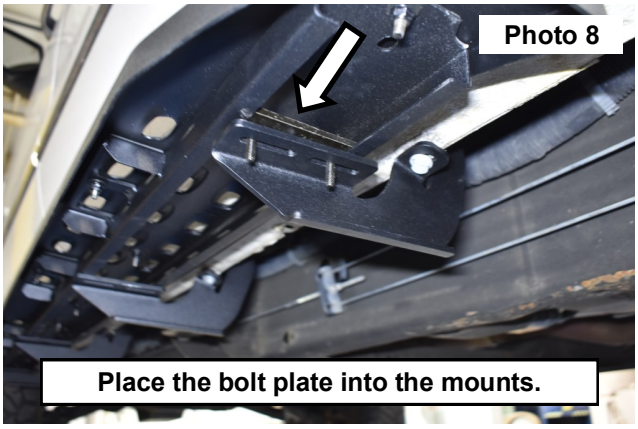

8. Secure the step and bolt plate using (2) of the supplied 6mm flat washers (2) 6mm lock washers and (2) 6mm nuts for each of the (3) mounting brackets. **See Photo 9.**
9. Center the step plate into the desired position. **See Photo 10.**

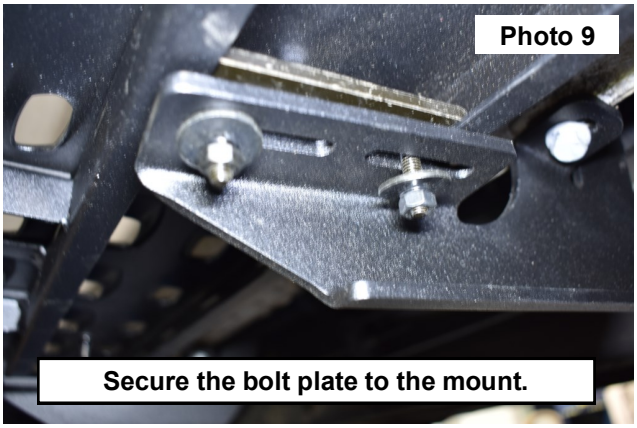

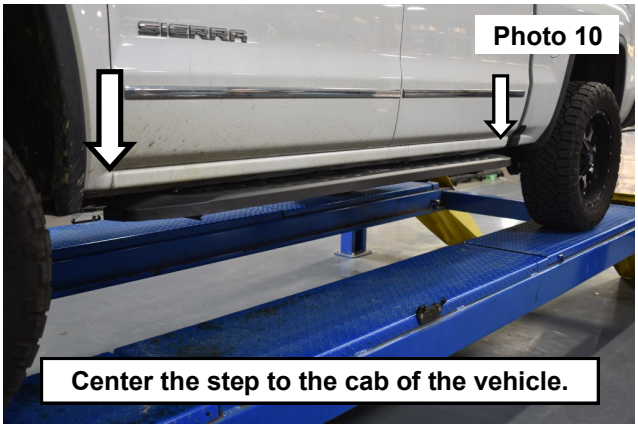

10. Adjust the inside of the step plate within a 1/4” away from the cab of the vehicle. **See Photo 11.**
11. Tighten the hardware using a 10mm wrench on each of the (3) mounting brackets. **See Photo 12.**

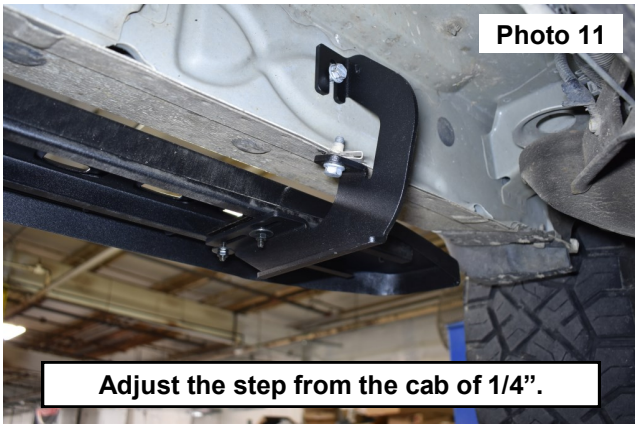

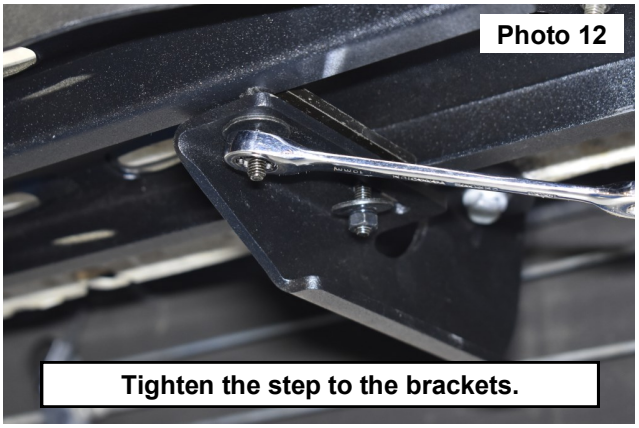



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.