TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 4609A Installation Instructions

Rear Wheel Well Liners (Rough Country 4609A)

Part number: 4609A

trailfortress.com/rear-wheel-well-liners-rough-country-4609a

Scan for fitment, price and install help

1234

9214609A0

ROUGH COUNTRY SUSPENSION SYSTEMS®

WARNING: *This product contains a chemical known to the State of California to cause Cancer and Reproductive Harm. For more information, go to* ***www.P65Warnings.ca.gov.***

2009-2018 RAM 1500 2WD/4WD
2018-2024 RAM 1500 CLASSIC 2WD/4WD
2010-2024 RAM 2500 2WD/4WD
REAR WHEEL WELL LINER

PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.

NOTE: FOR EASIER INSTALLATION, REMOVE THE TIRE.

INCLUDED IN HARDWARE KIT:

1. 

Driver Side & Passenger Side Liner
1 pr

2. 

U Clip
16 pcs

3. 

Truss Head Screw
16 pcs

4. 

Plastic Retainer
4 pcs

TOOLS NEEDED:

8mm Socket
#2 Phillips Screwdriver
Pliers or Pry Tool
Awl

PREPARATIONS:

Please clean the interior panels of the rear wheel well.


If vehicle comes equipped with factory wheel well liners, these will need to be removed, along with any fasteners involved, including inner clips.

Rev 1 05-01-24

REAR WHEEL WELL LINER INSTALLATION



Using an 8mm socket, remove and retain 2 factory fasteners from mud guard.

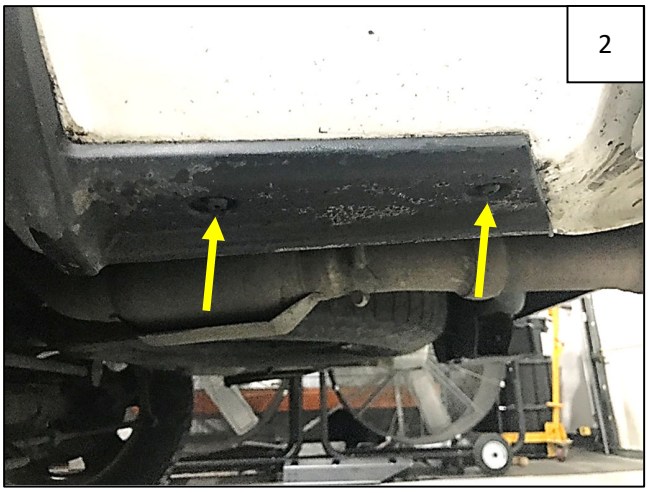

Use a pry tool to disengage 2 plastic retainers at underside of mudflap. Remove and discard mud guard.



Using an 8mm socket, remove and retain 1 factory fastener from location shown (if there are any other fasteners in the fender lip, remove these as well).



Install 5 supplied “U” Clips over each hole along outer edge of Rear Wheel Well Liner. Flat side of clip will face *out into wheel well* when part is installed.



Clip locations.



If your vehicle does not have a rigid plastic rear guard (as shown here), install 3 more “U” clips as shown in next Step. If your vehicle has the plastic rear guard, skip to Step 8.



Clip locations for vehicles that do not have a rigid plastic rear guard.



Slide the Rear Wheel Well Liner behind wheel at rear of vehicle. It is helpful to tilt the liner at a 45-degree angle at front of wheel and then straighten it out once it's behind the wheel.



Tuck Rear Wheel Well Liner behind sheet metal at lower edges, and under metal fender lip at all other outward facing edges.



Install a supplied Plastic Retainer through each of the 2 holes located at the back of the wheel well liner.



Install a supplied Truss Head screw through holes in fender lip and into clips, including the 3 rearward holes that may have factory clips. Use an awl to help locate clip holes if needed.



Installation is complete. Repeat for other side.