TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 51069 Installation Instructions

3rd Brake Light Extension for Ford Bronco 4WD (2021-2025)

Part number: 51069

trailfortress.com/rough-country-3rd-brake-light-extension-51069

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

FORD 2021-22 Bronco Sasquatch Rear Brake Light Relocation

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

Kit Contents:
Brake Light Relocation Plate x1
Wheel Spacer x1

Tools Needed:
T30 Torx Bit
3/16" Allen Wrench
1/2" Wrench

Hardware Included:
5/16 x 1" Button Head Bolts x4
5/16" Flange Lock Nuts x4

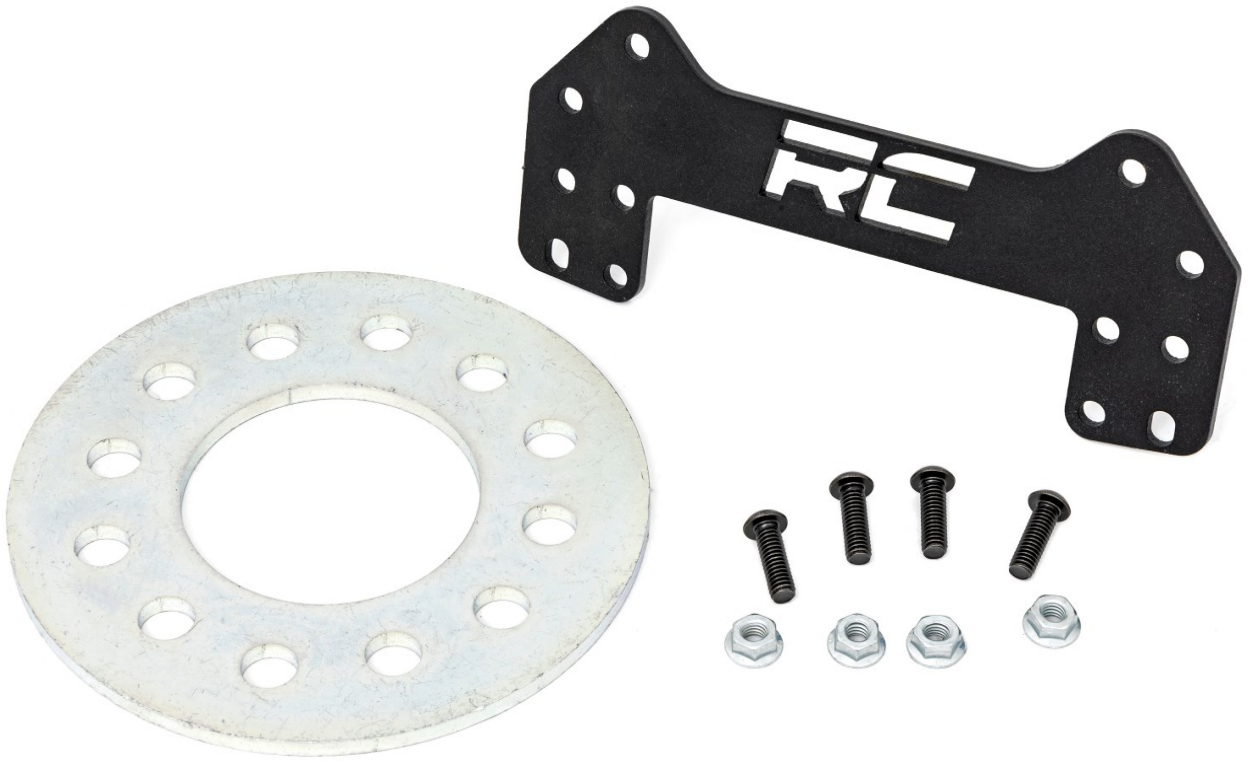

Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTIONS

1. Remove the spare tire. **See Photo 1**.
2. Remove the 4 bolts holding the stock brake light bracket using a T30 Torx bit. Gently rest the brake light bracket behind the tire carrier. **See Photo 2**.

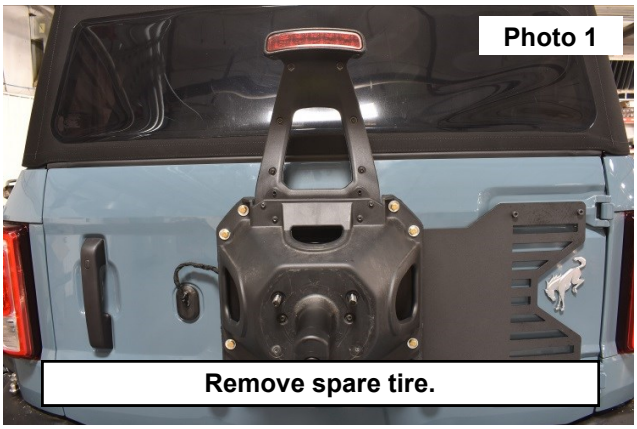

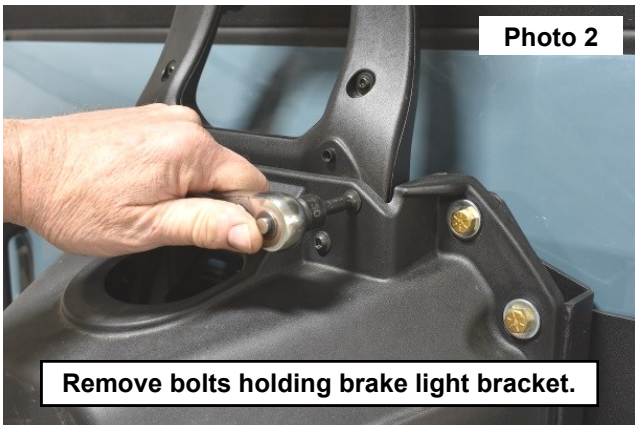

3. Install the RC relocation plate **with just 2 of supplied lower bolts at this time** and 2 flange nuts. Tighten using a 3/16” Allen wrench and 1/2” wrench **See Photo 3**.
4. Reinstall the stock brake light bracket to the RC plate with the 4 stock bolts. **See Photo 4**.

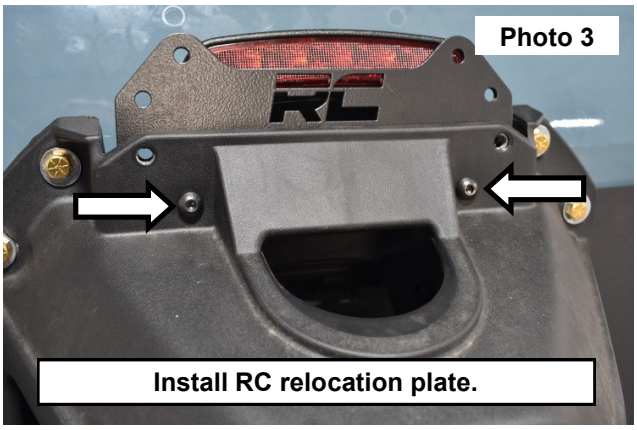

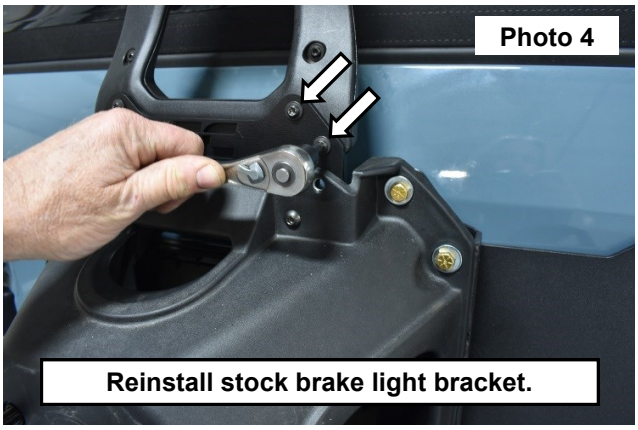

5. Install the other 2 button bolts and flange nuts using 3/16” Allen and 1/2” wrench. **See Photo 5**.

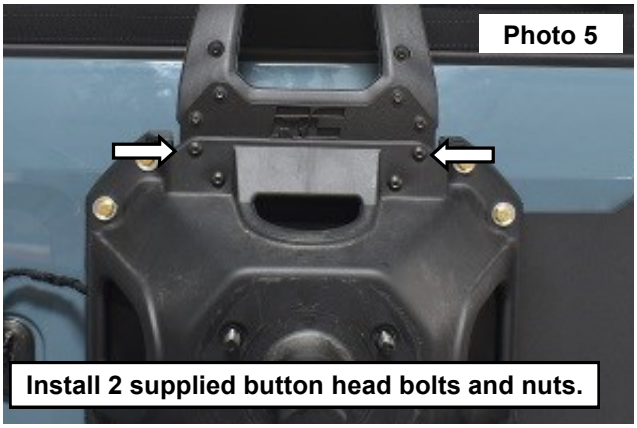

6. **Install the wheel spacer** and reinstall the spare tire.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.