TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 699005 Installation Instructions

Vertex 2.5 Adjustable Rear Shocks for Ford F-250 4WD (2005-2025)

Part number: 699005

trailfortress.com/rough-country-vertex-2-5-adjustable-rear-shocks-699005

Scan for fitment, price and install help

690005

ROUGH COUNTRY SUSPENSION SYSTEMS®

Ford 05-18 F250 Rear Vertex 2.5 8 Step Adjustable Shock

Thank you for choosing Rough Country for your suspension needs.

Rough Country recommends a certified technician installs this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read all the instructions before beginning the installation. Check the kit hardware against the parts list. Be sure you have all the needed parts and understand where they go. Also please review the tools needed list and make sure you have needed tools.

PRODUCT USE INFORMATION

⚠WARNING Braking performance and capabilities are decreased when significantly larger/heaver tires and wheels are used. Take this into consideration while driving. Also, speedometer recalibration is necessary when larger tires are installed.

Do no add, alter, or fabricate any factory or after-market parts which increase vehicle height over the intended height of the Rough Country product purchased. Mixing component brands, lifts, and/or combining body lift with suspension lifts voids all warranties. Rough Country makes no claims regarding lifting devices and excludes any and all implied claims. We will not be responsible for any product that is altered.

⚠NOTICE **NOTICE TO DEALER AND VECHICLE OWNER**

Any vehicle equipped with any Rough country product must have the "Warning to Driver" decal installed on the sun visor or dash. The decal is to act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics. **INSTALLING DEALER**—It is your responsibility to install the warning decal and to forward these installation instructions on too the vehicle owner for review and to be kept in the vehicle for its service life.

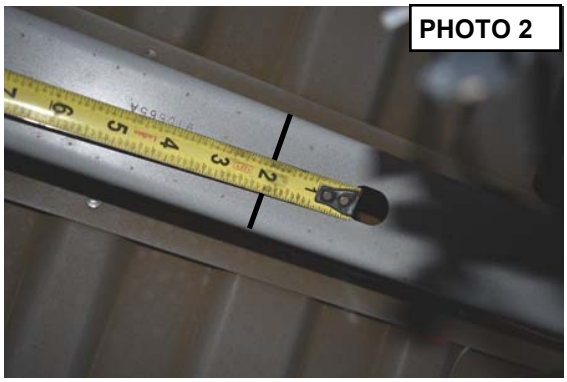
Kit Contents:
1-Vertex 2.5 Adj Shock
1-14mm ID Sleeve (17-18 Models)
1-12mm ID Sleeve (05-16 Models)

Tools Needed:
15mm wrench
18mm wrench
19mm wrench

INSTALLATION INSTRUCTIONS

1. Remove the rear shocks from the upper and lower mounts. Retain hardware for reuse.
2. Un-clip the push pins holding the wiring harness to the underside of the bed. **See Photo 1.**
3. Using the current mounting hole, measure 2" (towards the inside of the truck) and mark. **See Photo 2.**


PHOTO 1


PHOTO 2