TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 699014 Installation Instructions

Vertex 2.5 Adjustable Rear Shocks for 2005–2023 Toyota Tacoma, Part 699014

Part number: 699014

trailfortress.com/rough-country-vertex-2-5-adjustable-rear-shocks-699014

Scan for fitment, price and install help

TOYOTA 2005-21 Tacoma Rear Vertex Shocks

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

Kit Contents:	**Tools Needed:**	**Hardware Included:**
Driver Rear Vertex Coilover x1	13mm Socket/Wrench	8MM-1.25X25MM Bolts x4
Pass Rear Vertex Coilover x1	17mm Socket/Wrench	8MM-1.25 Nuts x4
Reservoir Mounting Bracket x2	Flathead Screwdriver	8MM Washers x4



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS

1. Remove the upper and lower nuts to the stock shock using a 17mm socket/wrench. **See Photo 1 and Photo 2**.

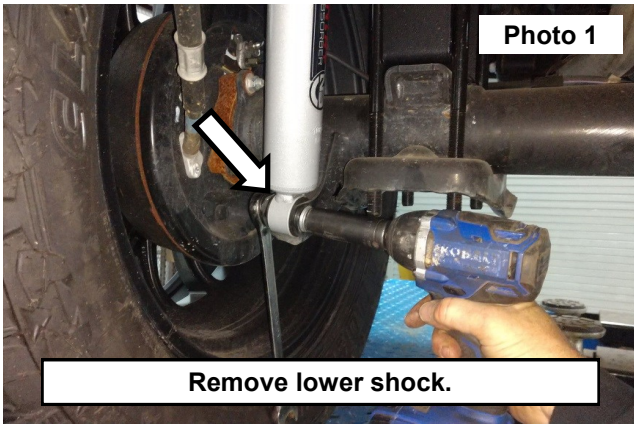

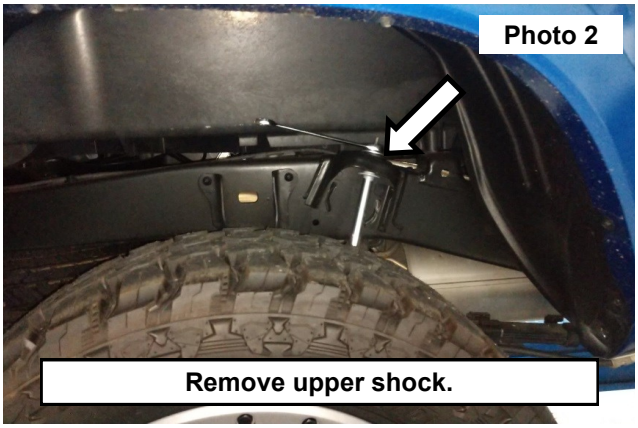

2. Install the Vertex upper shock using stock hardware. **See Photo 3**.
3. Install the Vertex lower shock using stock hardware. **See Photo 4**.



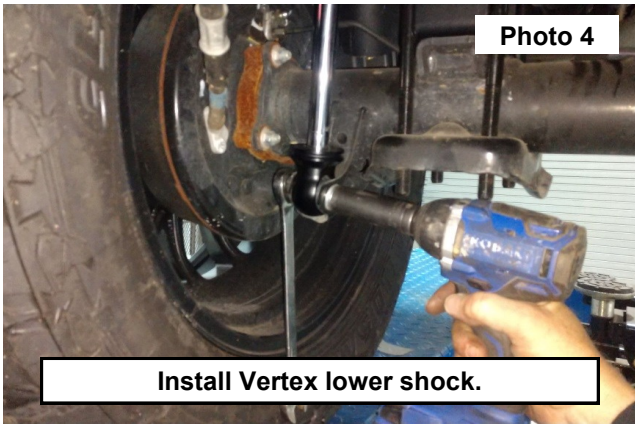

4. Install the reservoir mount bracket on the top of the frame rail using supplied bolts and 13mm wrench **See Photo 5**.
5. Secure the reservoir mount bracket using the supplied nuts and washers on the underside of frame. **See Photo 6**.

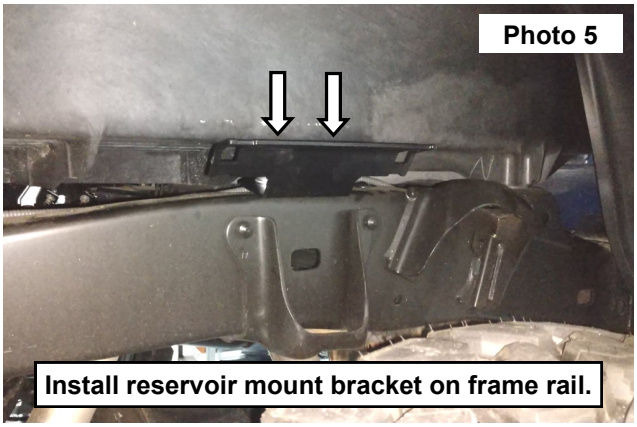

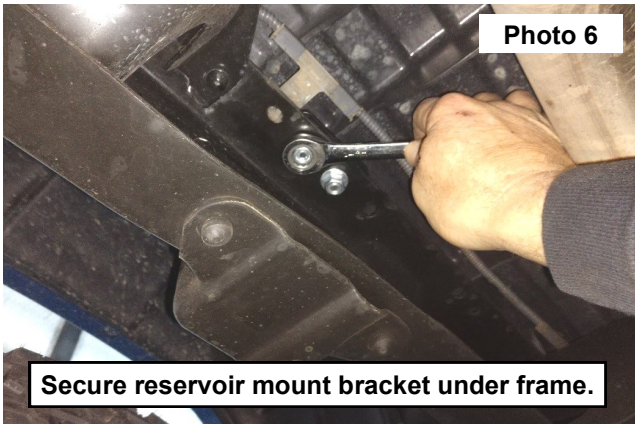

6. Install the reservoir on the mount bracket using the supplied worm gear hose clamp. **See Photo 7**.

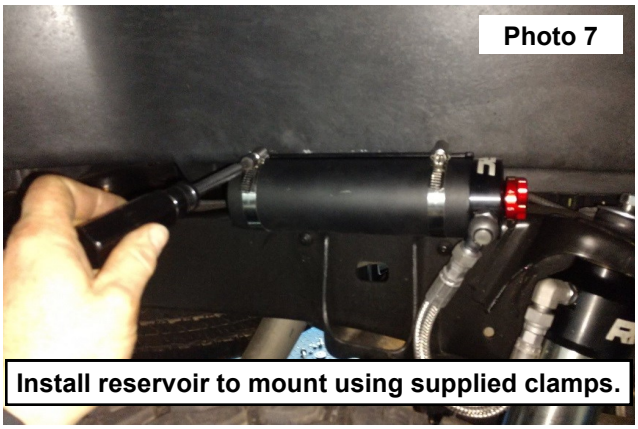



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.