TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 699044 Installation Instructions

Vertex 2.5 Adjustable Rear Shocks for 2021–2025 Ford Bronco 4WD

Part number: 699044

trailfortress.com/rough-country-vertex-2-5-adjustable-coilovers-699044

Scan for fitment, price and install help

FORD 2021-22 Bronco Rear Vertex Install

Thank you for choosing Rough Country for all your vehicle needs.
Rough Country recommends a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read instructions before beginning installation. Check the kit hardware against the parts list. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

PRODUCT USE INFORMATION

⚠WARNING The taller a vehicle is, the easier it will roll. We strongly recommend, because of rollover possibility that seat belts and shoulder harnesses should be worn at all times. Avoid situations where a side rollover may occur.

⚠WARNING Generally, braking performance and capability are decreased when larger/heavier tires and wheels are used. Take this into consideration while driving. Do not add, alter, or fabricate any factory or after-market parts to increase vehicle height over the intended height of the Rough Country product purchased. Mixing component brands is not recommended.

Rough Country makes no claims regarding lifting devices and excludes any and all implied claims. We will not be responsible for any product that is altered. If questions exist we will be happy to answer them concerning the design, function, and correct use of our products.

⚠NOTICE **DEALER AND VEHICLE OWNER**

Any vehicle equipped with any Rough Country product should have a “Warning to Driver” decal installed on the inside of the windshield or on the vehicle’s dash. The decal should act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics.

Kit Contents:
Rear Vertex Struts x2
Inner Reservoir Brackets x2
Driver Reservoir Bracket x2
Pass Reservoir Bracket x2

Tools Needed:
10mm Socket/Wrench
15mm Socket/Wrench
17mm Socket/Wrench
18mm Socket/Wrench
19mm Socket/Wrench
21mm Socket/Wrench

Hardware Included:
10mm-1.5 Bolts x6
10mm Flat Washers x6
6mm Clips x4
6mm x 1.0-20 Hex Bolts x4

Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

REAR INSTALLATION INSTRUCTIONS

1. Jack up the rear of the vehicle and place on jack stands. Remove the rear wheels.
2. Remove the track bar using a 24mm socket/wrench. **See Photo 1**.
3. Support the axle and remove the lower strut bolt using a 1-1/16” socket/wrench. **See Photo 2**.

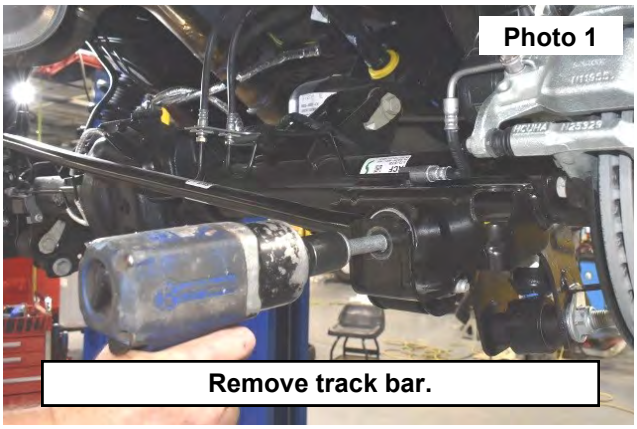

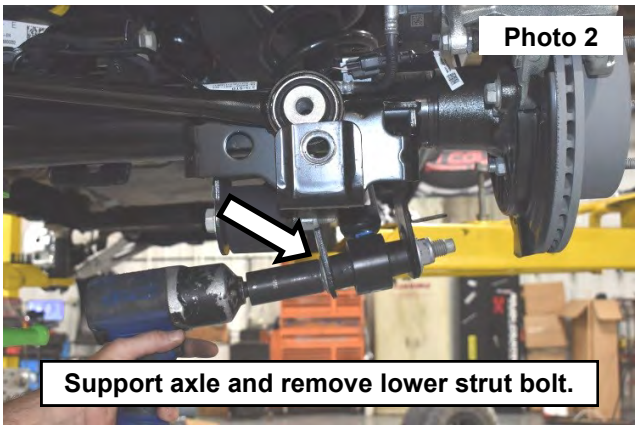

4. Remove the ABS/emergency wiring harness from the differential using an 8mm socket/wrench. **See Photo 3**.
5. Remove the clip holding the inner fender using a screw driver. **See Photo 4**.

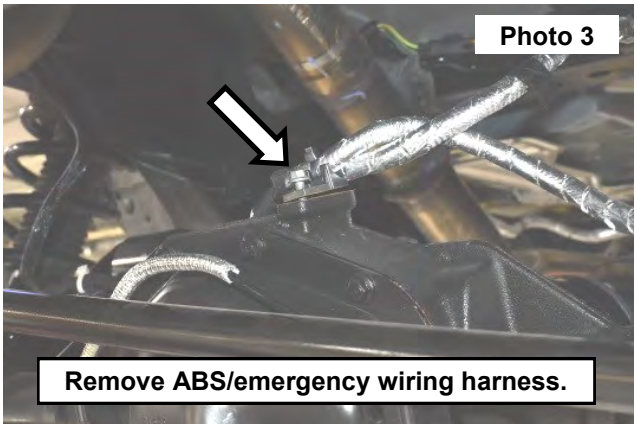

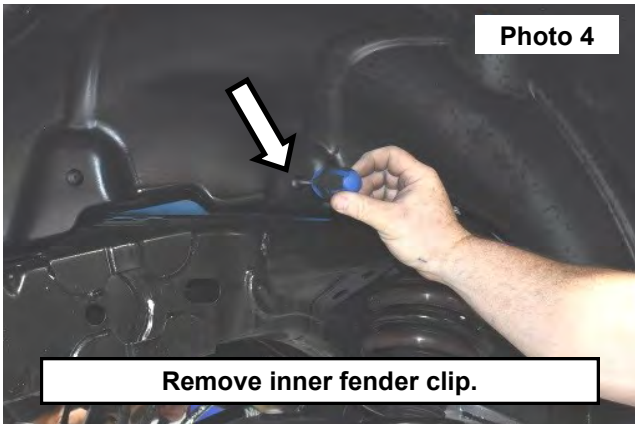

6. Remove the upper strut nuts using a 15mm wrench and remove strut from vehicle. **See Photo 5**.
7. Install the Vertex strut into the upper mount and secure using the supplied 10mm bolts and 10mm Washers. **See Photo 6**.

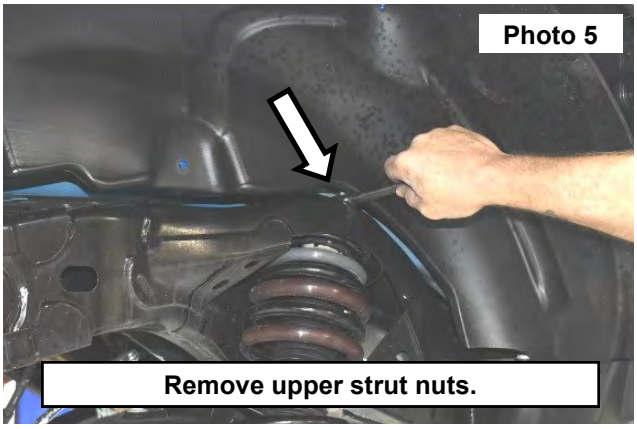

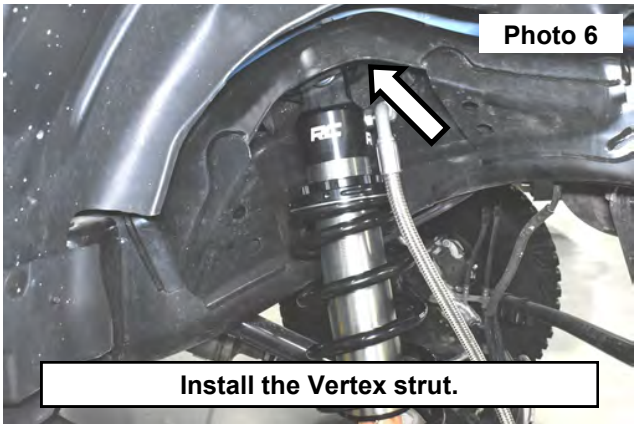

8. Raise the axle and install the OE lower strut bolt. **See Photo 7**.
9. Remove the push pins front he fender well liner. **See Photo 8.**

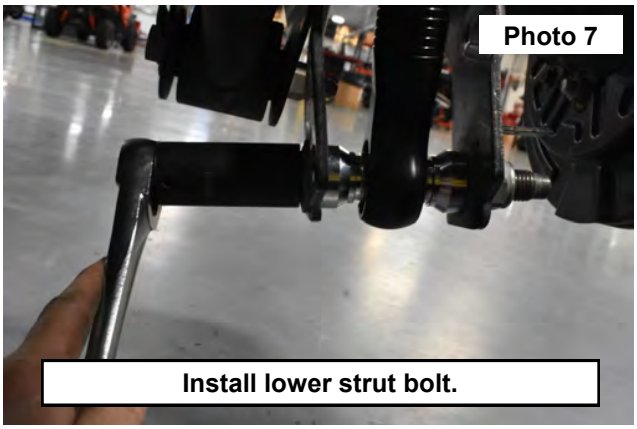

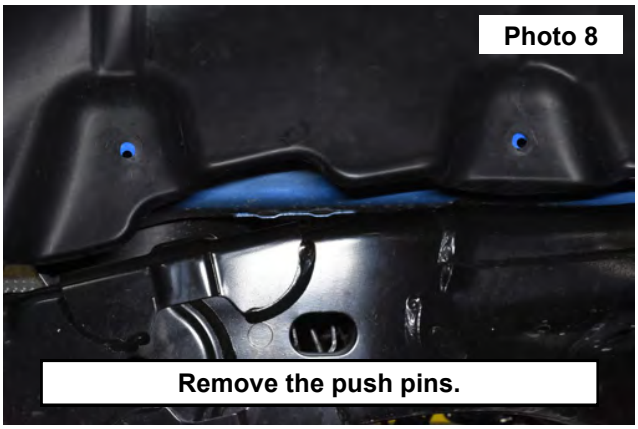

10. Place the (2) clips onto the inner Reservoir bracket. **See Photo 9.**
11. Place the bracket behind the body and align the clips with the holes in the fender liner. Then install the Reservoir bracket and secure it using the supplied bolts and washers. **See Photo 10.**

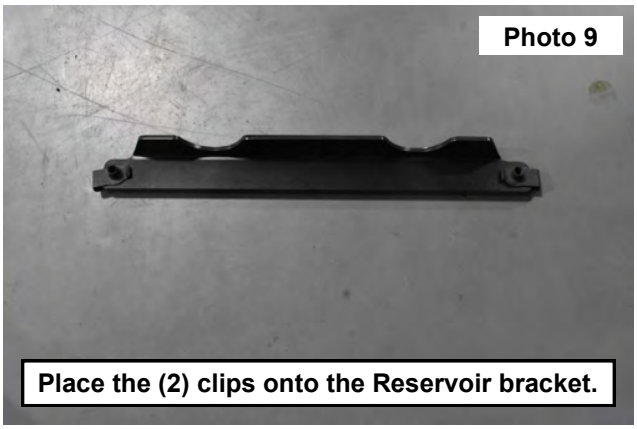

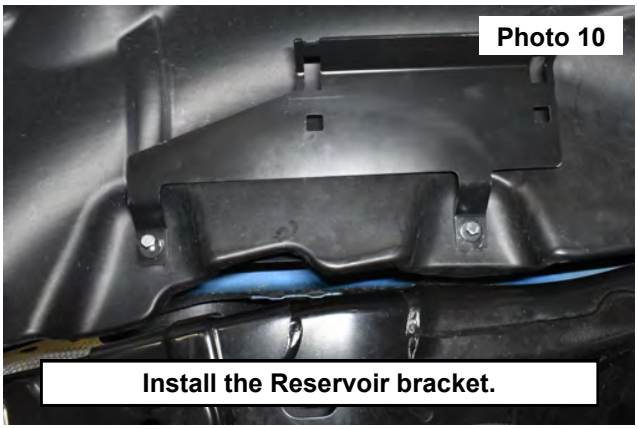

12. Secure the Reservoir to the bracket using the supplied clamps. **See Photo 11.**
13. Adjust hose orientation if needed with light pressure. **See Photo 12.**





14. Reinstall stock hardware in reverse order.
15. Put on the wheels and lower.
16. Tighten the lower strut nut on the ground using a 1-1/16” socket/wrench.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

