TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 70625 Installation Instructions

30-Inch Chrome Series LED Grille Kit for Silverado/Sierra 1500

Part number: 70625

trailfortress.com/rough-country-led-light-kit-70625

Scan for fitment, price and install help

927062000

ROUGH COUNTRY SUSPENSION SYSTEMS®

70620BAG

# 2014-16 GM 1500 30” LED Behind Grille Mount

**Thank you for choosing Rough Country for all your lighting needs.**

**NOTICE** Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

**NOTICE** Only fits **2014-16 GM 1500** models.



**Tools Needed:**

7mm Socket
10mm Socket/Wrench
Flat Screwdriver
9/16” Wrench
9/16”Socket
1/2” Wrench
1/2” Socket

**Kit Contents**

(4) Grille Mount Brackets
(2) 30” Curved LED Brackets
(1) 70620BAG
Instructions
(1) 70620BAG2
(12) 3/8” Flat Washers
(6) 3/8” Nylock Nuts
(6)3/8” x 1” Bolts
(8)5/16” Flat Washers
(4)5/16” Nylock Nuts
(4)5/16” x .75” Bolts

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

1. Park the vehicle on a smooth level surface.
2. **NOTICE** Fender flares will need to be removed. GMC models will need the fender trim removed.
3. Using a 7mm socket, remove the bolts, from inside the fender well, holding the upper fascia. Save for reuse. **See Photo 1.**
4. Remove the upper bumper fascia by gently pulling from front of truck. **See Photo 2.**







5. Using a flat screwdriver remove the push pins from the radiator cover. Save for reuse. **See Photo 3.**
6. Remove the radiator cover from the truck. **See Photo 4.**







7. Using a 10mm socket, remove the (4) upper grille mounting bolts. Save for reuse. **See Photo 5.**
8. Using a 10mm socket, remove the lower grille mounting bolts. Save for reuse. **See Photo 6.**




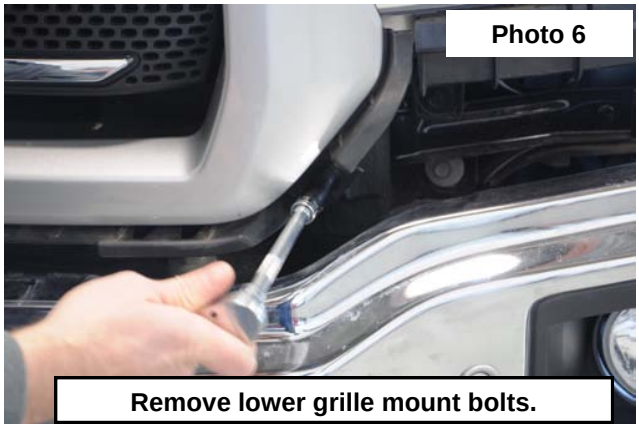

8. Remove the grille by gently pulling from front of truck. **See Photo 7.**
9. Install supplied grille mount with supplied 3/8” x 1” bolts and washers behind radiator core support. **See Photo 8.**

**Photo 7**

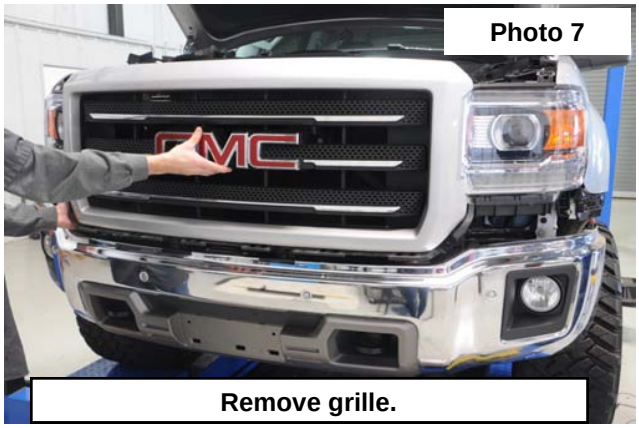


**Remove grille.**

**Photo 8**

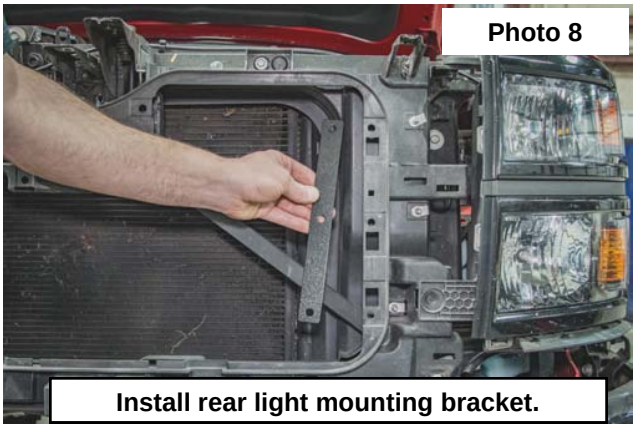

**Install rear light mounting bracket.**

10. Install the supplied grille mount, with tabs down, on the front of the radiator core support. **See Photo 9.**
11. Place supplied 3/8” nylock nuts and washers on botls and tighten using a 9/16” wrench and socket. **See Photo 10.**

**Photo 9**

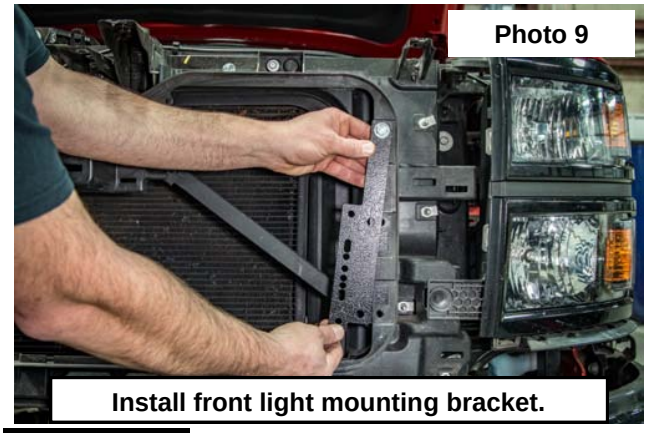

**Install front light mounting bracket.**

**Photo 10**

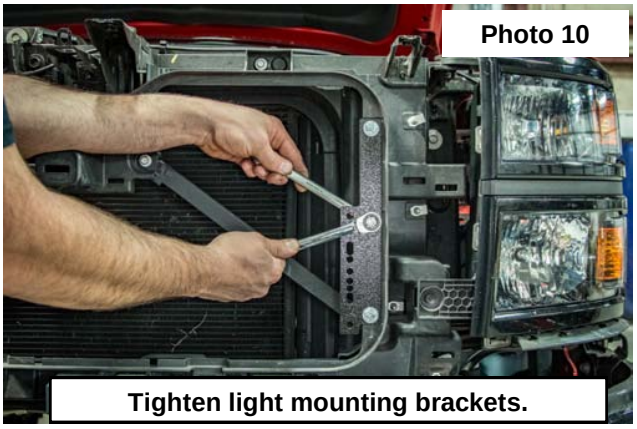

**Tighten light mounting brackets.**

13. **NOTICE** **See Photo 11 for model specific mounting.**
14. Install the supplied light mounting brackets on the correct mounting for your make of truck, using the 5/16” x .75” bolts, washers and nylock nuts. **See Photo 12.**

**Photo 11**

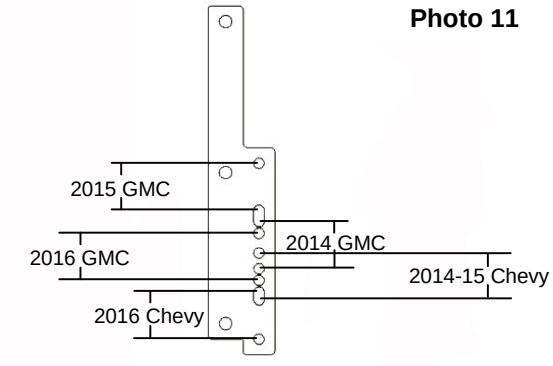


**Photo 12**

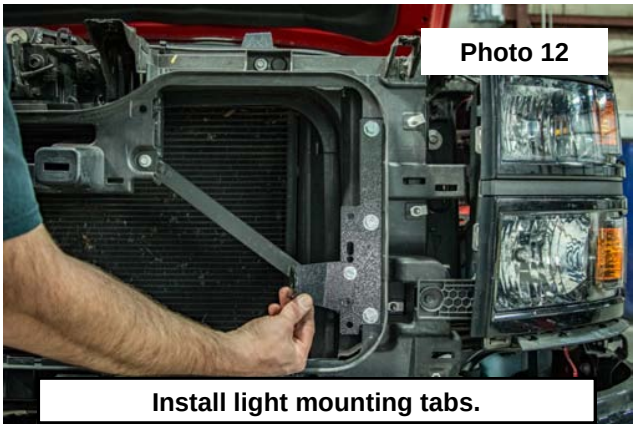

**Install light mounting tabs.**

15. Attach 5/16” washers and nylock nuts, do not tighten. **See Photos 13 & 14.**




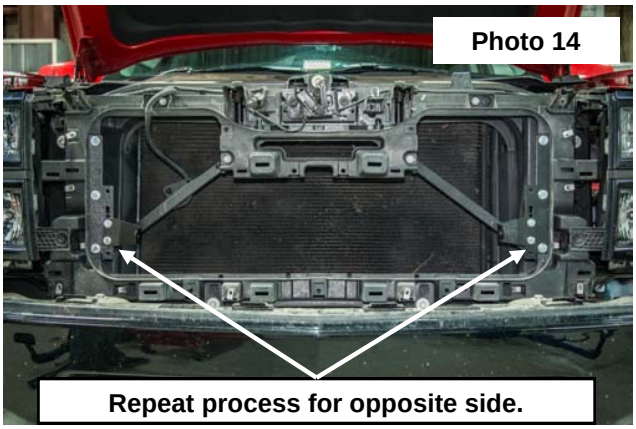


16. Place light between mounting brackets with supplied hardware. **See Photo 15.**
17. Set desired position of the light and tighten using suppied Allen wrench. **See Photo 16.**




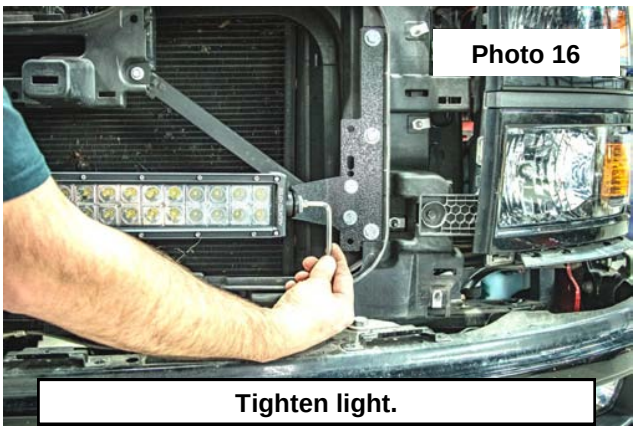


18. Tighten 5/16” hardware using a 1/2” wrench and socket. **See Photo 17.**
19. Reinstall grille. Connect light wiring harness using supplied instructions.

