TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 70689 Installation Instructions

2-Inch Black Series LED Fog Light Kit for GMC Sierra 1500

Part number: 70689

trailfortress.com/2-inch-black-series-led-fog-light-kit-gmc-sierra-1500-rough-country-70689

Scan for fitment, price and install help

921706880

2014-15 GMC 1500 LED Fog Light Mount

Thank you for choosing Rough Country for all your suspension and lighting needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

KIT CONTENTS

(2) 2” LED Lights
(1) Dr Inner Light Bracket
(1) Dr Outer Light Bracket
(1) Pass Inner Light Bracket
(1) Pass Outer Light Bracket
(2) LED Fog Light Face Plates
(8) Stainless Bolts
(8) Flat Washers
(8) Nylon Lock Nuts
(2) Wiring Harness Adapters

TOOLS NEEDED

1/8” Allen
3/8” Wrench
#7 Drill
Drill Motor
Reciprocating Saw

INSTALLATION INSTRUCTIONS

1. To remove the fog light from the bumper, use a 10mm socket to unclip the 3 mounting clips. Push the socket over the clip while gently pulling on the fog light from the front side. Then unplug the fog light from the wiring harness. **See Photo 1**
2. Remove the fog light trim ring by gently pulling it out of the bezel.. **See Photo 2.**



Remove fog light from bumper.



Remove fog light trim ring.

3. Using a reciprocating saw, cut out the fog light bezel. Use the trim ring clip slots as a guide. **See Photo 3.**
4. Remove the cutout portion. **See Photo 4.**

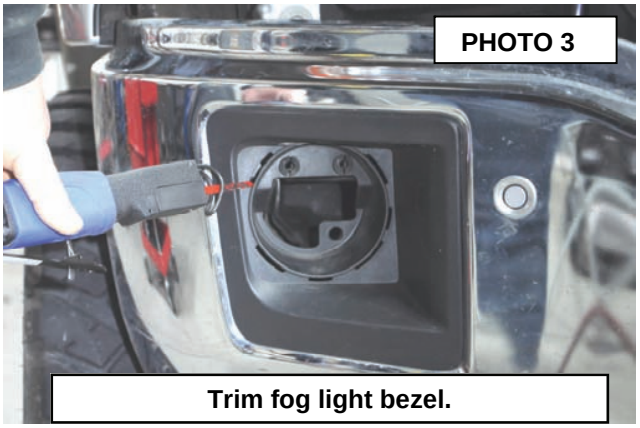

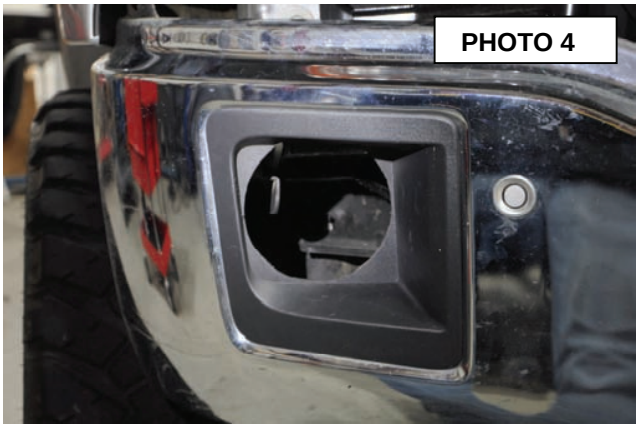

5. Place the supplied face plate in the fog light bezel and use as a guide to drill the 4 mounting holes, using a #7 drill. **See Photo 5.**
6. Remove the supplied bracket from the supplied LED cube lights using the supplied Allen.
7. Place the supplied inner and outer mounting brackets to the inside of the outermost cooling fins on each side of the light. These brackets are driver and passenger side specific. Tighten using the supplied hardware and Allen. **See Photo 6.**



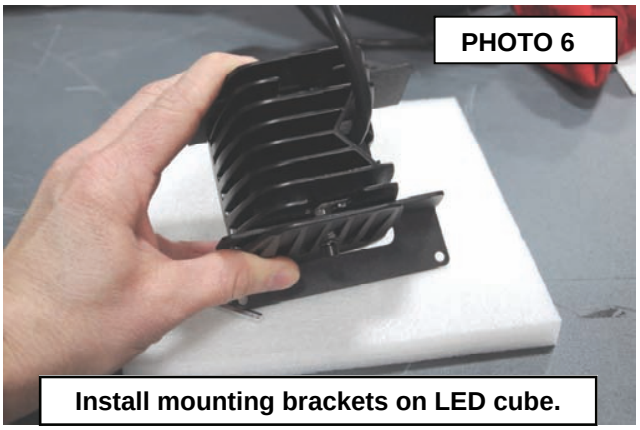

8. **This step will only be performed on the passenger side.** Using a reciprocating saw, trim the bracket behind the fog light for clearance. **See Photos 7 & 8.**

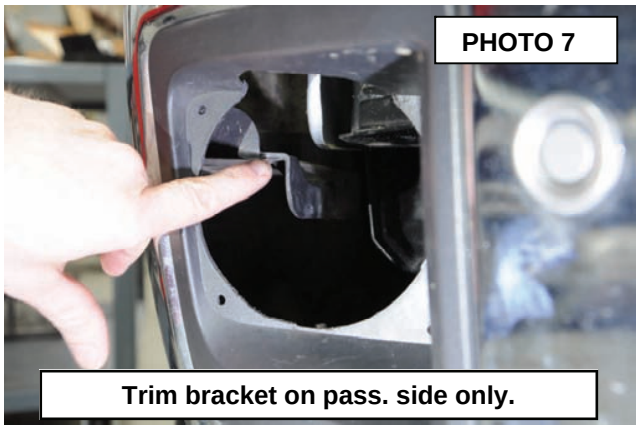

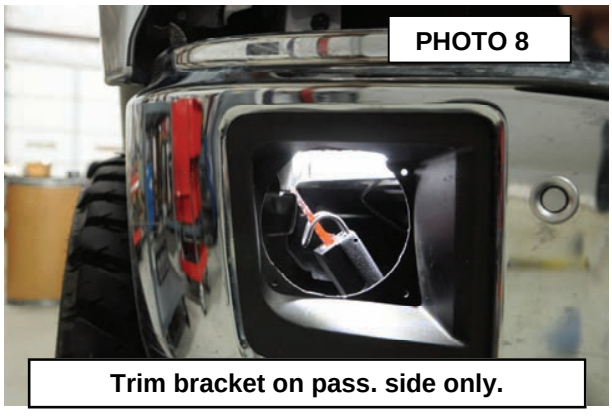

9. Install the LED light assembly in behind the bumper. **See Photo 9.**
10. Using the supplied button head bolts, washers and lock nuts, install the face plate and tighten using a 1/8" Allen and 3/8" wrench. **See Photo 10.**
11. Plug the supplied pigtail into the trucks factory harness and the light. If desired you can use the supplied wiring harness and switch by using the instructions included with the lights.

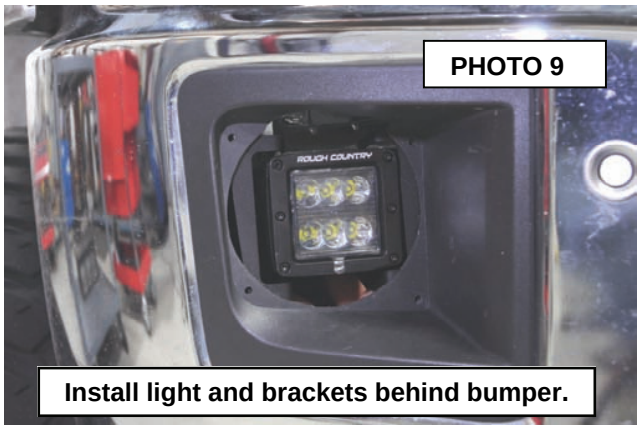



12. Repeat process for the opposite side of the vehicle.





Thank You for choosing Rough Country for your off road needs!!!

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.