TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 71019 Installation Instructions

50-Inch Black Series LED Light Bar Kit for Can-Am Defender, Part 71019

Part number: 71019

trailfortress.com/rough-country-led-light-kit-71019

Scan for fitment, price and install help

921710170

Can-Am Defender 50” LED Rear Cab Mount

Thank you for choosing Rough Country for all your off road needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.


Tools Needed:
T40 Torx
Torque Wrench



Kit Contents:
2– 50” LED Mounting Brackets
1-50” Rough Country LED Light:s
1– LED Light Wiring Harness

INSTALLATION INSTRUCTIONS

1. Using a T40 Torx, remove the Torx bolts and plates from the top rear of the cab. **See Photo 1.**
2. Using the factory hardware, mount the 50” light mounting brackets to the rear of the cab. **Do Not Tighten**. **See Photo 2.**
3. Attach the light to the brackets using the supplied hardware. **See Photo 3.** Tighten using the supplied Allen wrench.
4. Tighten The bracket mounting bolts using a T40 Torx. Torque to factory spec.
5. Wire the light according to the supplied instructions.

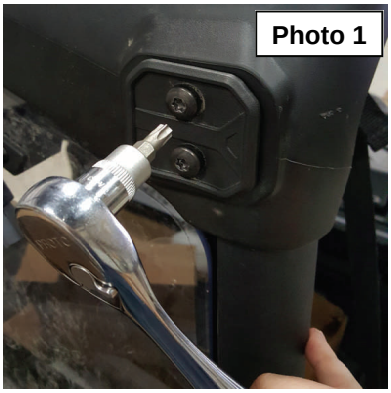





Thank You for choosing Rough Country for your lighting needs!!!

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.