TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 72102 Installation Instructions

2-Inch Black Series Ditch Light Kit for Toyota Tacoma (2024–2025)

Part number: 72102

trailfortress.com/rough-country-led-light-kit-72102

Scan for fitment, price and install help

ROUGH COUNTRY
SUSPENSION SYSTEMS®

921721000

Toyota 2024 Tacoma Ditch Mount Light Bracket

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

Kit Contents:
2” LED Light Kit x1
Driver Side Bracket x1
Pass Side Bracket x1

Tools Needed:
12mm Wrench or Socket

Hardware Included:
Bolts x2
Washers x2
Nuts x2



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

RC ROUGH COUNTRY

INSTALLATION INSTRUCTIONS

1. Shown in photo 1 is the driver and passengers side light brackets.
2. Locate the passengers side light bracket. **See Photo 1.**
3. Open the hood of the vehicle. Loosen the top passengers side hood hinge mount bolt. Then remove the lower bolt using a 12mm wrench. **See Photo 2.**

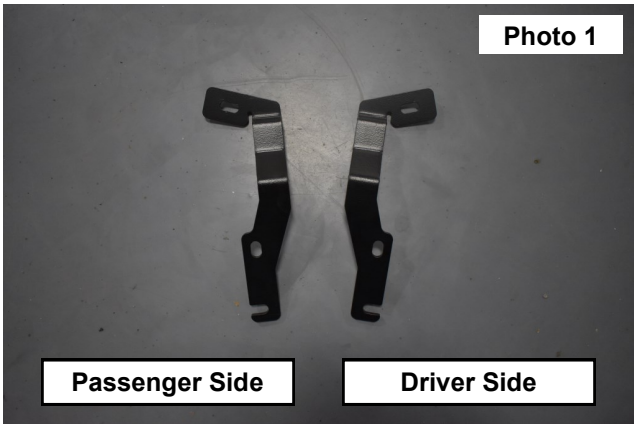

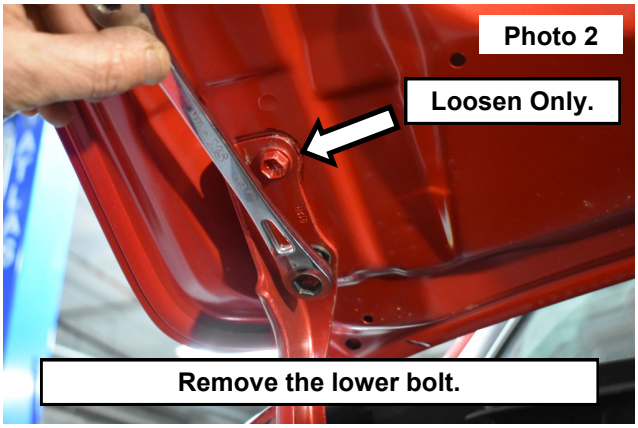

4. Install the light bracket mounting slot in-between the bolt and the hood hinge, then secure the lower hood hinge bolt. **See Photo 3.**
5. Tighten the (2) bolts using a 12mm wrench. **See Photo 4.**

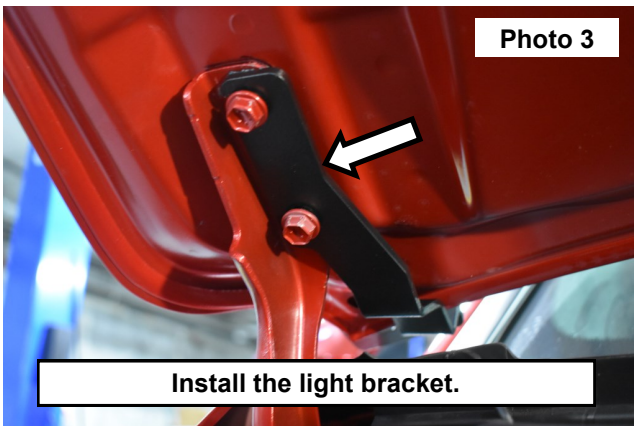

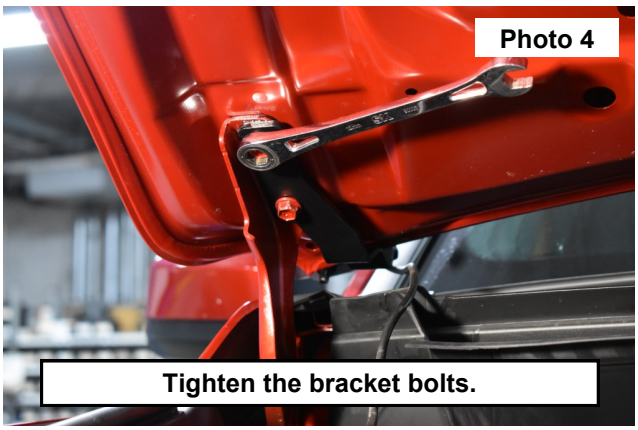

6. Install the lights using the supplied hardware in the lighting kit. **See Photo 5.**
7. Repeat the installation on the opposite side of the vehicle.
8. Connect the supplied wiring harness to the vehicle's power supply. Adjust the light to the desired position and tighten the bolt using a 12mm wrench. **See Photo 6.**





By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.