TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 734005 Installation Instructions

Bed Cap Side Shelf Storage Bin with LED Strip

Part number: 734005

trailfortress.com/rough-country-bed-cap-side-shelf-storage-bin-734005

Scan for fitment, price and install help

ROUGH COUNTRY

Passenger Side Bed Cap Storage Shelf

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.


If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Periodically check hardware for tightness.

Components

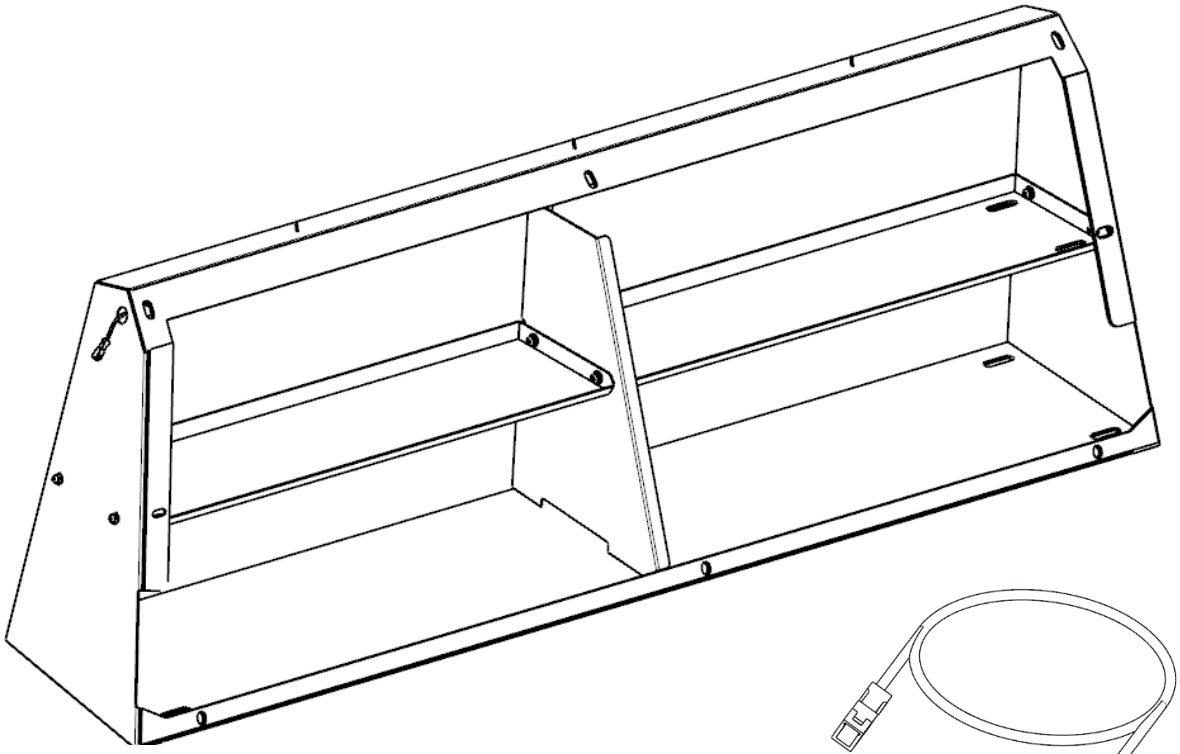


Insert w/shelves for passenger side


LED Light Wire Harness X1

trailfortress.com/rough-country-bed-cap-side-shelf-storage-bin-734005


Hardware Kits

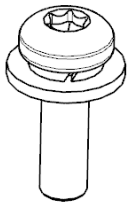


6mmx20mm Combo Kits X8



6mm Plastic Flat Washers X8

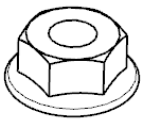

6mm Flange Nuts X8

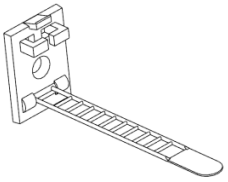


Zip Ties X5

Tools



10mm Wrench

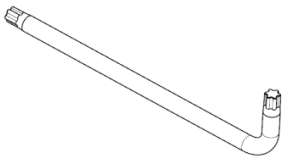


Hex Wrench

trailfortress.com/rough-country-bed-cap-side-shelf-storage-bin-734005


STEP 1

Open the DS Side Door, PS Side Door, Rear Frame Door and lower the tailgate of the truck.

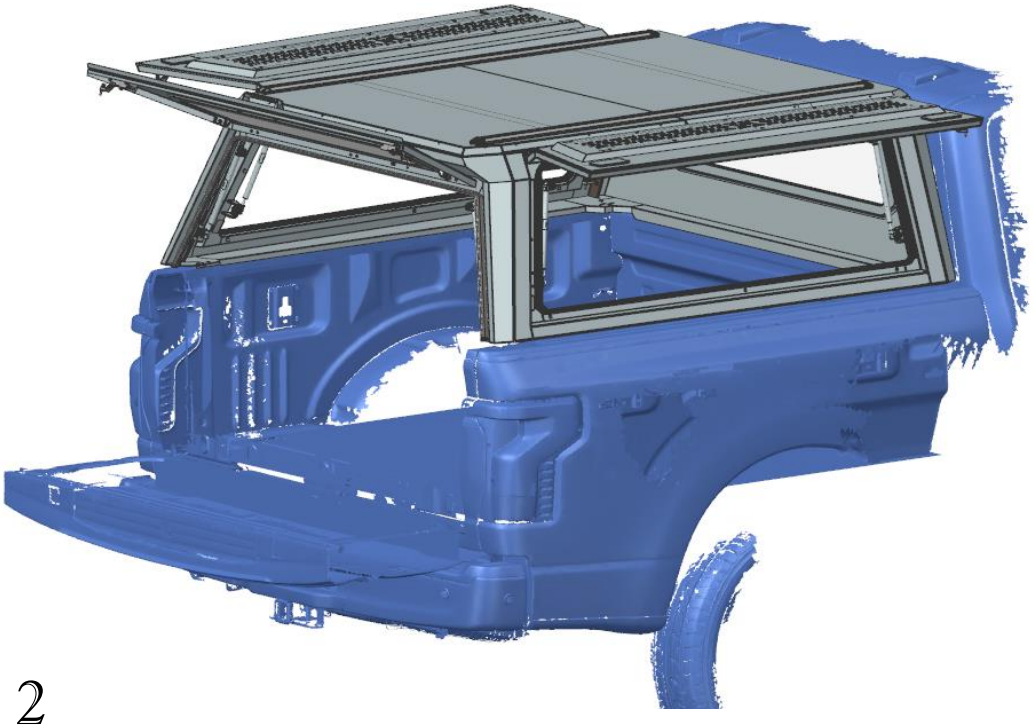

STEP 2


Pull off the small rubber plugs on the PS Side Door.

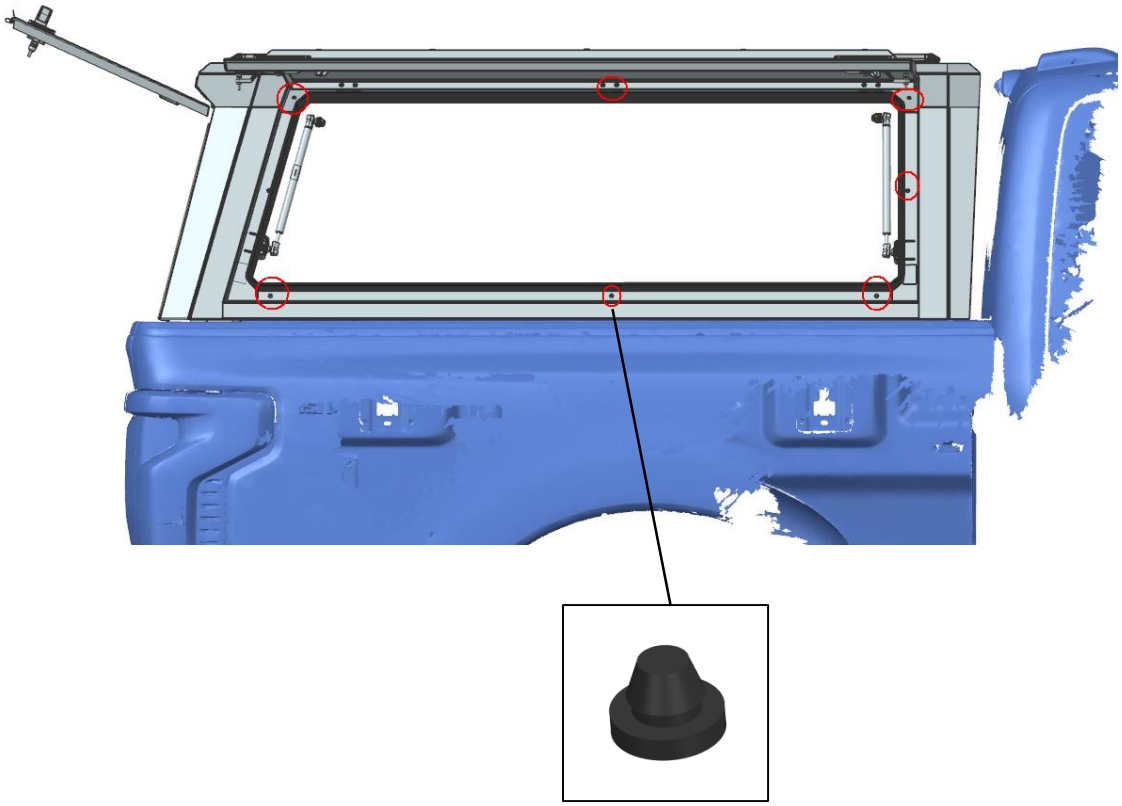

trailfortress.com/rough-country-bed-cap-side-shelf-storage-bin-734005


STEP 3

Place the PS storage shelf box from the rear into the bed of the vehicle.

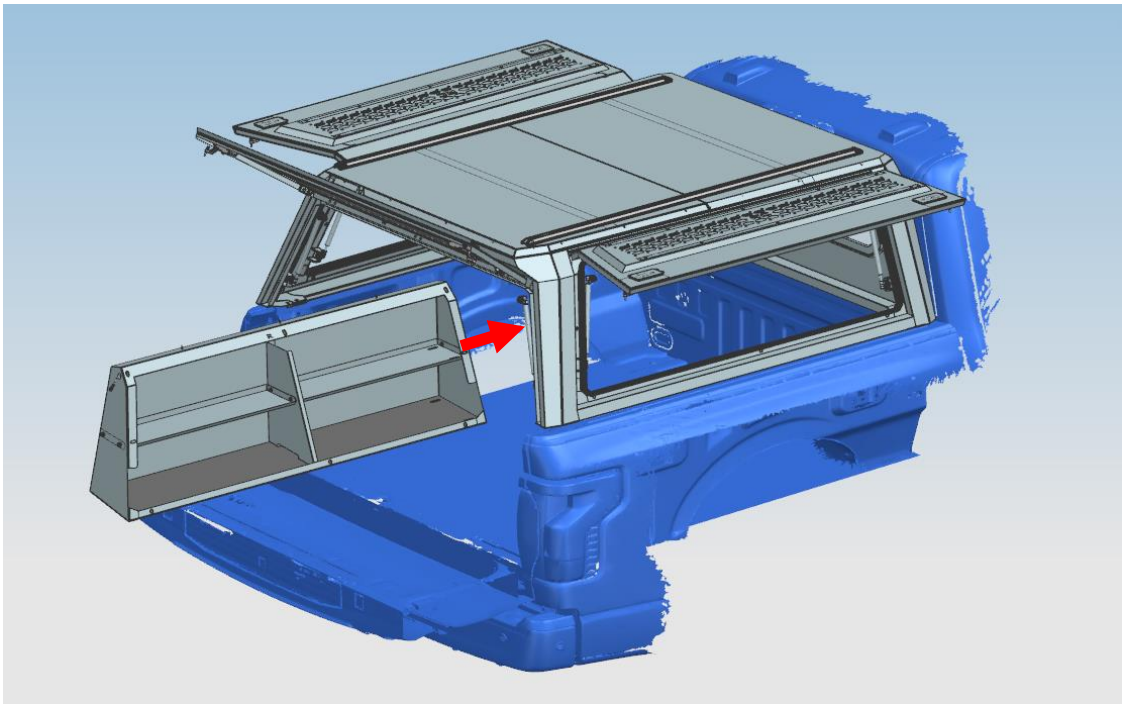


STEP 4


Align the holes on the storage box with the holes on the DS Side Door, and secure with 6 mm x 20 mm bolts, flat washers and flange nuts. (8 in total).




6mmx20mm Combo Kits X8




6mm Plastic Flat Washers X8



6mm Flange Nuts X8

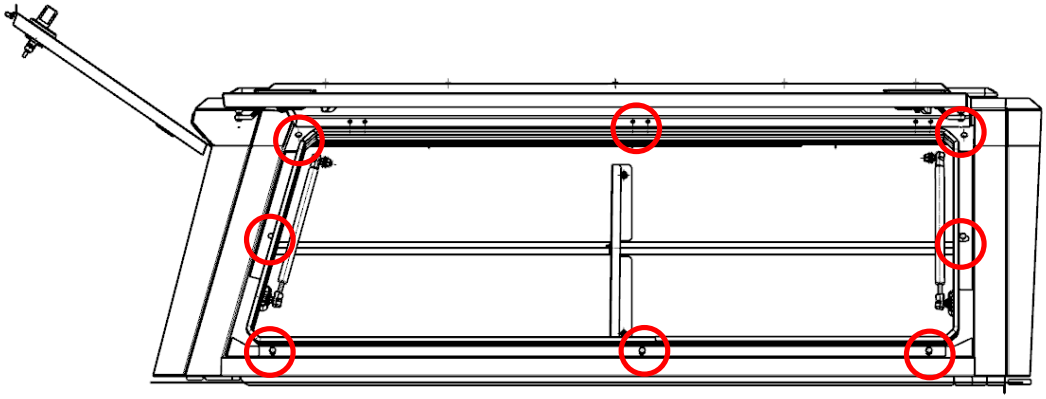


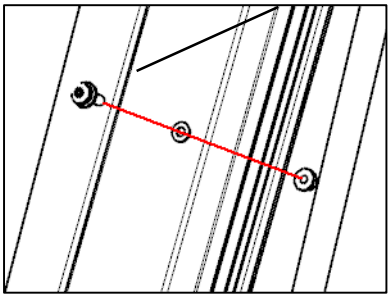

trailfortress.com/rough-country-bed-cap-side-shelf-storage-bin-734005

STEP 5

Connect the plug on the light strip to the plug on the wiring harness, and then secure the wiring harness along the top of the canopy with zip ties. Connect the other end of the wiring harness plug previously installed with the bed cap to the plug labeled with “storage” on the switch.

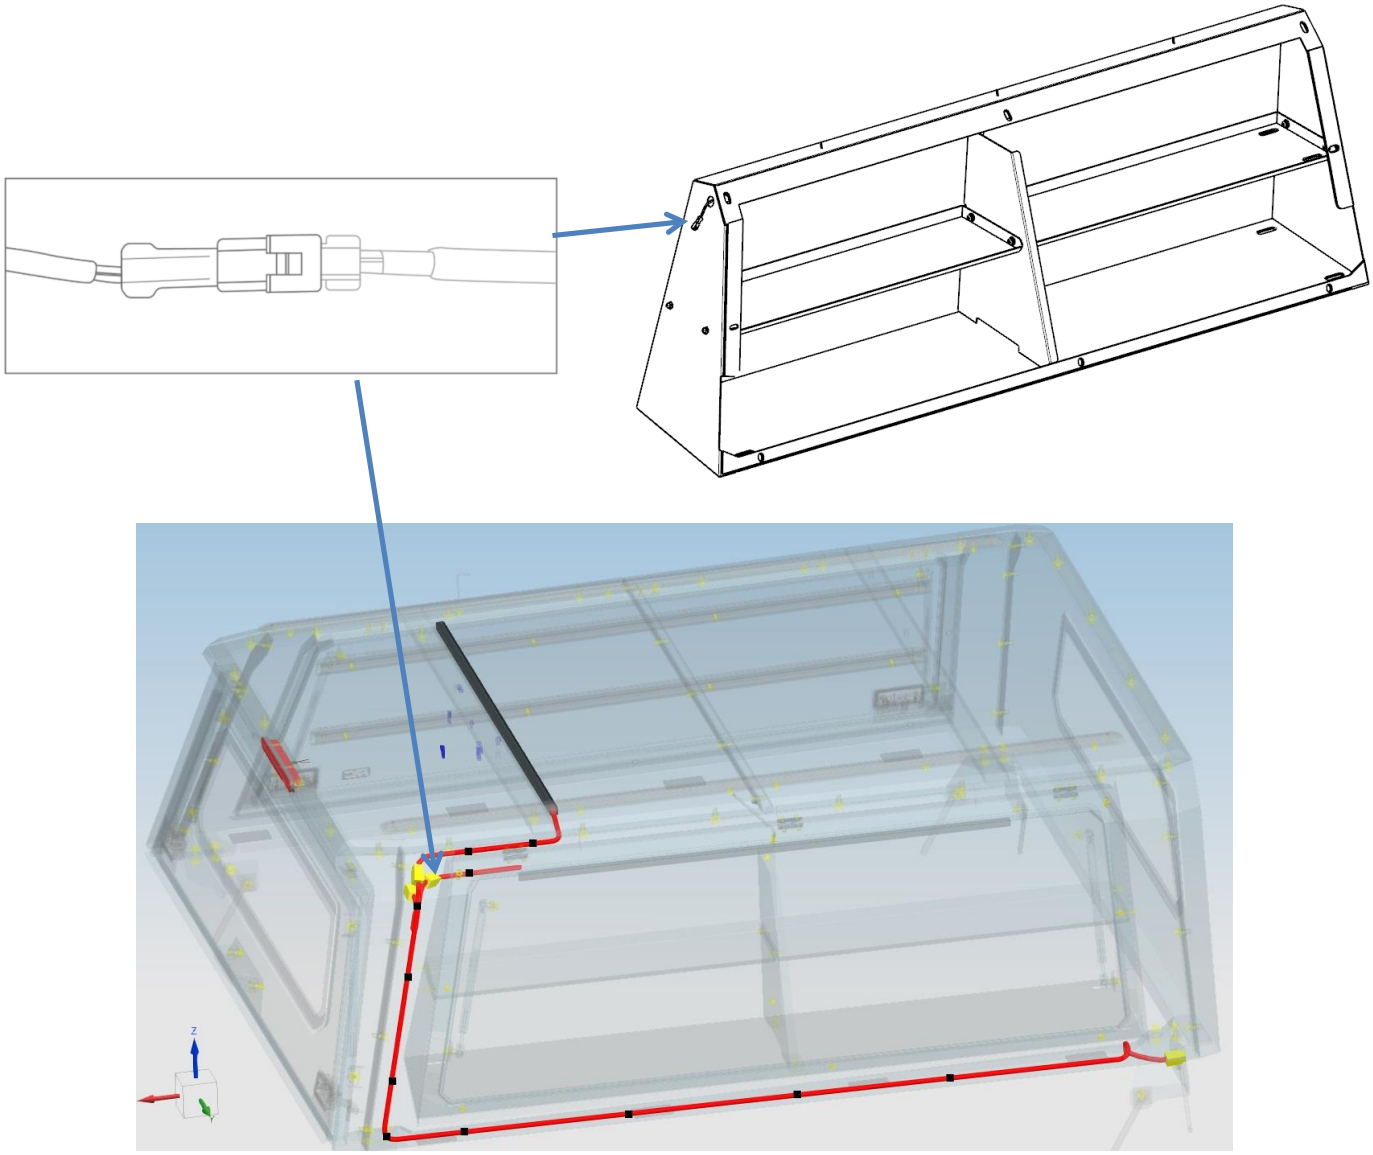

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

trailfortress.com/rough-country-bed-cap-side-shelf-storage-bin-734005