TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 7572 Installation Instructions

Adjustable Front Track Bar for Jeep Wrangler & Cherokee

Part number: 7572

trailfortress.com/adjustable-front-track-bar-jeep-wrangler-cherokee-rough-country-7572

Scan for fitment, price and install help



92757200

97-06 JEEP TJ ADJUSTABLE TRACK ROD KIT

Thank you for choosing Rough Country for all your suspension needs.

Rough Country recommends this system be installed by a certified technician. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

PRODUCT USE INFORMATION

We strongly recommend, because of rollover possibility that seat belts and shoulder harnesses should be worn at all times. Avoid situations where a side rollover may occur. Do not add, alter, or fabricate any factory or after-market parts to increase vehicle height over the intended height of the Rough Country product purchased. Mixing component brands is not recommended. Rough Country makes no claims regarding lifting devices and excludes any and all implied claims. We will not be responsible for any product that is altered.

If question exist we will be happy to answer any questions concerning the design, function, and correct use of our products.




INSTALLATION INSTRUCTIONS


1. Place vehicle on a level surface and face tires in a straight forward position.
2. Place vehicle in park and set e-brake. Chock wheels to prevent movement. Vehicle will remain on ground with suspension at ride height for installation.
3. Remove the factory bolt and nut on the passengers side axle mount and remove the nut and cotter pin from the frame mount end.
4. Remove the factory track rod.
5. Add anti-seize to the tie rod end sleeve and adjust the new adjustable track rod to the starting position measurement, as shown on the next page, by turning the threaded tie rod end in or out to fit in the stock mounting location.





7. Using a plumb bob or similar tool, place against coil hat, adjusting to where string does not interfere with coil.
8. Take a measurement from the line of plumb bob and brake caliper and record measurement. **See photo 3.**
9. Repeat procedure on opposite side of vehicle.
10. Compare the two measurements.
11. If not centered, disconnect rod end and adjust accordingly using the difference from the compared dimensions to correctly adjust the tracking.
12. Repeat plumb bob step until tracking is centered.
13. After adjustments have been made and tracking is centered, tighten jam nut firmly torquing to 75 ft lbs.
14. After installation is complete, test drive vehicle and repeat the measuring procedure, verifying tracking is centered.

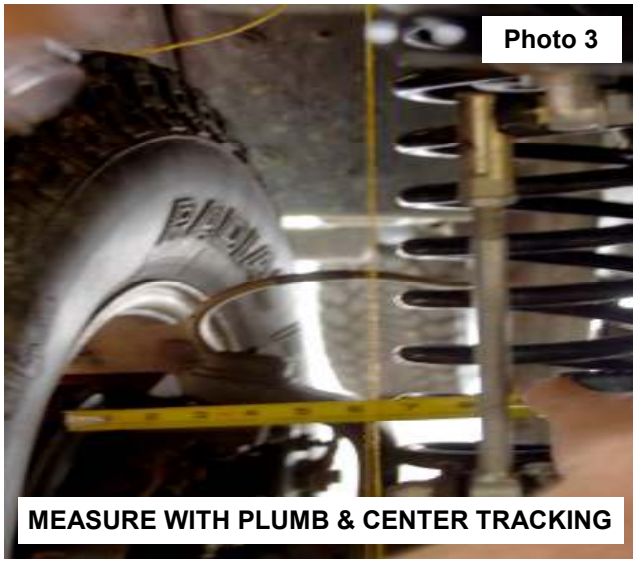

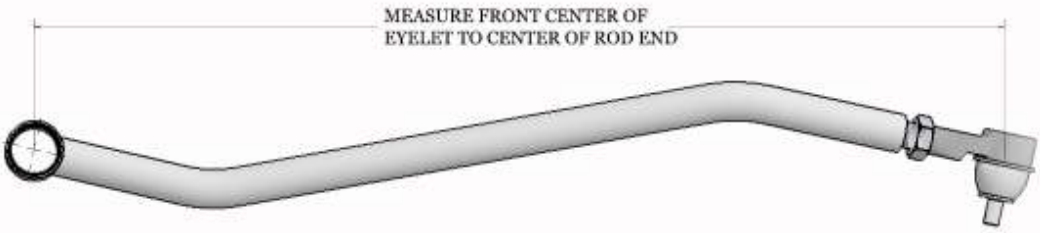

STARTING DIMENSIONS FOR JEEP TJ, XJ, LJ, ZJ FRONT TRACK BAR	
HEIGHT	MEASUREMENT IN INCHES
O inches	31.312"
1.5 inches	31.450"
2.5 inches	31.580"
3.5 inches	31.742"
4.0 inches	31.835"
4.5 inches	31.940"

POST INSTALLATION

- Re torque all fasteners after 500 miles and periodically check for tightness.