TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 80568 Installation Instructions

20-Inch Spectrum Series LED Light Bar Kit with Bumper Mounts

Part number: 80568

trailfortress.com/rough-country-led-light-kit-80568

Scan for fitment, price and install help

927056800

2003-09 Dodge 2500/3500 20” LED Single Row Light Mount

Thank you for choosing Rough Country for all your off road needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design,

Tools Needed:
18mm Socket



Kit Contents:
2-Rough Country LED Light Brackets

INSTALLATION INSTRUCTIONS

1. Using a 18mm socket remove the four factory bolts securing each tow hook to the frame.
2. Place the Rough Country bracket behind each tow hook (with the light tab to the inside) and insert the tow hook back onto the truck using the factory bolts. Hand tighten. **See Photo 1.**
3. Install the 20òlight bar between the brackets and secure to brackets with the supplied bolt. **See Photo 2.**
4. Tighten tow hook bolts with a 18mm socket.
5. Wire the light with the supplied light instruction sheet.

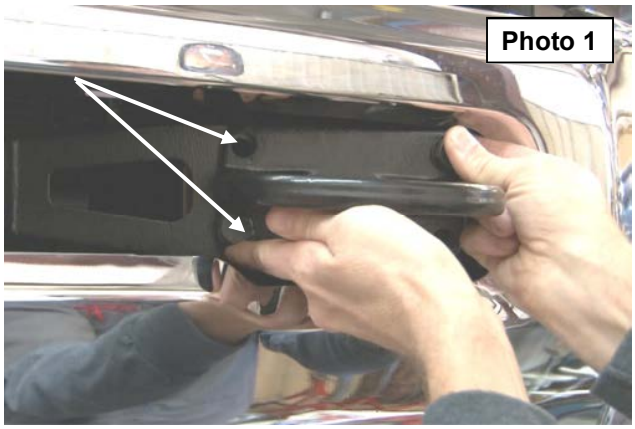



Thank You for choosing Rough Country for your lighting needs!!!

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.