TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 85003 Installation Instructions

Skid Plate for Sprinter with 2 Inch Cradle Drop (2019-2025)

Part number: 85003

trailfortress.com/rough-country-skid-plate2-cradle-drop-85003

Scan for fitment, price and install help

ROUGH COUNTRY
SUSPENSION SYSTEMS®

Sprinter Van Skid Plate

Thank you for choosing Rough Country for all of your suspension needs.

Rough Country recommends that a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle. Please read all the instructions before beginning the installation. Check the kit hardware against the ''Kit Contents'' list below. If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Check and retighten wheels at 50 miles and again at 500 miles. Periodically check all hardware for tightness. Be sure you have all the needed parts and understand where they go. Also, please review the "Tools Needed" list to be certain you have the necessary tools to complete the installation.

NOTICE TO DEALER AND VEHICLE OWNER

⚠WARNING Any vehicle equipped with any Rough country product must have the "Warning to Driver" decal installed on the sun visor or dash. The decal is to act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics. INSTALLING DEALER—It is your responsibility to install the warning decal and to forward these installation instructions on too the vehicle owner for review and to be kept in the vehicle for its service life.



trailfortress.com/rough-country-skid-plate2-cradle-drop-85003

Sprinter Van Skid Plate

TOOLS NEEDED:
10mm
5mm Hex Wrench

KIT CONTENTS:
Skid Plate

HARDWARE INCLUDED:
8mm Button head bolt (6)
8mm Flange Nut (2)
8mm Washer (6)





trailfortress.com/rough-country-skid-plate2-cradle-drop-85003

Skid Plate Installation

1. Park your vehicle on a clean flat surface, engage the parking brake and block the rear tires.
2. **Save all hardware removed from the vehicle unless otherwise noted.**
3. Locate the stamped steel cross bar under and behind the bumper. Remove the 4 bolts holding it to the freame using a 10mm socket. **Photo 1 / 2**

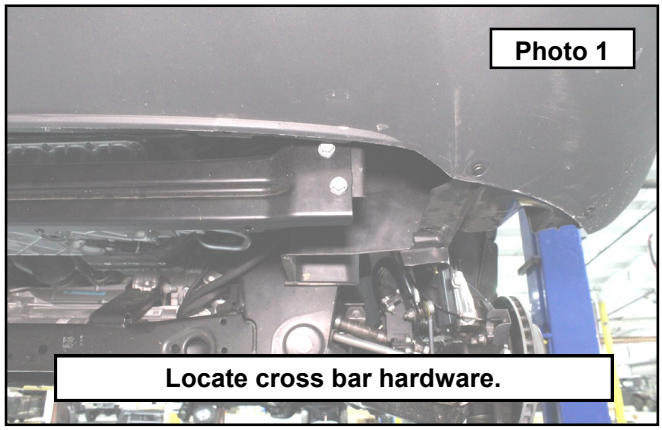



4. Remove cross bar and discard. **Photo 3**
5. Install RC skid plate to the mounting points of the cross bar using the provided 8mm button head bolts, washers and 5mm Hex wrench. Do not fully tighten at this time. **Photo 4**

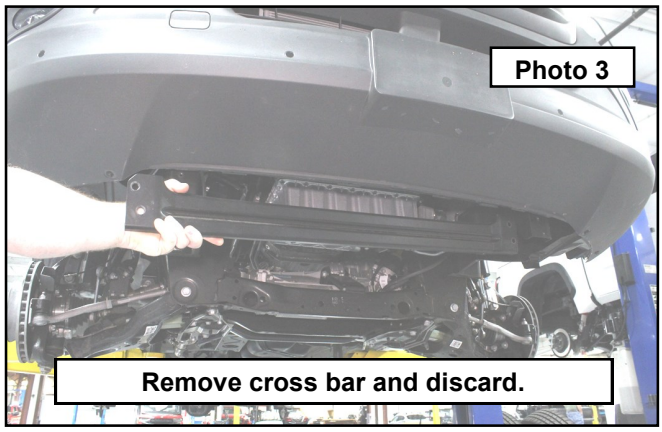

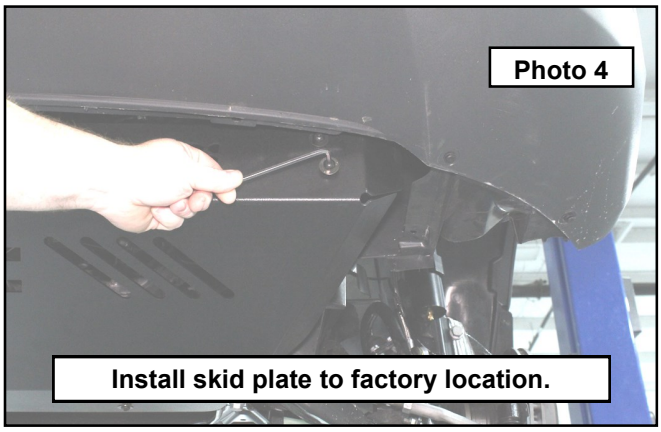

6. Install the remaining button head bolts, washers and flange nuts in the lower mounting locations. Once all hardware has been started, fully tighten . **Photo 5 / 6**

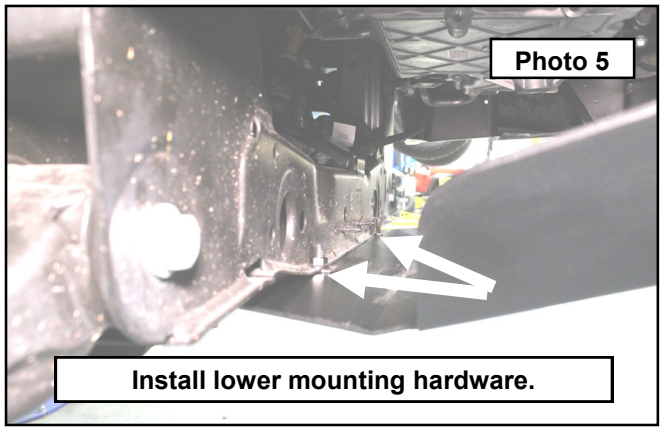

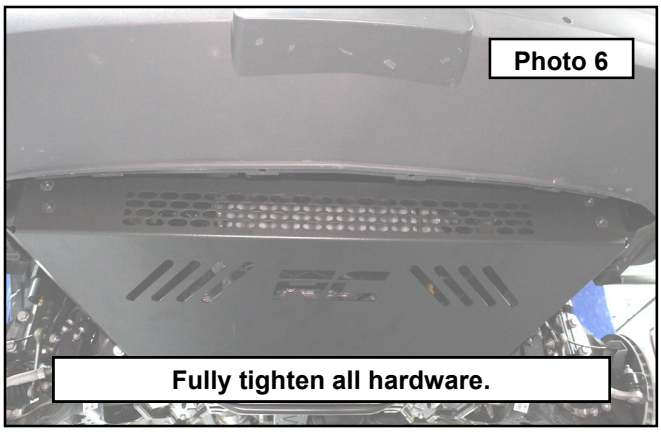

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

trailfortress.com/rough-country-skid-plate2-cradle-drop-85003