Rough Country 8730630 Installation Instructions

N3 Steering Stabilizer for 2007–2017 Jeep Wrangler

Part number: 8730630

trailfortress.com/rough-country-n3-steering-stabilizer-8730630

Scan for fitment, price and install help

JEEP JK STABILIZER KIT

KIT CONTENTS:	TOOLS NEEDED:	TORQUE SPECS:	
1- Axle bracket	18mm Socket / Wrench	⅜”	30 ft/lbs - 35 ft/lbs
1-Stabilizer Cylinder	21mm Socket / Wrench	½”	65 ft/lbs - 75 ft/lbs

1—Kit Bag Containing
- 1-3/8” x 1. 1/4” Bolt
- 1-3/8” Flat Washer
- 1-3/8” Flange Lock Nut
- 1-1/2” x 2 1/2” Bolt
- 1-1/2” Flat Washer
- 1-1/2” Lock Nut

STABILIZER INSTALLATION INSTRUCTIONS

1. Remove the factory stabilizer from the axle using a 18mm socket. **See Photo 1.** Retain the factory hardware for reuse if reusing the factory stabilizer.
2. Remove the factory track bar from the axle mount using a 18mm socket. Retain the factory hardware for reuse.
3. Place the new bracket on the axle mount as shown in **Photo 2** and place the track rod in the axle mount and secure with the factory track rod bolt. Do not tighten at this time.

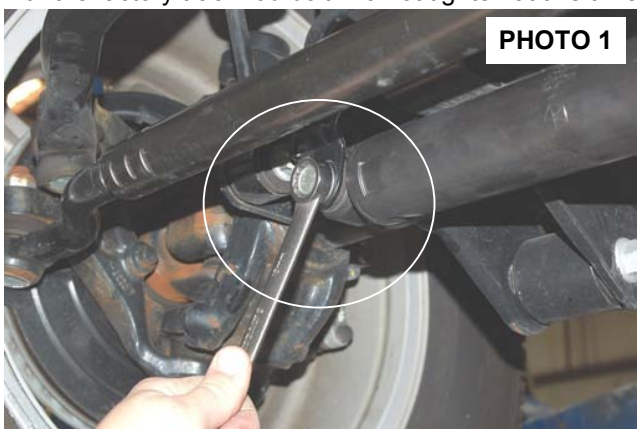

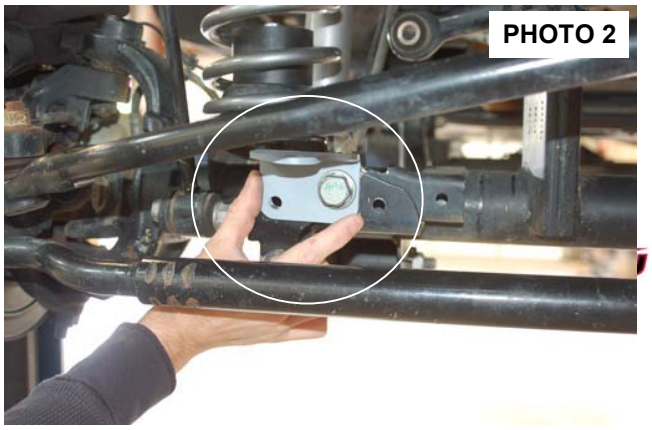

4. Install the supplied 3/8” x 1 1/4” bolt , flat washer and flange lock nut on the stabilizer bracket as shown in **Photo 3** and tighten hardware.
5. Install stabilizer in the mount with the supplied 1/2” x 2 1/2” bolt if using Rough Country stabilizer and if using the factory stabilizer reuse the factory hardware. **See Photo 4.**

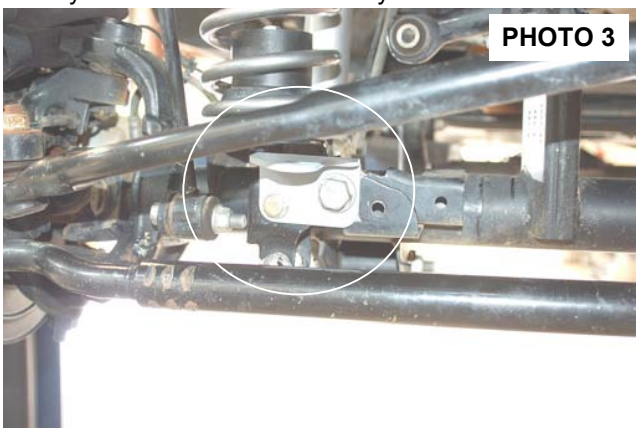

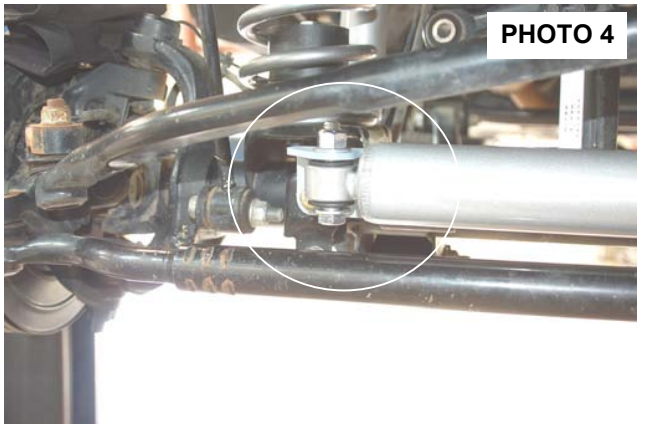

trailfortress.com/rough-country-n3-steering-stabilizer-8730630