Rough Country 8731530 Installation Instructions


N3 Steering Stabilizer for Jeep Cherokee & Wagoneer 4WD (1974-1990)

Part number: 8731530

trailfortress.com/rough-country-n3-steering-stabilizer-8731530

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS **FORM NO. 82220**

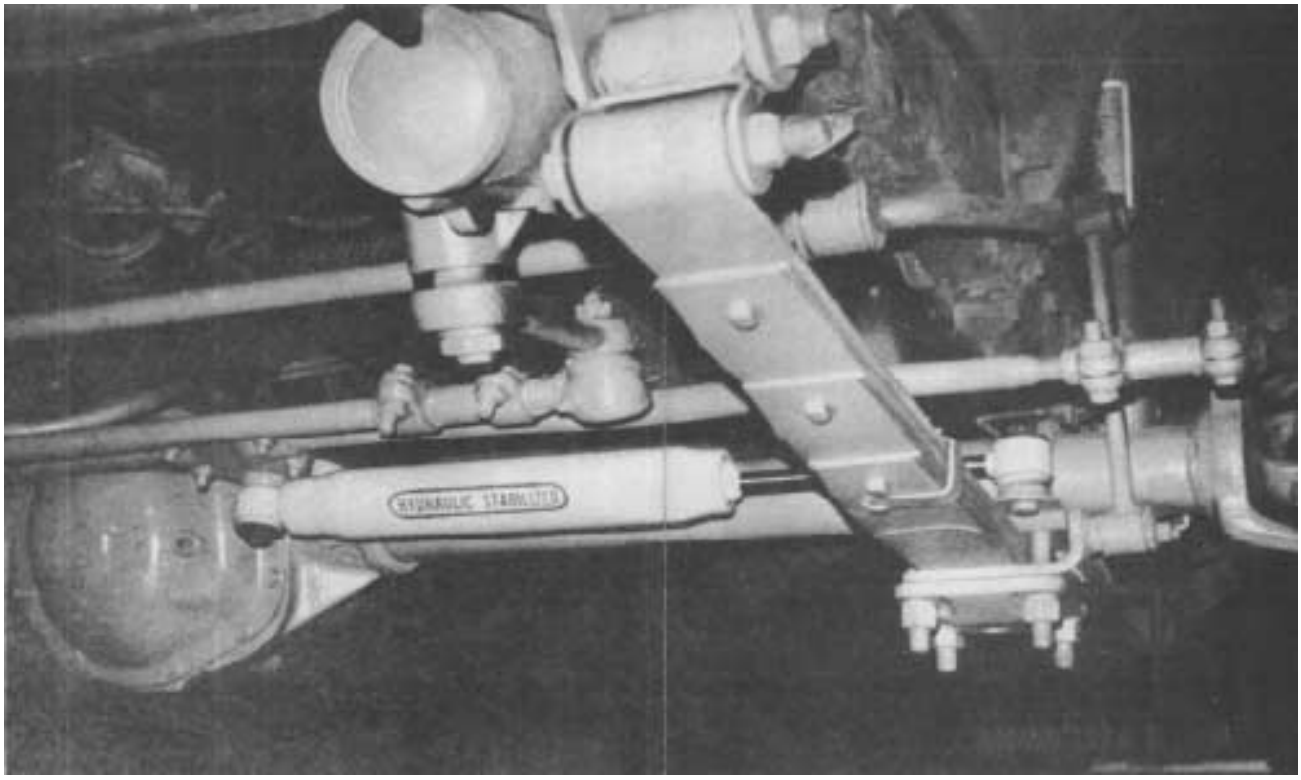

1. Remove original equipment steering stabilizer and save flat washers.

2. Extend piston rod a few inches and place eye ring down over pin as shown. (Original mounting pins vary in location on some models.) Replace flat washer and secure using new lock nut found in kit.

3. Place eye ring on barrel end of cylinder over pin on tie rod and secure using original flat washer and new lock nut found in kit.

4. Turn wheels fully to right and left making sure that no interference occurs and that wheel stops are fully contacted.

5. Re-check all nuts for proper tightness before releasing installation.


BOX CONTENT
1 – stabilizer cylinder
1 – installation instruction sheet

POLY BAG
2 – hex lock nuts 7/16

CAUTION: Any and all warranties including but not limited to any express warranties, implied warranty of merchantability, or implied warranty of fitness for a particular purpose shall not apply to any product altered in any way outside the premises of the manufacturer or to any product which is not installed in accordance with the written instructions provided by the manufacturer for installation of the product.

trailfortress.com/rough-country-n3-steering-stabilizer-8731530

INSTRUCCIONES DE INSTALACIÓN **FORMA NO. 82220**

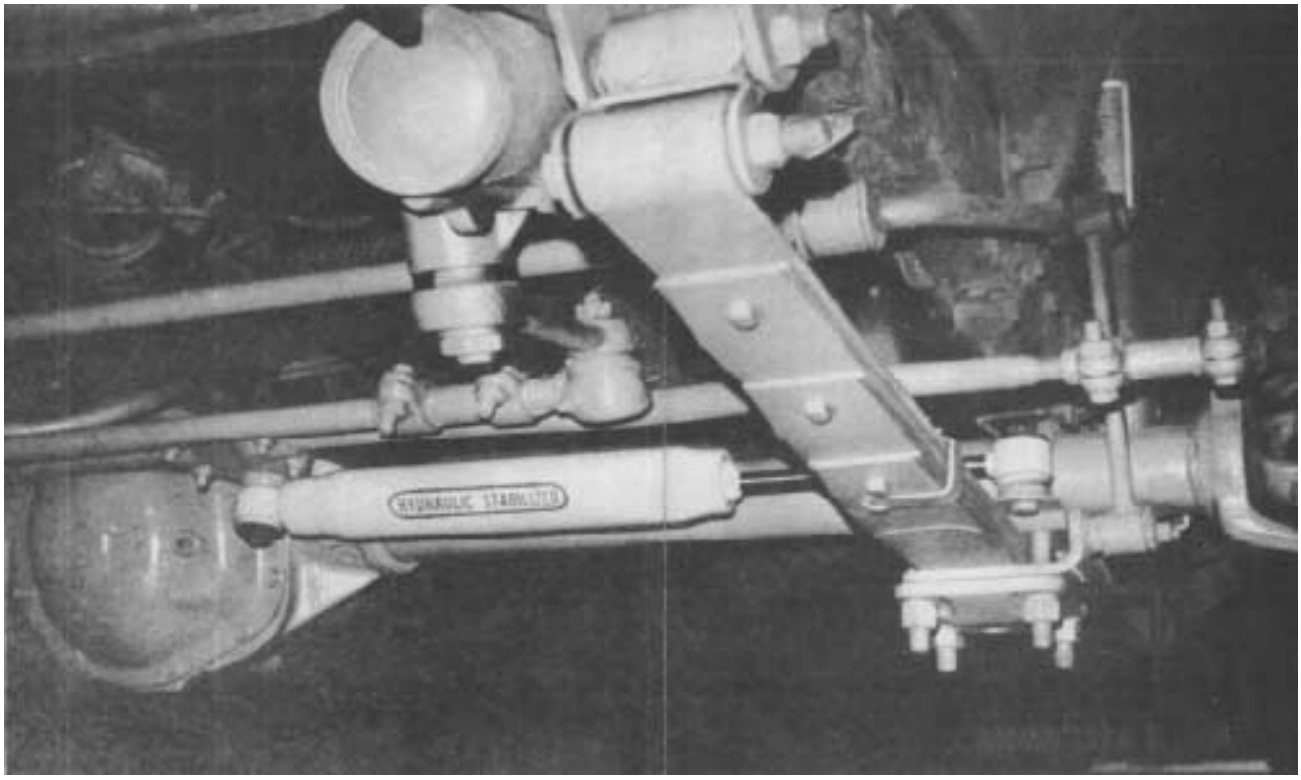

1. Remueva el equipo original del estabilizador de direccion y ahorre las rondanas planas.

2. Extienda la varilla del piston unas pulgadas y ponga el hojo de la varilla sobre la clavija o pasador (como se muestra)(algunas clavijas o pasadores del montage original varian en algunos modelos). Remplace las rondanas planas y asegurelas usando la tuerca nueva de candado que se encuentra en la bolsa.

3. Ponga el ojo de la orilla del barril del cilindro sobre el pasador en la varilla de amarrar, y asegurela usando la rondana plana original y la tuerca de candado que se encuentra en la bolsa.

4. Voltear las ruedas completamente a la derecha e izquierda y estar seguro que no ocurra ninguna interferencia y ver que los altos de las ruedas hagan buen contacto tambien.

5. Recheque todas las tuercas que esten propiamente apretadas, antes de entregar la instalacion.

CAJA DE CONTENIDO

1 - cilindro estabilizador
1 – hoja de instrucciones

BOLSA DE CONTENIDO

2 – Tuercas especiales duras hex 7/16

PRECAUCION: Cualquiera y todas las garantías que se incluyen pero no limitada a cualquier garantía escrita, la garantía implícita de mercancia, o la garantía implícita de aptitud para un propósito particular no aplicará a cualquier producto alterado de forma alguna fuera de las promesas del fabricante o a cualquier producto que no se instala de acuerdo con las instrucciones escritas hechas por el fabricante de la instalación del producto.

trailfortress.com/rough-country-n3-steering-stabilizer-8731530