# Rough Country 8733830 Installation Instructions

N3 Dual Steering Stabilizer for 1980-1985 Ford F-350 4WD

Part number: 8733830

trailfortress.com/rough-country-n3-steering-stabilizer-8733830

Scan for fitment, price and install help

**INSTALLATION INSTRUCTIONS** **FORM NO. 82251**

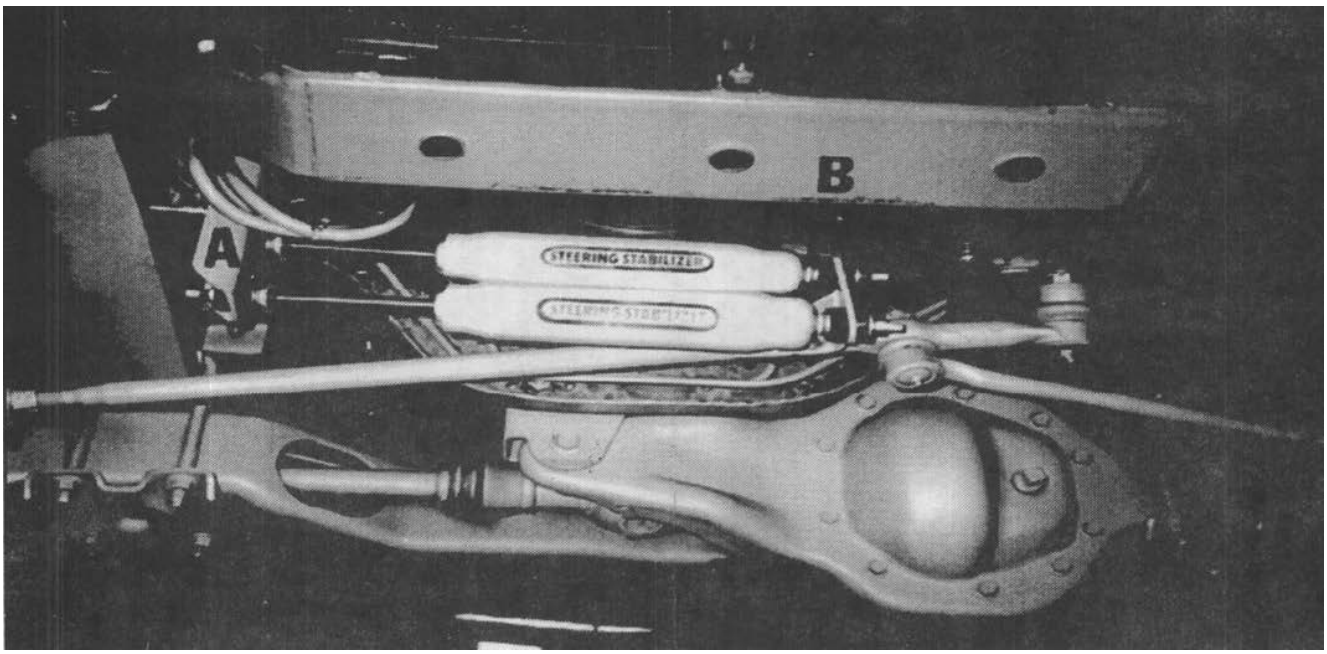


## F250/F350

**NOTE: All surfaces should be clean and dry before attaching brackets.**

1. Place wheels in a straight forward position.
2. Place stabilizer bracket “A” against inside of frame as shown. Place back up strap on the outside of frame. Install bolts through back up strap and through bracket “A”. Secure with lock washers and nuts provided.
3. Attach both stabilizer piston rod ends to bracket “A” using bushing stack up instructions printed on bag.
4. Loosely attach stabilizer bracket “B” to the tie rod as shown using u-bolt and flange lock nuts.
5. Attach both stabilizers to bracket “B” as shown using bushing stack up instructions printed on bag.
6. Extend stabilizer piston rods 4 1/2 inches. Rotate bracket “B” to obtain best location. Tighten all nuts securely on u-bolts.
7. Turn wheels fully to the right and left making sure that no interference occurs and that wheel stops are fully contacted.
8. Re-check all nuts and pal nuts for tightness before releasing installation.

BOX CONTENT
2 – stabilizer cylinders
1 – mounting strap
1 – mounting bracket (frame)
1 – mounting bracket (tie rod)
1 – installation instruction sheet

POLY BAG # 1
4 – rubber bushings
4 – cup washers
2 – lock washers 3/8
2 – hex nuts 3/8-24
2 – pal nuts 3/8-24
2 – hex head bolts 3 1/2”
2 – hex head bolts 4 1/4”
2 – hex nuts 3/8-16

POLY BAG # 2
4 – rubber bushings
4 – cup washers
2 – hex nuts 3/8-24
2 – pal nuts 3/8-24
6 – flange lock nuts 5/16-18
3 – u-bolts 1 1/8”
3 – u-bolts 1”

CAUTION: Any and all warranties including but not limited to any express warranties, implied warranty of merchantability, or implied warranty of fitness for a particular purpose shall not apply to any product altered in any way outside the premises of the manufacturer or to any product which is not installed in accordance with the written instructions provided by the manufacturer for installation of the product.

trailfortress.com/rough-country-n3-steering-stabilizer-8733830