TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 8749470 Installation Instructions

V2 Steering Stabilizer for 2.5-Inch and Taller Front Lifts

Part number: 8749470

trailfortress.com/rough-country-v2-steering-stabilizer-8749470

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS **FORM NO. 82279**

1. Remove original equipment steering stabilizer from the Passenger side mount and center axle mount..





2. Locate the new axle stabilizer bracket. Align the top and bottom holes and insert the factory bolts shown in **Photo 1 & 2**. Tighten with a 13mm socket.





3. On passenger side secure tie rod bracket with supplied 3/8òu-bolts and nuts. Hand tighten. **See Photo 3.**

4. Install the sleeves in cylinder 658714 and attach cylinder to brackets with supplied 1/2òbolts, washers, and nuts. Make sure to install RC cover plate on center bracket. **See Photo 4.**

5. Repeat steps 3 & 4 on the driver side. **See Photo 5.**

6. Turn the steering wheel left and right to make sure the cylinders are not limiting the travel. Tighten 3/8ò nuts with a 9/16òsocket and the 1/2ònuts with a 3/4òsocket and wrench.

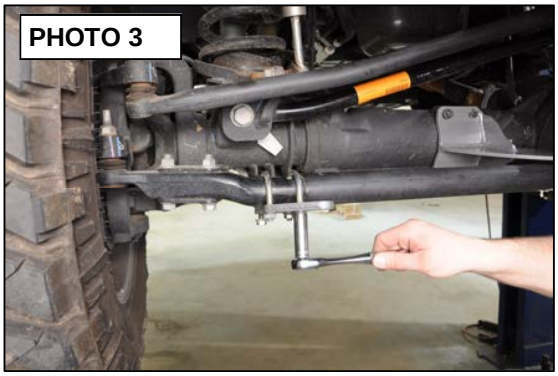

trailfortress.com/rough-country-v2-steering-stabilizer-8749470

BOX CONTENT

2-STABILIZER CYLINDERS
1-DRIVER SIDE BRACKET
1-PASSENGER SIDE BRACKET
1-CENTER BRACKET
1-RC COVER PLATE
1-POLY BAG

FINISHED ASSEMBLY SHOWN ON 2014 MODEL



CAUTION: Any and all warranties including but not limited to any express warranties, implied warranty of merchantability, or implied warranty of fitness for a particular purpose shall not apply to any product altered in any way outside the premises of the manufacturer or to any product which is not installed in accordance with the written instructions provided by the manufacturer for installation of the product.