TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 90005 Installation Instructions

Speedometer Calibrator for Chevrolet & GMC Trucks (2017-2019)

Part number: 90005

trailfortress.com/rough-country-speedometer-calibrator-90005

Scan for fitment, price and install help

929000501

ROUGH COUNTRY SUSPENSION SYSTEMS®

Inline Speedometer Calibration Kit

Thank you for choosing Rough Country.

NOTICE Please read instructions before beginning installation. Be sure you have read and understand the procedures and the unit has been configured and updated prior installing.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning function, and correct use of our products.

This installation manual shows an example installation on a 2017 Chevrolet Colorado. The installation may vary for your vehicle, so it may be necessary to consult a Chevrolet service manual for specific instructions for your year model.
Be advised: These instructions may not include specifics for all vehicle configurations.


INSTALLATION INSTRUCTIONS


1. Connect the Inline Speedometer Module to your PC with the supplied USB cable and configure it to your vehicle. Once configuration is complete, connect the module to the harness.







2. To remove the Lower Kick Panel, first remove the (2) 7mm screws at the bottom
3. Pull back on the Left and Right side of the Kick Panel at the top to release it. There is one connector for the headlight switch on the left.
   NOTE The hood release may come loose from the panel, if so, wait until the panel is re-attached to install it. It clips in place starting at the front.

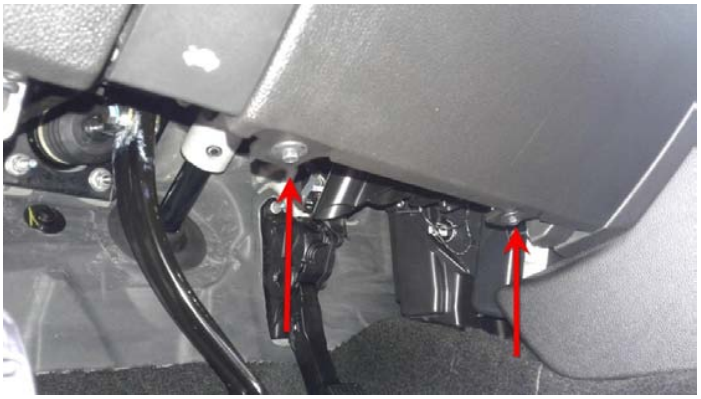

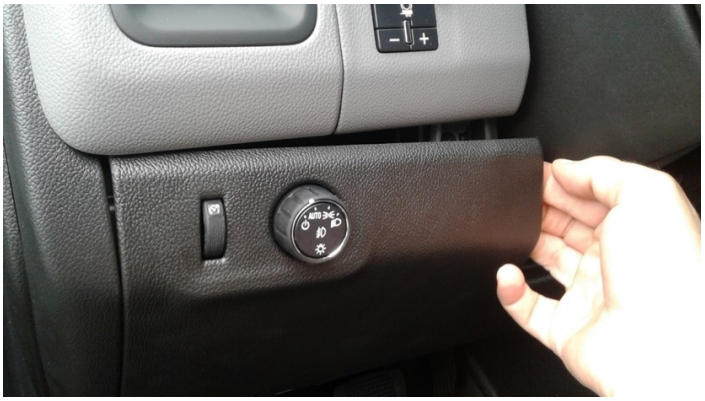

4. Depress tab on headlight switch connector and pull back to disconnect.

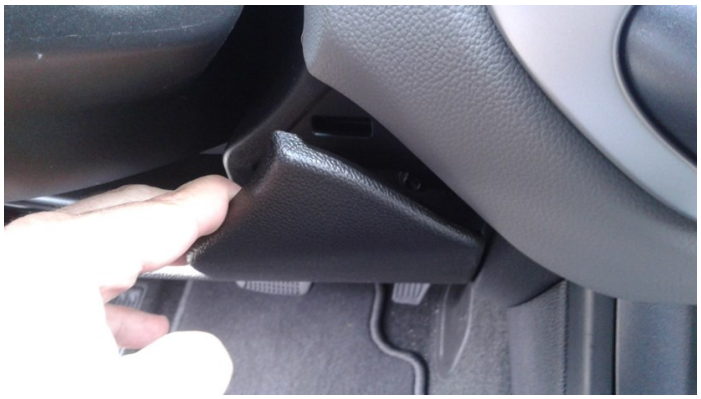

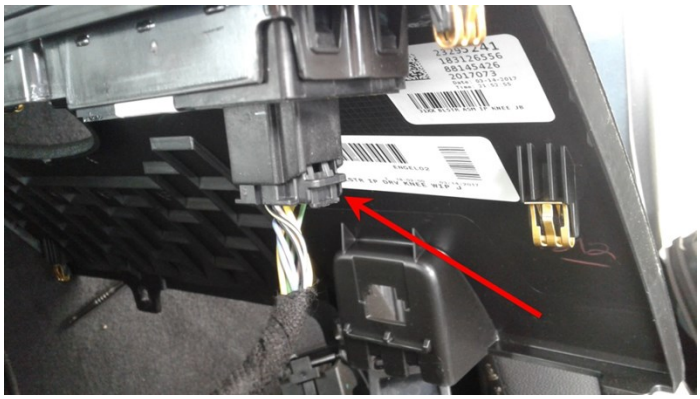

5. Look to the left of the steering column and you will see a module with 2 connectors. We will remove the black one by pulling the red locking tab back with a pick, small screwdriver or finger. Depress the tab in the middle and pull backwards to remove.
6. Insert the male portion of the Speedometer Calibrator harness into the female end of the vehicle's harness. Make sure to align the connectors so that the locking tabs are on the same side. Run a zip-tie through the tabs to secure the connectors.





7. Connect the female end of the Speedometer Calibrator harness into the vehicle's module.
8. Tuck the harness up in front of the module away from harms way.
9. Start the vehicle and check for any warning signs or messages.
10. Test drive vehicle to ensure proper speedometer function.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.