TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 90799 Installation Instructions

Drop Step Nerf Bars for Jeep Wrangler 4WD (1987-2006)

Part number: 90799

trailfortress.com/rough-country-nerf-bar-90799

Scan for fitment, price and install help

929079900

ROUGH COUNTRY
SUSPENSION SYSTEMS®

Jeep TJ / YJ Nerf Bars

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:
Driver Side Step Rail x1
Pass Side Step Rail x1
Mounting Brackets x4

TOOLS NEEDED:
5/8 Wrench or Socket
19mm Wrench or Socket

HARDWARE INCLUDED:
1/2 x 2” Hex Head Bolts x4
1/2” Lock Washers x4
1/2” x 1-1/4” OD Washers x4




Torque Specs:


Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

RC ROUGH COUNTRY


INSTALLATION INSTRUCTONS


1. Locate the (4) mounting brackets and (4) Supplied 1/2 x 2” Hex Bolts, (4) 1/2” Lock Washers and (4) 1/2” x 1-1/4” OD washers. **See Photo 1.**
2. Install the single slotted hole mounting brackets onto each end of the step rails. Using the supplied 1/2” hardware. Snug the bolts against the bracket where it can still move. **See Photo 2.**

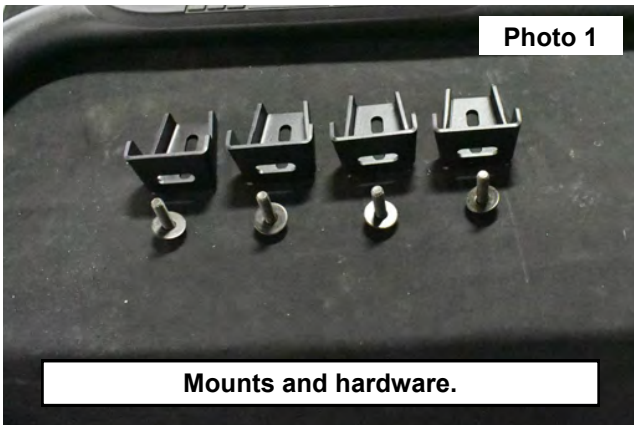

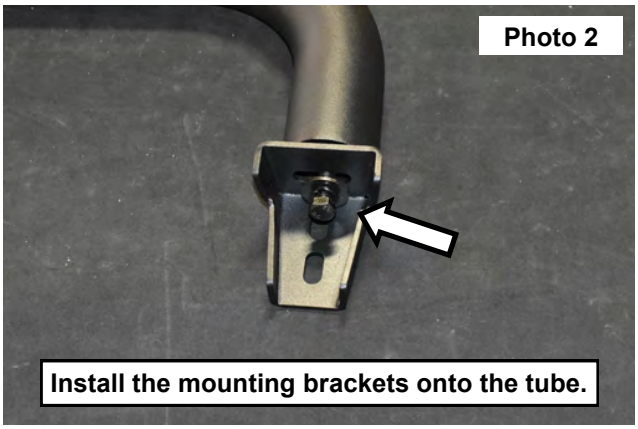


3. Remove the front and rear body mount bolts from the vehicle using a 5/8 socket. **NOTE: If body mount bushings are damaged or missing, please replace at this time**. **See Photos 3 and 4.**

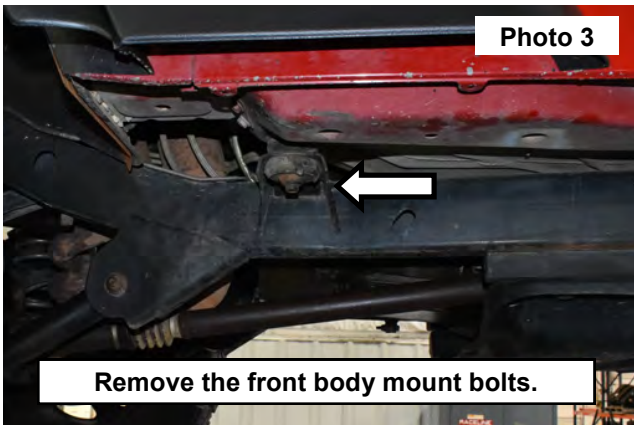

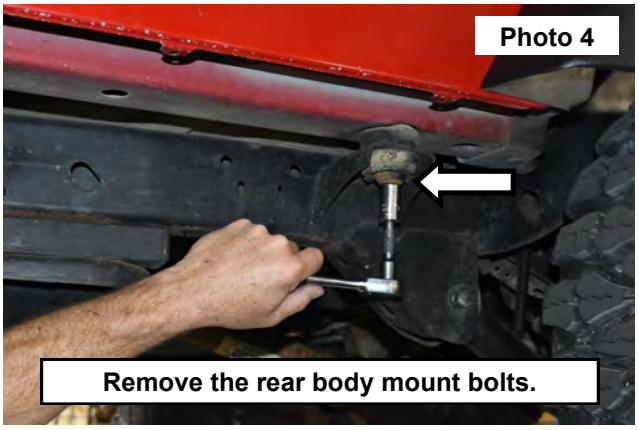


4. Place the step onto the bottom of the body mounts.
5. Place the retained OE bolt through the step mount threading it into the body on the front and rear mounts. **See Photo 5.**

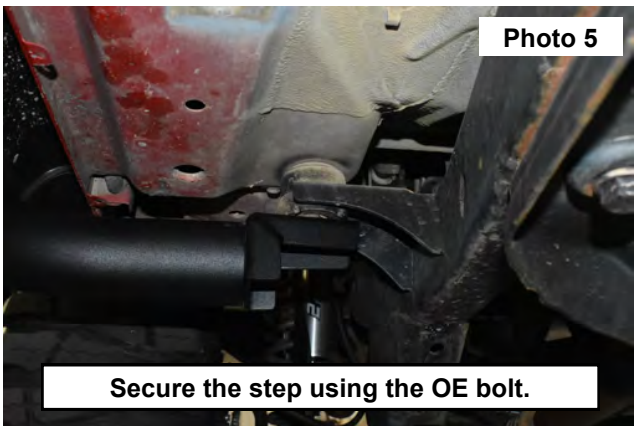




6. Center the step into the desired location. **See Photo 6.**

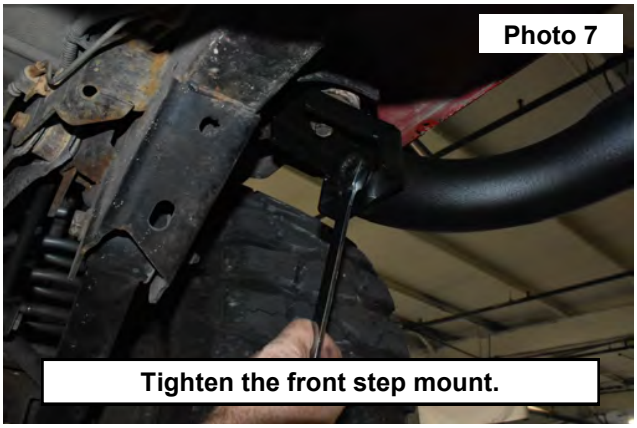



7. Tighten the front and rear step mounts using a 19mm wrench. **See Photo 7 and 8.**

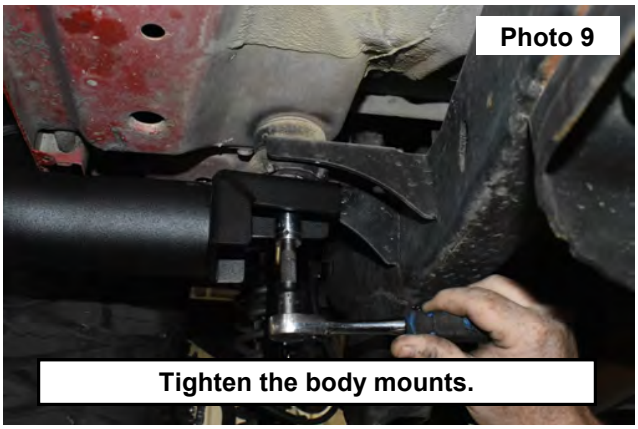

8. Tighten the front and rear body mount bolts using a 5/8 socket. **See Photo 9.**



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.