Rough Country 92001 Installation Instructions

10-Inch Black Series LED Light Bar Kit for Honda Pioneer 1000, Part 92001

Part number: 92001

trailfortress.com/rough-country-led-light-kit-92001

Scan for fitment, price and install help

921920000

Honda 2016-20 Pioneer Single / Dual 10” Slim Line Lights

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

KIT CONTENTS:

92001
Flush Mount Bracket x1
10” Single Row Light x1

92004
Flush Mount Bracket x1
10” Single Row Light x2

TOOLS NEEDED:
5mm allen wrench

HARDWARE INCLUDED:

92001
8mm-1.25 x 25mm Button Head Bolt x2
8mm-1.25 Body Clip x2

92004
8mm-1.25 x 25mm Button Head Bolt x2
8mm-1.25 Body Clip x2

92001



92004



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS

1. Install the (2) 8mm body clips onto the light bracket with the thread portion of the clip toward the rear of the bracket. **See Photos 1 and 2.**





2. Push the OE grillee back enough to install the light bracket behind the bumper. **See Photos 3 and 4.**

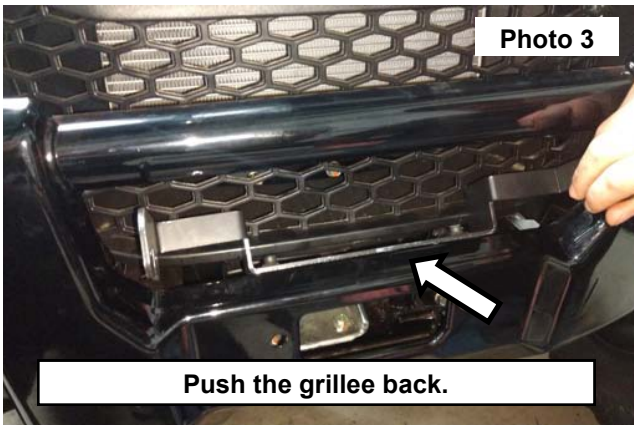

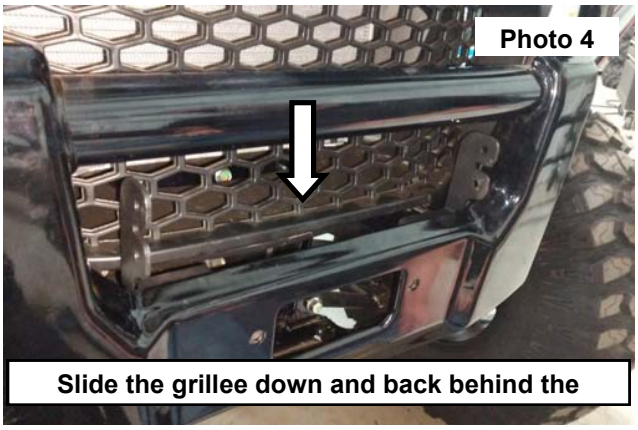

3. Lean the light bracket forward and install the single or the dual 10” slim line lights into the mount using the supplied hardware with the light. (Dual row light bracket shown in the photos.) **See Photos 5 and 6.**
4. Do not tighten the lights at this time. Snug the bolts in the lights so they can be adjusted at a later time.





5. Install the wiring harness supplied with the lights. Follow the instructions included with the corresponding kit.
6. Install 1 of the supplied 8mm bolts to secure the light bracket to the bumper using a 5mm allen wrench. **See Photo 7.**
7. Adjust the angle of the lights to the desired look. **See Photo 8.**





8. Carefully remove the installed bolt securing the bracket to the bumper and tighten the lights to the bracket using the supplied allen wrench in the light kit. **See Photo 9.** Retain hardware for reuse.
9. Install 2 of the 8mm bolts through the bumper into the bracket. Tighten using a 5mm allen wrench. **See Photo 10.**
10. Secure all of the wiring up into a safe location.





By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.