TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 92009 Installation Instructions

2-Inch Black Series LED Pod Kit for Honda Pioneer 1000 (2016-2025), Part 92009

Part number: 92009

trailfortress.com/rough-country-led-light-kit-92009

Scan for fitment, price and install help




# HONDA 2019 2” Cube Mount

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

**KIT CONTENTS:**
**2” Cube LED Light Kit x1**
**Light Mount Spacers x4**
**Driver Side Bracket x1**
**Pass Side Bracket x1**

**TOOLS NEEDED:**
**18mm Wrench and Socket**
**19mm Wrench and Socket**

**HARDWARE INCLUDED:**
**12mm-1.75 x 45mm Hex Head Bolts x4**
**12mm Flat Washer x4**
**12mm-1.75 Nylock Nuts x4**



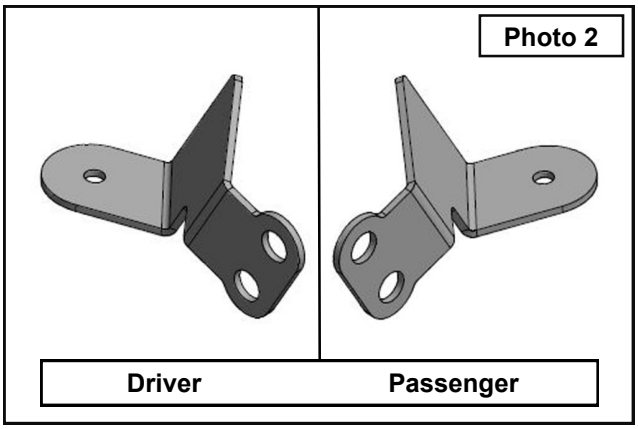

**Torque Specs:**

| Size | Grade 5 | Grade 8 | Size | Class 8.8 | Class 10.9 |
|---|---|---|---|---|---|
| 5/16” | 15 ft/lbs | 20ft/lbs | 6MM | 5ft/lbs | 9ft/lbs |
| 3/8” | 30 ft/lbs | 35ft/lbs | 8MM | 18ft/lbs | 23ft/lbs |
| 7/16” | 45 ft/lbs | 60ft/lbs | 10MM | 32ft/lbs | 45ft/lbs |
| 1/2” | 65 ft/lbs | 90ft/lbs | 12MM | 55ft/lbs | 75ft/lbs |
| 9/16” | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs | 120ft/lbs |
| 5/8” | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs |
| 3/4” | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs |

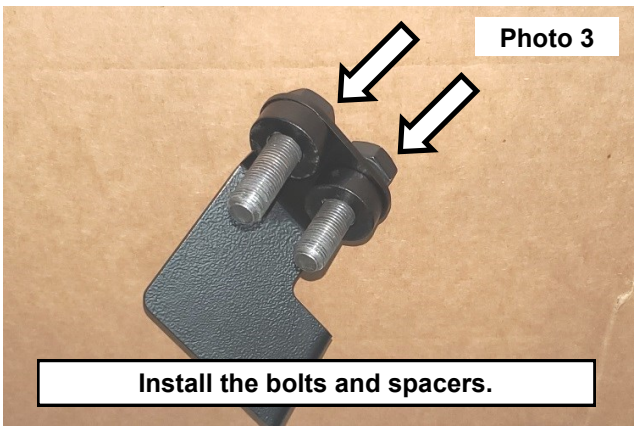
## INSTALLATION INSTRUCTONS

1. Locate the 2 bolts at the bottom of the cage and remove using a 19mm socket. **See Photo 1.**
2. Locate the  Driver and Passenger side brackets shown in **Photo 2.**



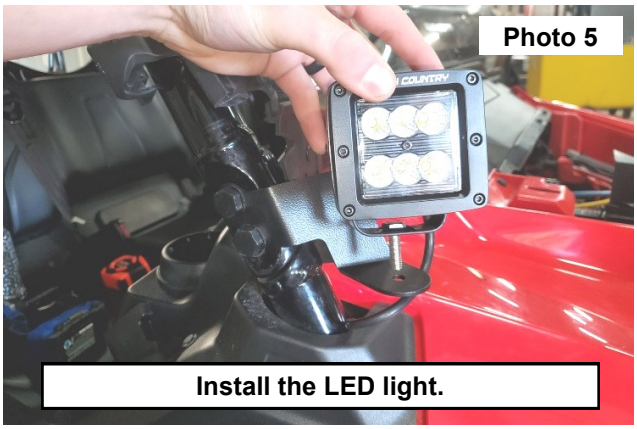

3. *Photos shown on passenger side.*
4. Install (2) 12mm-1.75 x 45mm hex head bolts into the Passenger side bracket. Then install (2) spacers onto the inside of the bracket. **See Photo 3.**
5. Install the light bracket, spacers and bolts onto the mounting holes in the cage. Secure using (2) flat washers and (2) 12mm-1.75 nylock nuts. Tighten using a 19mm wrench and socket. **See Photo 4.**







6. Repeat the installation of the light and mount on the opposite side.
7. Install the wiring harness supplied in the 2” inch cube light kit onto the UTV using the corresponding instruction sheet.
8. Install the 2” cube LED light onto the light mount using the supplied hardware in the mount kit. Connect the wiring harness to the light, set the light to the desired angle and tighten. **See Photos 5 and 6.**







By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item.  It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold.  The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.